INSTRUCTION ADDING INDIVIDUAL CONTENT



Ergoline

1. COPY THE DESIRED FILE(S) TO AN USB STICK.

Datei Bearbeiten Ansicht Extras ?						
Organisieren 👻 Freigeben für 👻 Brennen 🛛 Neuer Ordner						
★ Favoriten	^ Name	Änderungsdatum	Тур	Größe		
🧮 Desktop	📥 Agera 0-400-0.mp4	26.06.2018 10:12	MP4 Video File (V	11.455 KB		
🗽 Downloads	Mutorobot.gif	04.06.2019 15:25	GIF-Bild	742 KB		
🝊 OneDrive	📥 Chiron 0-400-0.mp4	26.06.2018 10:12	MP4 Video File (V	28.577 KB		
🕮 Zuletzt besucht	🕥 composition-8.jpg	26.06.2018 10:12	JPEG-Bild	122 KB		
	🔛 Lagavulin.jpg	26.06.2018 10:12	JPEG-Bild	4.658 KB		
Nesktop	🗉 🚾 Mechanic.gif	04.06.2019 15:29	GIF-Bild	1.976 KB		
🕞 Bibliotheken	Mewtons_Cradle.gif	11.06.2019 14:54	GIF-Bild	484 KB		
🔚 Bilder	🔀 PerpetuumMobile.gif	04.06.2019 15:25	GIF-Bild	269 KB		
Dokumente	🚾 Technical.gif	26.06.2018 10:12	GIF-Bild	1.660 KB		
🚽 Musik	🔛 the-persistence-of-memory.jpg	26.06.2018 10:12	JPEG-Bild	67 KB		
Subversion						
Videos						
🔒 admin						
🖳 Computer						
🏭 System (C:)						
BVD-RW-Laufwerk (D:)						
PUBLIC (\\JK-ENTW-01\SYS) (F:)						
😪 SCHROEDERT (\\JK\APP\HOME) (G:)						
P APP (\\JK-ENTW-01) (H:)						
KINGSTON30 (I:)						
👝 Wechseldatenträger (J:)						
SD_CARD (K:)						

Speicherka	apazitāt:	
14,4 GB		
Dateisyste	em:	
FAT32 (S	tandard)	
Größe der	Zuordnungseinheiten:	
Standard	größe	
Gerätest	andards wiederherstellen	
KINGSTO	N20	_
Formatio	erungsoptionen	
Schne	ellformatierung	
MS-D	OS-Startdiskette erstellen	
	Charlen	ßen

IMPORTANT: THE FILE(S) MUST BE STORED IN THE ROOT DIRECTORY OF THE USB STICK, NOT IN SUBFOLDERS.

- No further files should be stored on the USB stick
- Possible file formats: JPG, PNG and GIF (images) and MP4 (videos)
- Please note the 16:10 format so that pictures/videos are shown correctly in the display
- If necessary, the USB stick must be set to "FAT 32"

Ergoline

2. OPEN THE LOWER PART OF THE SOLARIUM.



PULL THE HANDLE OUTWARDS TO OPEN THE TUB!

Ergoline

2.1 THE ERROR MESSAGE "E036" CAN BE IGNORED.



Ergoline

3. OPEN THE PROFESSIONAL SETUP MANAGER BY PRESSING THE ERGOLINE ICON AND THEN START IT WITH THE CORRECT ACCESS CODE.



Ergoline

< Home	တြော် PROFESSIONAL SET-UP MANAGER	Ergoline
Display & operation		
Videos & images	Time	13:41 Clock >
Lighting	12h / 24h	24h >
Sound		
Air conditioning & ventilat	tion	22. July 2019 >
AQUA FRESH & AROMA	Summer/winter mode	Summer mode >
Operating hours	Button tones	3 >
Device information	Button tone volume	3
Network settings		
	Cleaning confirmation	
	Emergency shut-down time	44 Min. >

Ergoline

4. SELECT THE DIRECTORY "VIDEOS & PICTURES".

< Home	PROFESSIONAL SET-UP MANAGER			Ergoline
Display & operation				
Videos & images	Welcome Screen	C Loop	Sound	>
Lighting	Fan run-on screen		Sound	>
Sound				
Air conditioning & ventilati	ion			
AQUA FRESH & AROMA				
Operating hours				
Device information				
Network settings				

Ergoline

5. INSERT THE USB STICK INTO THE USB PORT, WHICH **NOT** MARKED RED.





Ergoline

6. THE FILE(S) ARE NOW AUTOMATICALLY TRANSFERRED TO THE DEVICE. REMOVE THE STICK, WHEN READY.



Ergoline

7. CLOSE THE DEVICE AND RESET THE ERROR MESSAGE IN THE **INTERNAL DISPLAY** WITH "RESET".



Ergoline

8. START THE PROFESSIONAL SET UP MANAGER BY PUSHING THE ERGOLINE SYMBOL AGAIN.



Ergoline

9. THE NEW FILES ARE DISPLAYED IN THE PROFESSIONAL SET-UP MANAGER UNDER "VIDEOS & PICTURES" - "MY PICTURE/VIDEO" (WELCOME SCEEN AND FAN AFTERRUN SCREEN). SELECT THE DESIRED FILE IN THE WELCOME SCEEN OR FAN SCREEN AND EXIT THE PROFESSIONAL SET-UP MANAGER WITH "BACK" AND "HOME".



Ergoline

THE NEW IMAGE/VIDEO IS AUTOMATICALLY DISPLAYED IN THE WELCOME SCREEN AFTER A FEW SECONDS. THE PICTURE/VIDEO CHANGES REGULARLY WITH THE STANDARD DISPLAY.



Ergoline