



# User manual

## Setup Manager EASY CONTROL

1032088-00 / us-en / 08.2024

## Contact information



Customer Service JK Products & Services  
  
411 West Washington Avenue  
Suite B  
Jonesboro, Arkansas 72401  
800-445-0624  
870-935-9046  
  
<http://jkproducts.us/service>

Manufacturer JK-Products GmbH  
  
Rottbitzer Str. 69  
53604 Bad Honnef  
GERMANY  
Tel.: +49 (0) 22 24 / 818-140  
Fax: +49 (0) 22 24 / 818-166

### WARNING!



Read these operating instructions.

Failure to observe these instructions:

- may result in serious injury and death,
- can result in damage to the device and the environment.
- For the safety of yourself and others, read and observe all instructions contained herein before operating the device.
- Please make the instructions and additional information available to anyone who operates or services the device.
- Should you sell this unit or give it to another party, please make sure that you provide them with these operating instructions.

### Copyright

The copyright remains with JK-Holding GmbH.

The contents may not be duplicated (in whole or part), distributed or utilized for competition purposes without authorization or disclosed to other parties.

The right to make technical changes in regard to the figures and information contained in this instruction manual is reserved!



### NOTE:

Our products are continually improved to adapt them to your requirements. Please visit our website to download the latest version of the user manual:  
[www.jk-globalservice.de](http://www.jk-globalservice.de)

# Table of Contents

1	Operation.....	4
1.1	User safety information.....	4
1.2	Overview of EASY CONTROL .....	4
1.2.1	Navigation .....	5
2	Setup Manager .....	6
2.1	General notes.....	6
2.1.1	Open the SETUP MANAGER (pre-setting mode).....	6
2.1.2	Master code .....	7
2.1.3	View and change the pre-settings .....	8
2.1.4	Pre-settings overview .....	9
3	Index.....	14



# 1 Operation



## 1.1 User safety information

**DANGER!**



 
UV radiation  
Danger of skin and eye injuries or skin diseases!  
– Observe the safety instructions and warnings in chapter 1.

**WARNING!**



Danger of hearing damage!  
Using earphones or headphones at high volume can result in permanent hearing damage.  
– Do not set the volume too high.

 
## 1.2 Overview of EASY CONTROL

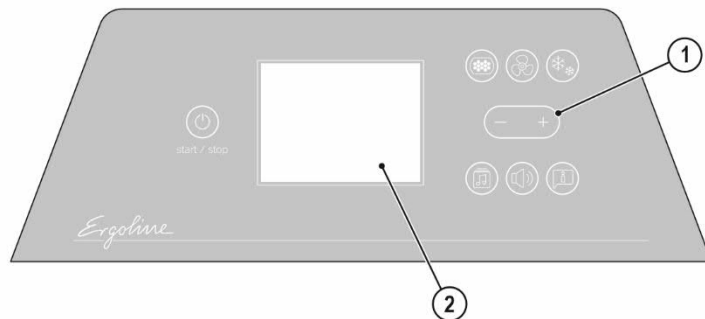

21425 / 0

1. Navigation unit
2. Display

 
## 1.2.1 Navigation

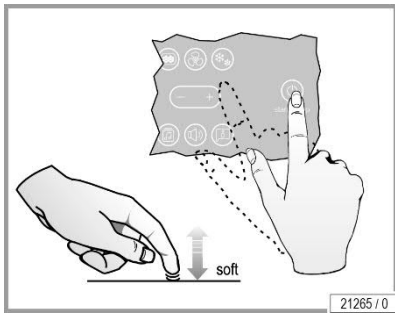

Start / Stop



Change the parameters of the device function.

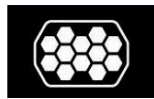

Acknowledge selection.



## 2 Setup Manager



In SETUP MANAGER, operating states can be called up and pre-settings entered.

### 2.1 General notes




NOTE:

Pre-setting mode can only be called up when tanning is not taking place.

 
30 seconds after the last button was pressed, the device changes automatically into standby mode.

#### 2.1.1 Open the SETUP MANAGER (pre-setting mode)

- To open the SETUP MANAGER press the  button for approx. 3 seconds.

In the delivery state, you can access the pre-settings using the master code.

- Enter the master code (default setting 1000).

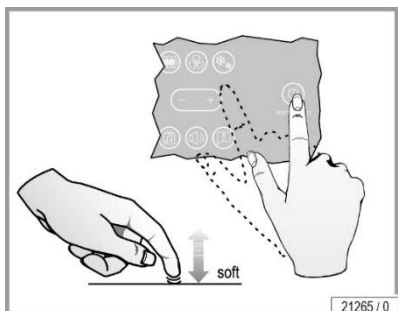

Start / Stop



Change the parameters of the device function.



Acknowledge selection.

## 2.1.2 Master code

The master code allows you to access all of the pre-settings.

If you know the current master code, you can specify a new code at any time.

If you have forgotten the code, please contact customer service.



Code upon delivery (factory default)





Master code: 1000



### NOTE:

We recommend that you set a new master code when starting up the device for the first time in order to prevent unauthorized access to the pre-setting mode. Please make a note of the code for customer service.



Changing the code



- Press the button  for 3 seconds.
- Enter the current master code.
- Press the button  until  appears.
- Press the button  to select the master code.


Display:


Change the master code



Use the  /  buttons to select the digits.

Change the current digits using  or .

Once you have set up the required code, press the  button to save it.

- Press and hold the  button for approx. 3 seconds to exit the 'Master code' window.





### NOTE:


Example '1000': Press  3 times and  once.


Example '0001': Press  0 times and  once.

If the master code is entered correctly, the system will switch straight to the SETUP MANAGER menu.

 










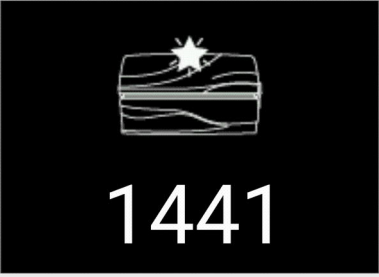

### 2.1.3 View and change the pre-settings

Use the  /  buttons to access the previous or next function. When selecting multiple digits, the system switches between the digits.

 

In all cases, the selection must be confirmed with .

Use  to reset the individual operating hours (press for approx. 3 seconds until you hear the confirmation signal).






Display:	Action:
	<p>Change the values:</p> <ul style="list-style-type: none"> <li>- Use  to select the change function.</li> <li>- Change the current value using  or .</li> <li>- For multiple digits, switch between positions with .</li> <li>- Use  to save the function change.</li> </ul>
	<p>Change the selection:</p> <ul style="list-style-type: none"> <li>- Use  to select the change function.</li> <li>- Change the current status using  or . <ul style="list-style-type: none"> <li>➤ Function active: </li> <li>➤ Function not active: </li> </ul> </li> <li>- Use  to save the function change.</li> </ul>
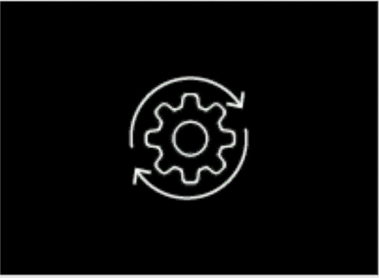
#### Resetting to the delivery setting

 
 
Display:	Action:
	<p>All pre-settings are reset to their default settings:</p> <ul style="list-style-type: none"> <li>- Press the  button until you hear the confirmation signal (approx. 3 seconds).</li> </ul>




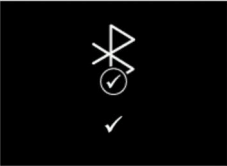 





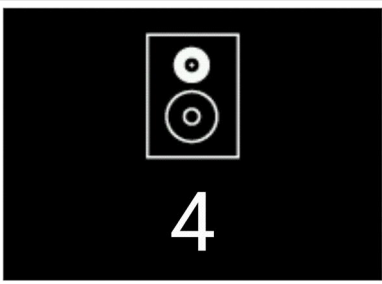 

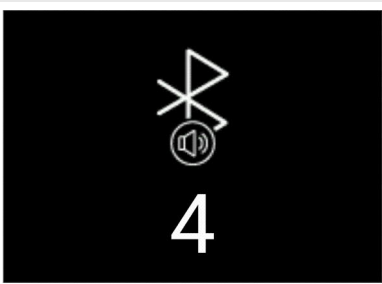 
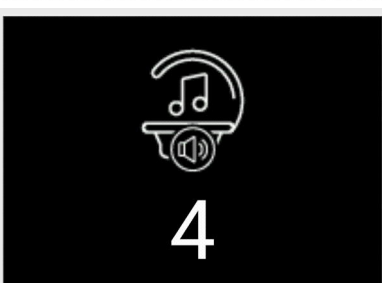 
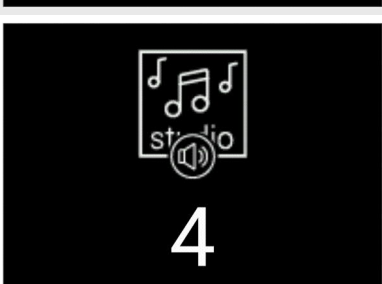 
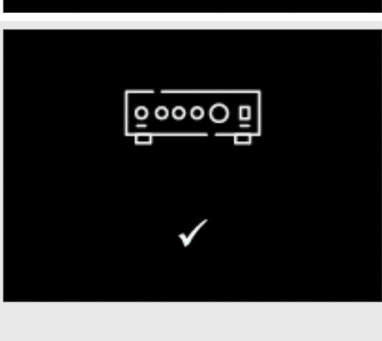 

## 2.1.4 Pre-settings overview

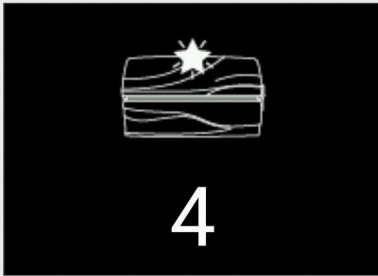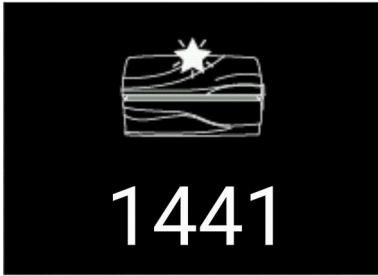Default setting	Description
DISPLAY & OPERATION	
	Settings for the user: Cleaning confirmation, emergency shut-down time, selection of the functions displayed on the user menu.
	<p>Activate or deactivate the cleaning confirmation.</p> <ul style="list-style-type: none"> <li>➤ Function active: <input checked="" type="checkbox"/></li> <li>➤ Function not active: <input type="checkbox"/></li> </ul>
	<p>Emergency shut-down time in minutes, max. 33 min. Change the emergency shut-down time: (Time: 5–33 minutes)</p> <p><b>i</b> NOTE: If the user attempts to set the value higher than 33 minutes, the max. emergency shut-down time of 33 minutes will be used. Once you have set up the required emergency shut-down time, press the  button to save it.</p>


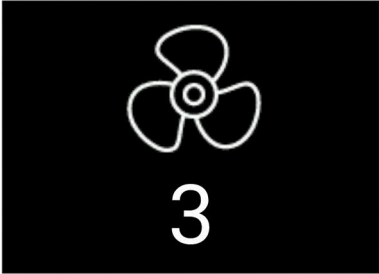 


 







Default setting	Description
LIGHTING	
	Settings for the user: Program, color selection, brightness, selection of the functions displayed in the user menu
	<p>Selection of a pre-defined color program: Color programs 1–8</p>
	<p>Change the accent lighting runtime (min.): Permanent or time in minutes (0–1441 minutes, 0 = off)</p> <p><b>i</b> NOTE: The lighting is switched on permanently when 1441 minutes is selected.</p>

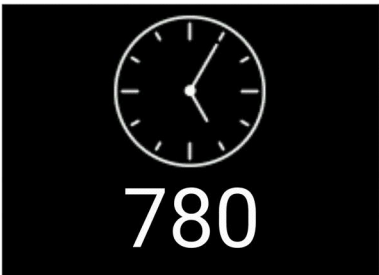 


Default setting	Description
SOUND	
	<p>Activate or deactivate the voice guide:</p> <ul style="list-style-type: none"> <li>➤ Function active: <input checked="" type="checkbox"/></li> <li>➤ Function not active: <input type="checkbox"/></li> </ul>
	<p>Selection of the audio sources; internal music (SD card), studio channels and Bluetooth®</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <ul style="list-style-type: none"> <li>➤ Function active: <input checked="" type="checkbox"/></li> <li>➤ Function not active: <input type="checkbox"/></li> </ul>
	<p>Audio system volume in standby mode. (Levels 0–8, level 0 = music off)</p>
	<p>Setting during a tanning session. (Levels 0–8, level 0 = music off)</p>
	<p>Bass setting (Levels 1–8)</p>

Default setting	Description
SOUND	
	Treble setting (Levels 1–8)
	Change the Bluetooth® device name. The following options are available: Ergoline, Spirit, Pulse Ergoline 1, Spirit 1, Pulse 1 Ergoline 2, Spirit 2, Pulse 2 Ergoline 3, Spirit 3, Pulse 3
	Maximum volume setting for Bluetooth® (Levels 0–8, level 0 = music off)
	Maximum volume setting for internal music (Levels 0–8, level 0 = music off)
	Maximum volume setting for studio channel (Levels 0–8, level 0 = music off)
	Activate or deactivate the pre-amplifier for the studio channel. <ul style="list-style-type: none"> <li>➤ Function active: <input checked="" type="checkbox"/></li> <li>➤ Function not active: <input type="checkbox"/></li> </ul> <div style="margin-top: 10px;">  NOTE:            This function must be activated when using a pre-amplifier for the studio channel.         </div>

 


Default setting	Description
AIR CONDITIONING / VENTILATION	
 	Unit fan run-on time (1–9 minutes)

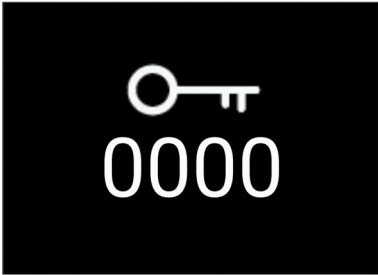Default setting	Description
OPERATING HOURS	
	Total unit operating hours. Resetting the total operating hours: Press the  button until you hear the confirmation signal (approx. 3 seconds)
	Low-pressure lamp operating hours. Resetting the low-pressure lamps: Press the  button until you hear the confirmation signal (approx. 3 seconds).
	Remaining operating hours for the filters in the canopy and base. Resetting the remaining filter operating hours: Press the  button until you hear the confirmation signal (approx. 3 seconds).
	Operating hours of the air conditioning and the filter in the air conditioning. Resetting the remaining filter operating hours: Press the  button until you hear the confirmation signal (approx. 3 seconds).

Default setting	Description
UNIT INFORMATION	
	Information about the master code for customer service.
	Information about the error code for customer service.  NOTE: The most recent error code is found at the top of the image.

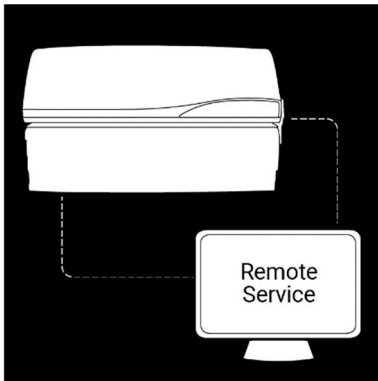

Default setting	Description
NETWORK SETTINGS	
	Activate or deactivate REMOTE SERVICE <ul style="list-style-type: none"> <li>➤ Function active: <input checked="" type="checkbox"/></li> <li>➤ Function not active: <input type="checkbox"/></li> </ul>

### 3 Index



<b>C</b>	
Customer Service .....	2
<b>E</b>	
Easy Control .....	4
<b>M</b>	
Master code .....	6, 7
<b>P</b>	
Pre-settings .....	8
Overview .....	9
<b>S</b>	
SETUP MANAGER .....	6