


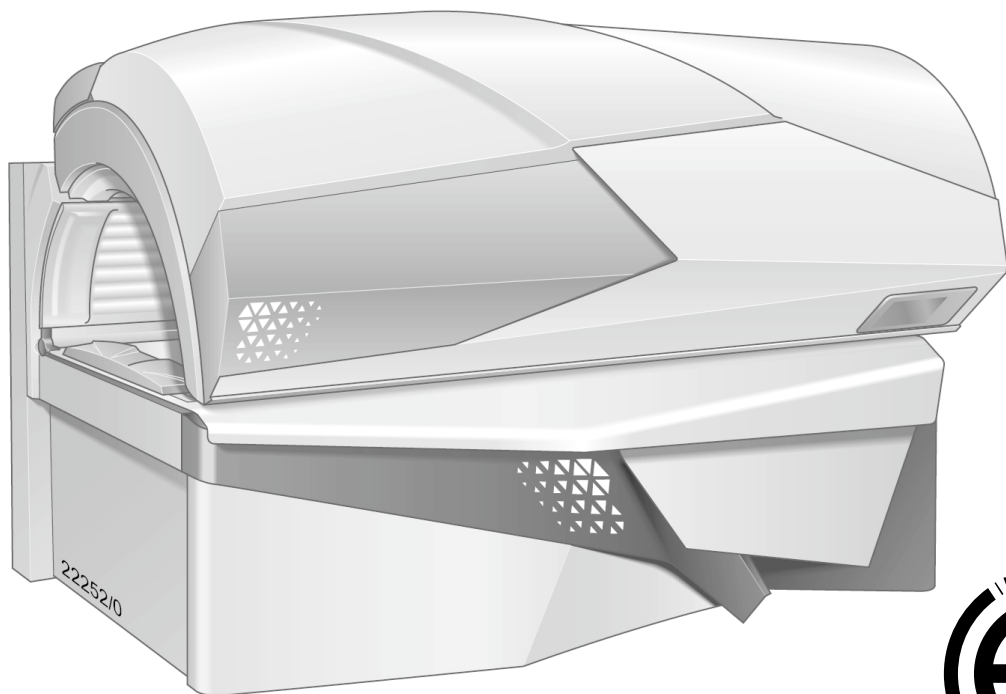

Operating instructions

Model-No.: JK 205 / 52-4 HLT AC


1034099-00A / us-en / 01.2026

JK



Contact information

Customer Service JK Products & Services
 1823 Grant Avenue
 Suite A
 Jonesboro, Arkansas 72401
 800-445-0624
 870-935-9046
<http://jkproducts.us/service>



Manufacturer JK-Products GmbH
 Rottbitzer Str. 69
 53604 Bad Honnef
 GERMANY
 Tel.: +49 (0) 22 24 / 818-0



WARNING!



Read these operating instructions.

Failure to observe these instructions:

- may result in serious injury and death,
- can result in damage to the device and the environment.
- For the safety of yourself and others, read and observe all instructions contained herein before operating the device.
- Please make the instructions and additional information available to anyone who operates or services the device.
- Should you sell this unit or give it to another party, please make sure that you provide them with these operating instructions.

Copyright

The copyright remains with JK-Holding GmbH.

The contents may not be duplicated (in whole or part), distributed or utilized for competition purposes without authorization or disclosed to other parties.

The right to make technical changes in regard to the figures and information contained in this instruction manual is reserved!

1 Table of Contents



2	What certain words and signs mean (Glossary).....	7
2.1	Definitions	7
2.2	Warning signs	8
2.3	Symbols on the device	10
3	What this device is.....	12
3.1	Guidelines.....	12
3.2	Export	12
3.3	Scope of delivery	12
3.3.1	Options	12
3.4	Device description	13
3.5	Options	15
3.6	Function description.....	16
3.7	Transport.....	16
3.8	Installation location.....	17
3.8.1	Ventilation	17
3.8.2	Setup location.....	17
3.8.3	Commissioning.....	20
3.9	Signs and stickers on the device	21
3.10	Technical data	29
3.10.1	Power rating, electrical specifications and noise level	29
3.10.2	Dimensions	30
3.10.3	Lamp configuration	31
3.10.4	Accent lighting	31
3.10.5	Spare parts.....	32
4	Why you use it	33
4.1	Intended use	33
4.2	Skin condition	33
5	Who cannot use it	34
5.1	Prohibited usage.....	34
5.1.1	Tanning system	34
5.1.2	Vibra Shape (vibration plate)	34
6	What you must do to avoid serious harm	35
6.1	General	35
6.2	Tanning system	36
6.3	Sensor	37



7	What you must do to avoid other harm.....	38
7.1	General.....	38
7.2	Tanning system	38
7.3	Sensor	38
7.4	Vibra Shape (vibration plate)	38
7.5	Foreseeable misuse	39
7.6	Obligations of the studio operator	39
7.7	Staff training	39
8	Risks of using this device	40
9	Benefits of using this device.....	41
10	How to decide to use this device.....	42
11	What to do before the treatment	43
12	How to use this device.....	44
12.1	How to set this device up.....	44
12.2	How to make sure the device works	44
12.3	How to use it to treat your condition.....	44
12.4	How to choose correct treatment regimen.....	45
12.4.1	Skin types.....	45
12.4.2	Tanning times.....	45
12.5	How to operate the device.....	46
12.5.1	Professional Setup Manager	47
12.5.2	User settings overview	47
12.6	Functions	48
12.6.1	Navigation.....	51
12.6.2	Description.....	52
12.7	Selection of the application	60
12.8	Operating display of the sensor.....	60
12.9	Sun Select setting with the outer interface.....	60
12.10	Measurement (automatic mode)	60
12.11	Connections.....	61
12.11.1	Couple with Bluetooth® devices	61
12.11.2	Smartphone	64
12.11.3	Smartphone Wireless Charging (Option)	64
12.12	How to use.....	65
12.12.1	How to start	65
12.12.2	Application tips.....	65
12.12.3	How to stop	65
12.13	What to do after the treatment	66
12.13.1	Cleaning and disinfection	66
12.14	Safety instructions for cleaning/ disinfection and maintenance	67

12.15	How to clean/disinfect	70
12.15.1	Cleaning and disinfection of surfaces.....	71
12.15.2	Cleaning/disinfection plan	73
12.16	How to maintain.....	74
12.16.1	Technical modifications.....	74
12.16.2	Maintenance plan	74
12.16.3	Cleaning and maintenance work preparation.....	76
12.16.4	Instructions for replacing the lamps	81
12.16.5	Cleaning and disinfection of the sensor.....	84
12.16.6	Cleaning or replacing lamps in the base	85
12.16.7	Cleaning or replacing the lamps in the side section.....	85
12.16.8	Cleaning or replacing lamps in the canopy	86
12.16.9	Cleaning the filters in the base	87
12.16.10	Cleaning or replacing the interior lights	88
12.16.11	Cleaning or replacing the canopy accent lighting.....	88
12.16.12	Cleaning or replacing the front panel accent lighting.....	88
12.16.13	Cleaning the filters in the base	89
12.16.14	Cleaning the canopy filter mats	90
12.16.15	Cleaning the filter mats in shoulder tanner	90
12.16.16	Air conditioning: Emptying the condensation tank and cleaning the filter	91
12.16.17	AQUA / AROMA SYSTEM maintenance	95
12.16.18	Cleaning the air intake openings	97
12.17	How to store the device	98
12.17.1	Decommissioning.....	98
12.17.2	Storage	98
12.17.3	Disposal.....	99
13	What to do when things go wrong	100
13.1	Troubleshooting.....	102
14	Where you can find out more	103
15	How we studied this device.....	104
16	Appendix	105
16.1	Model-No.: JK 205 / 52-4 HLT AC: EMC information	105
16.1.1	Table 201: Guidelines and manufacturer's declaration – Electromagnetic emissions	105
16.1.2	Table 202: Guidelines and manufacturer's declaration – Electromagnetic interference	106
16.1.3	Table 204: Guidelines and manufacturer's declaration – Electromagnetic interference	107
16.1.4	Table 206: Recommended safe distances between portable and mobile HF communications equipment and Model-No.: JK 205 / 52-4 HLT AC	108





17 JK-Products, Inc. – Limited Warranty109

17.1 Limited Acrylic Warranty 110

17.2 Warranty Claims111

17.2.1 Policy & Procedures 111

17.2.2 Labor Warranty Claim/ Credit Procedures.....112

17.2.3 Quality inspection and acceptance form 112

17.3 Limited Lifetime Warranty.....113

18 Index114

2 What certain words and signs mean (Glossary)



2.1 Definitions

Contraindications

Issues where the risk is always greater than the benefit and there are data supporting the risk and benefit relationship.

Studio operator

People who provide tanning devices to users on a commercial basis. The studio operator is trained to operate and maintain the device and is responsible for the orderly operation of the device as well as compliance with the maintenance intervals.

User

A person who uses the tanning device at a commercial location.

Staff

People who are responsible for the operation, cleaning/disinfection as well as general maintenance work and who instruct the users in the operation of the devices.

JK Factory Certified Technician

Level 1

Authorized to perform general maintenance such as replacing lamps, aqua mist, and fragrance containers as well as overall cleaning of the unit.

Level 2

Authorized to perform maintenance and repairs such as replacement of ballast, framed acrylic, electronic circuit boards, and other electrical components.

Level 3

Authorized and trained to utilize JK Products proprietary diagnostic software to adjust operating parameters and perform detailed diagnostics.

Level 4

This individual is uniquely qualified to assess the condition of a unit and make a determination if the device meets the requirements for continued use ten (10) years from the date of manufacture.



NOTE:

Each technician level is authorized to perform the tasks of technician levels smaller in number to theirs. E.g. a level 3 technician is authorized to perform the tasks assigned to a level 1 and 2 technician.



2.2 Warning signs

Danger notices, nonobservance will lead to death or serious injury:



Type and source of danger, e.g. 'DANGER – High voltage!'

Description of the consequences, e.g. 'You can be killed or injured by an electric shock!'

Countermeasures:

- Disconnect device from power supply before opening.
- Do not reach into the inside with the device switched on.

Warning notices, nonobservance can lead to death or serious injury.



Type and source of danger, e.g. 'WARNING – hot surface!'

Description of the consequences, e.g. 'You can burn your hand (skin, face)!'

Countermeasures:

- Do not touch hot parts and nearby surfaces.
- Wait until hot parts and surfaces have cooled down.

Warning notices, ultraviolet radiation, nonobservance can lead to serious injury:



Type and source of danger, e.g. 'WARNING – ultraviolet radiation!'

Description of the consequences, e.g. 'You can burn your skin!'

Countermeasures, e.g.:

- Avoid overexposure.



Crushing hazard, e.g. when closing the bed base!

Fingers can be jammed.

- Do not hold fingers between bed base and front panel.

Caution notices, nonobservance can lead to less than serious injury or damage of property.

 CAUTION!



Unauthorized lamps!

The word 'Caution' together with the warning sign points out that less than serious injury can be expected here.

Countermeasures:

- Avoid doing this.



NOTICE



ESD-sensitive components!

The word 'NOTICE' without warning sign points out that danger for devices, materials and the environment can be expected here.

Countermeasures:

- Avoid doing this.

 CAUTION!



Type and source of hazard

This safety notice warns of flammable substances.

Important information:



NOTE:

This symbol does not identify safety notices, but states information for a better understanding of the processes.



2.3 Symbols on the device

The following symbols are displayed on the device or on the packaging:



Manufacturer, company address



Type BF applied part¹

Qty:

Quantity

REF

Article Number/Reference Number

SN

Serial Number

+ UDI

Unique Device Identification

HIBC

Healthcare Barcode



Read the operating instructions!




Therefore you must never fill the AQUA SYSTEM canister with tap water or other liquids.



Do not add any liquid that remains in the old canister to the new AQUA SYSTEM canister!



Note the expiration date on the AQUA SYSTEM canister.

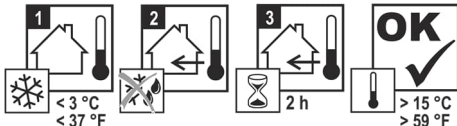

Where there are great differences in temperature between the transport route and the installation site the device may not be put into operation immediately after being set up.

Wait at least 2 hours before connecting the device to the power supply.



Maximum transport weight

¹ Devices with physical contact between device and user belong to category BF (body float).



Do not stack!



This side up.



Keep dry.



Temperature limitations.

The temperature limits are noted next to the upper and lower horizontal line.



Recyclable material.



Production year, month and day



Polystyrene



Cardboard



Mixed paper



Steel



Wood



Permitted air pressure during transport and storage.



Flammable refrigerant in the air conditioner.



Ultraviolet radiation





3 What this device is

3.1 Guidelines

This product is in conformity with the performance standards for sun-lamp products under 21 CFR 1040.20, FDA and listed with ETL to UL STD 482.

3.2 Export

This device is exclusively intended for use in the USA and may not be exported to other countries and operated there! The manufacturer assumes no liability whatsoever in the event of non-compliance. High liability risks may occur for the exporter and/or the studio operator in the event of noncompliance.


3.3 Scope of delivery

- Tanning device
- Lamps
- LED SHOULDER TAN with sound system and wireless charging station
- Enclosed tanning tunnel
- Service kit: contains Allen key and suction cup
- Air conditioning system
- Protective goggles
- Technical documentation (folder with instructions, brochures for error codes and Professional Setup Manager and additional documentation)


3.3.1 Options

- Central exhaust air socket
- REMOTE SERVICE

3.4 Device description

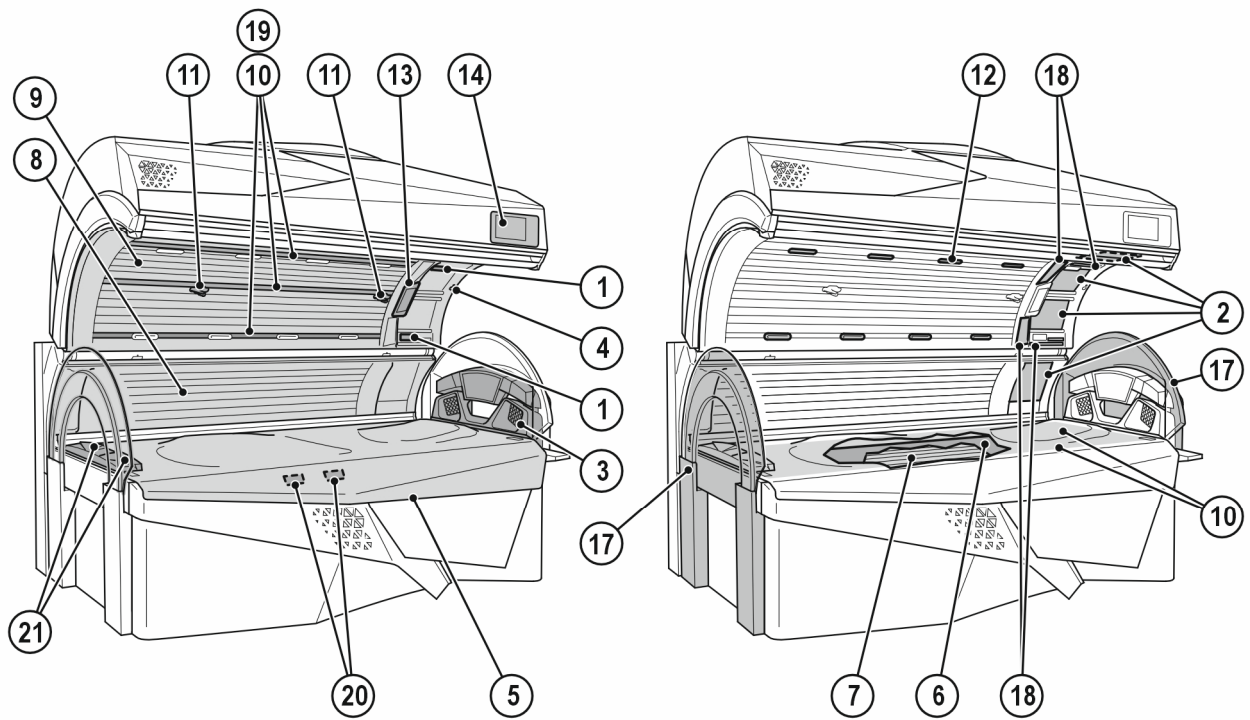

22255 / 0

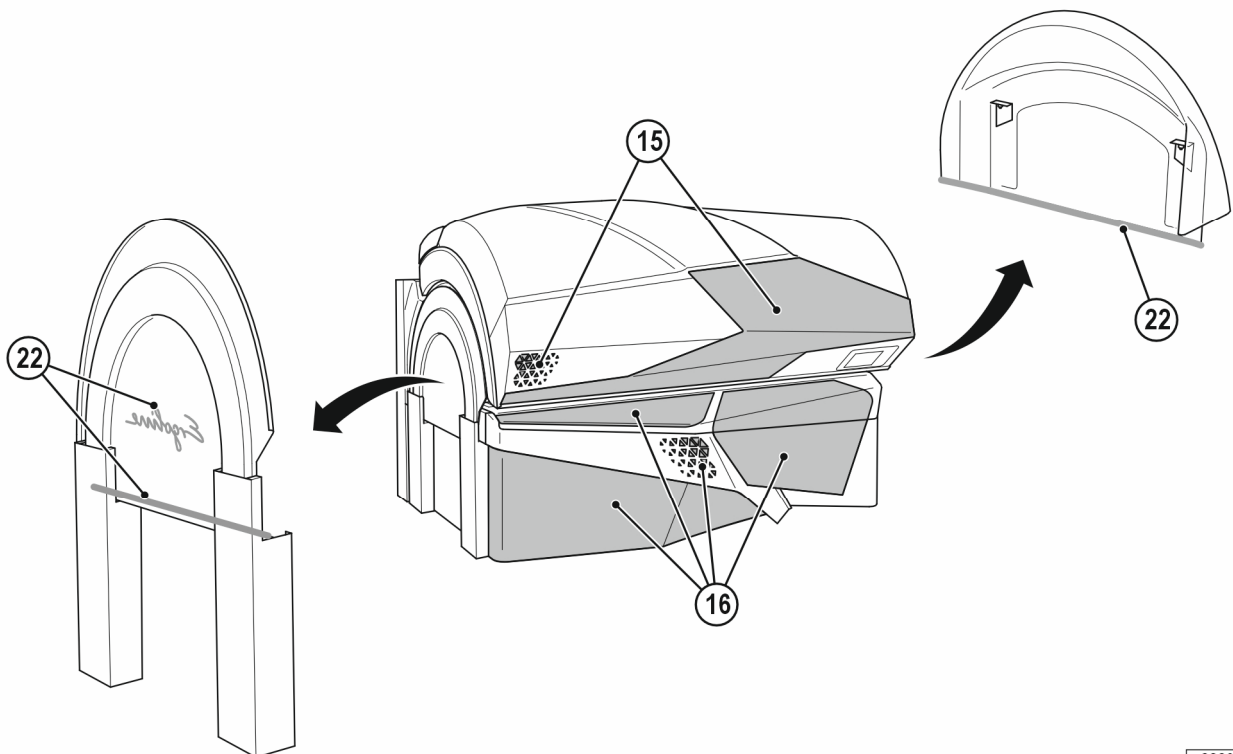


22291 / 0



1. Adjustable air nozzles – Facial cooling
2. Facial tanner SPECTRA Fusion Edge LED's
3. LED SHOULDER TAN with sound system, including Bluetooth® and wireless charging station for smartphones
4. EMERGENCY OFF button
5. Acrylic panel base
6. Partition
7. Low-pressure lamps, base
8. Low-pressure lamps, side section
9. Low-pressure lamps, canopy
10. Interior lighting (LED)
11. Nozzles AQUA / AROMA SYSTEM
12. Body cooling air nozzles
13. INTERIOR DISPLAY (TOUCH)
14. EXTERIOR DISPLAY (TOUCH) & NFC CONNECT
15. Accent lighting, canopy (LED)
16. Accent lighting, front panel (LED)
17. Enclosed tanning tunnel
18. FUSION LIGHT (Red & Blue) Face + Décolleté
19. FUSION LIGHT (Red & Blue) Body
20. Service Light (only with opened bed base)
21. Body cooling air nozzles, foot end
22. Accent lighting tanning tunnel (LED)

3.5 Options

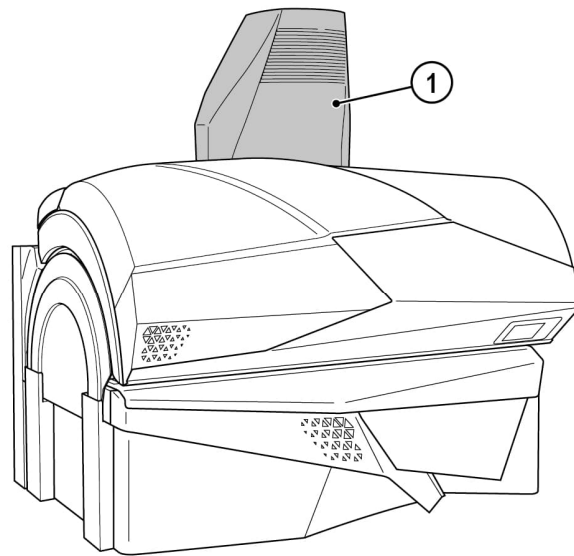

22256 / 0

1. Central exhaust air socket

Exhaust air (Option)

As an optional comfort feature, your device can be equipped with an exhaust duct which allows the warm air from the device to be ducted outside of the room or building. Doing so can be an effective way in some climates to reduce the energy costs associated with Air conditioning while at the same time increasing not only user comfort, but the environmental comfort of the entire studio as well.

Things to consider before purchasing the exhaust option are:

1. Climate; extremely hot climates are typically not a good choice for exhausting air outside due to the need to cool down the hot air coming in to replace the air being exhausted, however mild to cooler climates can benefit from exhausting the warm air from the device thereby allowing cooler air to enter from outside the building.
2. Device location; in some installations, walls or other obstruction may prevent the use of an exhaust duct.



NOTE:

- Always consult a licensed heating, ventilation, and air conditioning (HVAC) Technician when considering the option to exhaust the warm air from your device. They can help you decide if an exhaust is best for your specific location.
- The exhaust is a comfort option and does not increase or decrease the safety and effectiveness of the device. The exhaust duct is not required to keep the device in a certain temperature range in order to operate safe and effectively.



3.6 Function description

Tanning system

The primary technical components of a tanning device are an artificial source of UV radiation, a variety of filters and reflectors as well as a mechanical structure with a defined active surface.

Different tanning results can be achieved in varying strength tanning devices. This is due to the different strength UV lamps and the different UV-A and UV-B proportions of the UV radiation. The UV-A proportion primarily generates a superficial tan, which appears rapidly and is intensive but also fades more rapidly, the UV-B radiation is primarily responsible for more long-term tanning results.

The Prestige Fusion Edge enhances the UV spectrum with red light (Beauty Light) and blue light (Activating Light).


NFC CONNECT¹

Near field communication (NFC) is a communication standard between smartphones and similar devices that allows contactless data exchange. Communication is also possible between an NFC device and an unpowered NFC chip.

The NFC point of this tanning device for example may be used to store basic settings on a chip card. These settings can be read for the next session and may be changed if necessary.

3.7 Transport

Tanning system

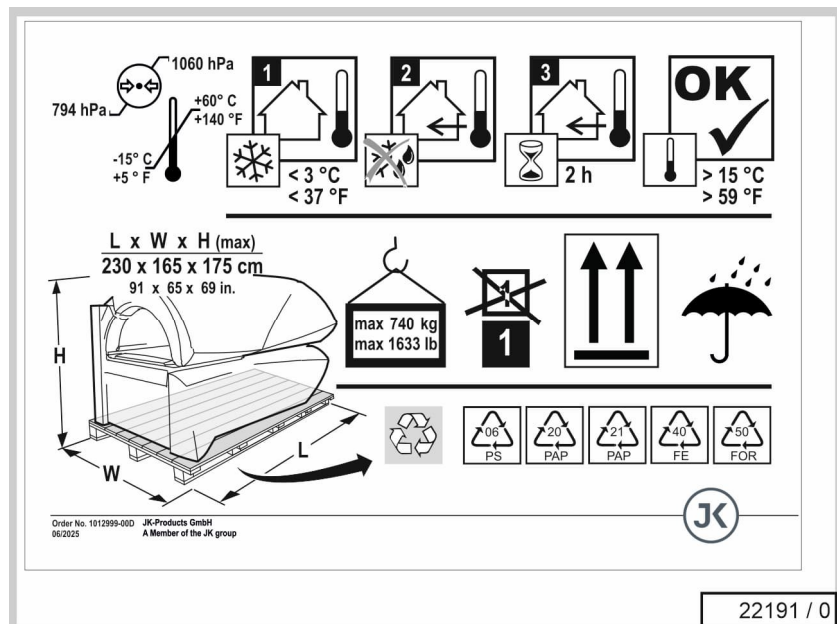

¹ Communication system: NFC (Near Field Communication); ISO/IEC 14443A/MIFARE; max. operating range: approx. 50 mm, frequency range: 13.56 MHz

3.8 Installation location



This sunlamp product is suitable for tanning salons, fitness studios or similar installation locations.

You may find detailed information on installation and setting up in the Installation Instructions (see folder Technical Documentation).

3.8.1 Ventilation

NOTICE

Danger of failure!

Danger of overheating by obstruction of the air routing.

- Observe the ventilation information to avoid serious system malfunctions.

You can obtain data regarding the air supply and ventilation from the customer service department (see page 2).

3.8.2 Setup location

WARNING!



WARNING!

Sudden movements and malfunctions!

Crushing hazard.

- The device is not suitable for operation in mobile facilities (ships, buses, trains).



CAUTION!



Danger of overheating by obstruction of the air routing!

Any liability is excluded in case of damage or injury proven to be the result of the use of non-genuine spare parts.

Use of non-compliant lamps voids warranty and risks injury!

- Do not change, obstruct or block the air inflow and outflow area to the device or make any unauthorized changes to the device. The manufacturer shall bear no liability for damage or injuries resulting from such actions.
- Observe the ventilation information to avoid serious system malfunctions.
- Before putting a device into operation, the transport pallet must be removed from under the device. Danger of overheating by obstruction of the air routing.
- Maintain the minimum distances from the walls! Dimensions are given on page 30.
- Only use OEM spare parts of the same type! The use of other parts will void the manufacturer's warranty!

NOTICE

Salty air! Contaminated air!

Device damage due to corrosion of the housing and electrical components.

- Do not install the device near swimming pools.
- Do not operate the device in locations with aggressive environmental conditions (e.g. air containing chlorine).



Damage to the device possible!

Where there are great differences in temperature between the transport route and the installation site the device may not be put into operation immediately after being set up.

- Wait at least 2 hours before connecting the device to the power supply.

Damage to the device possible!

The device is not to be used outdoors.

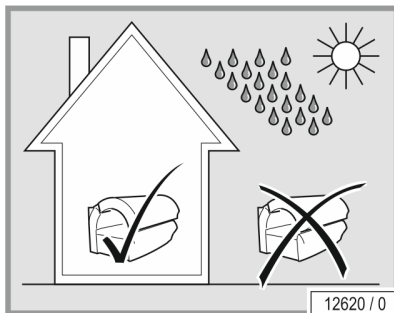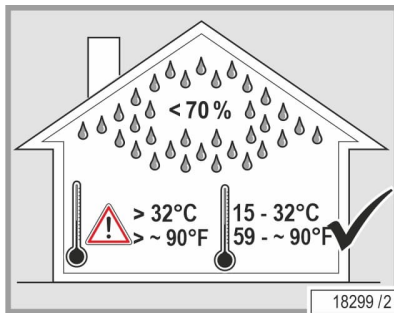

Environmental conditions

Possible damage to the unit!

The unit is not to be used outdoors.

Keep the unit away from open flames or sources of ignition.

- Optimum ambient temperature: between 59 °F (15 °C) and ~ 90°F (~ 32°C)
- Storage temperature: between 5 °F (-15 °C) and 140 °F (+60 °C)
- Air pressure: between 794 hPa and 1060 hPa
- Relative humidity: between 30 % and 70 %

Adaptation of the unit is required for operating altitudes greater than 6500 ft / 2000 m above sea level in order to guarantee trouble-free operation.

Please contact the customer service department before putting the device into operation - see page 2.

Strong Radio Frequency (RF) emitters!

Please do not install or operate the device in close proximity to strong Radio Frequency (RF) emitters such as metal detectors or electromagnetic anti-theft systems. Please inform the installation personnel of any existing RF emitting systems prior to installation.



NOTE:

Sources of RF emissions are not always obvious, therefore special care should be taken to ensure all sources have been properly identified before installation of the device.



3.8.3 Commissioning



Damaged mains power cable!

Danger to persons through electric shock or burns.

- Only the manufacturer or specialist companies are permitted to replace the mains power cable.

Initial commissioning will be undertaken by the manufacturer's own service personnel or by a (Level 3) JK Factory Certified Technician. The device will be handed over ready for use.

As the studio operator you are responsible for abiding by the electrical regulations applicable at the installation site.

The unit incorporates special preventive measures with regard to the electromagnetic compatibility and must be installed and commissioned according to the EMC instructions obtained chapter 16 Appendix.

If the device has not been operated or serviced for a period of one year or longer, it must first be inspected by a (Level 3) JK Factory Certified Technician before being put back into operation. Failure to do so may result in personal injury or property damage.

If faults occur due to the operation of the devices, then the operator is responsible for the installation of an audio frequency blocking device in the building electrical installation. Please contact your electrician. The electrician is familiar with the technical connection conditions of your local utility company so that the audio-frequency blocking device can be matched to the power system of your power supply company.

The unit can be operated temporarily or continuously with a stand-alone or non-mains-synchronous power supply (e.g. microgrid or back-up system). However, you must contact the customer service department before putting the unit into operation in this way – see page 2.





NOTE:

In case of a fire suspicion, immediately interrupt the power supply, if it is safely possible.

Please respect the statutory, official and workmen's compensation insurance regulations which remain unaffected by the foregoing.


3.9 Signs and stickers on the device

Signs which warn of danger areas or give important information on components are attached to the device. Ensure that the instruction signs are always clearly recognizable and easily legible. Any missing instruction signs or stickers must be replaced.

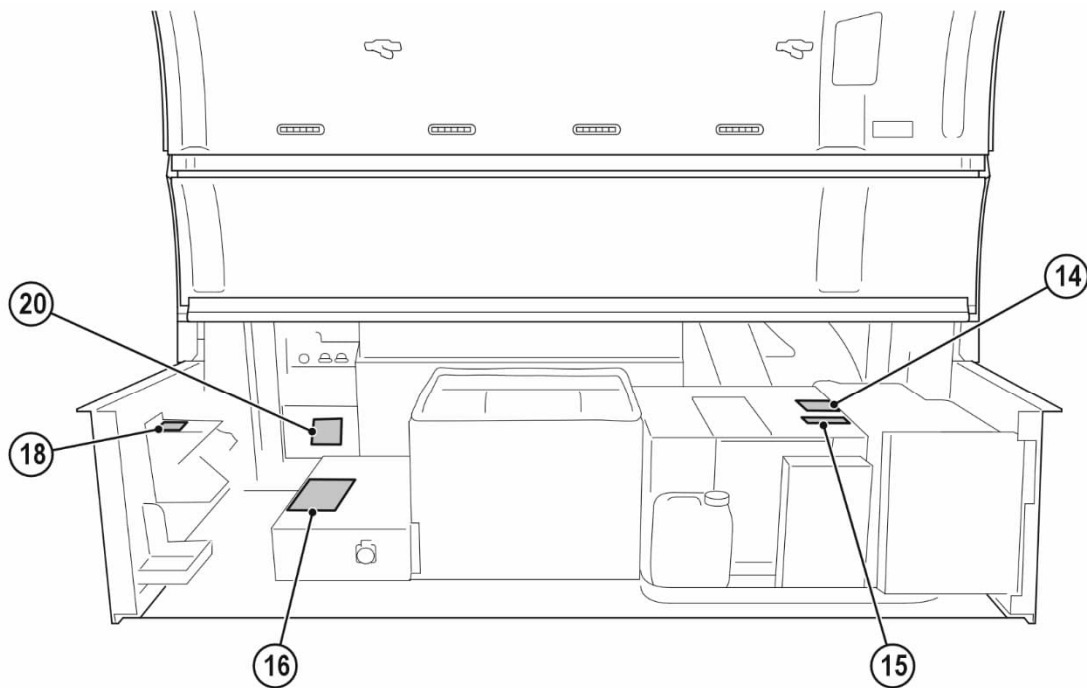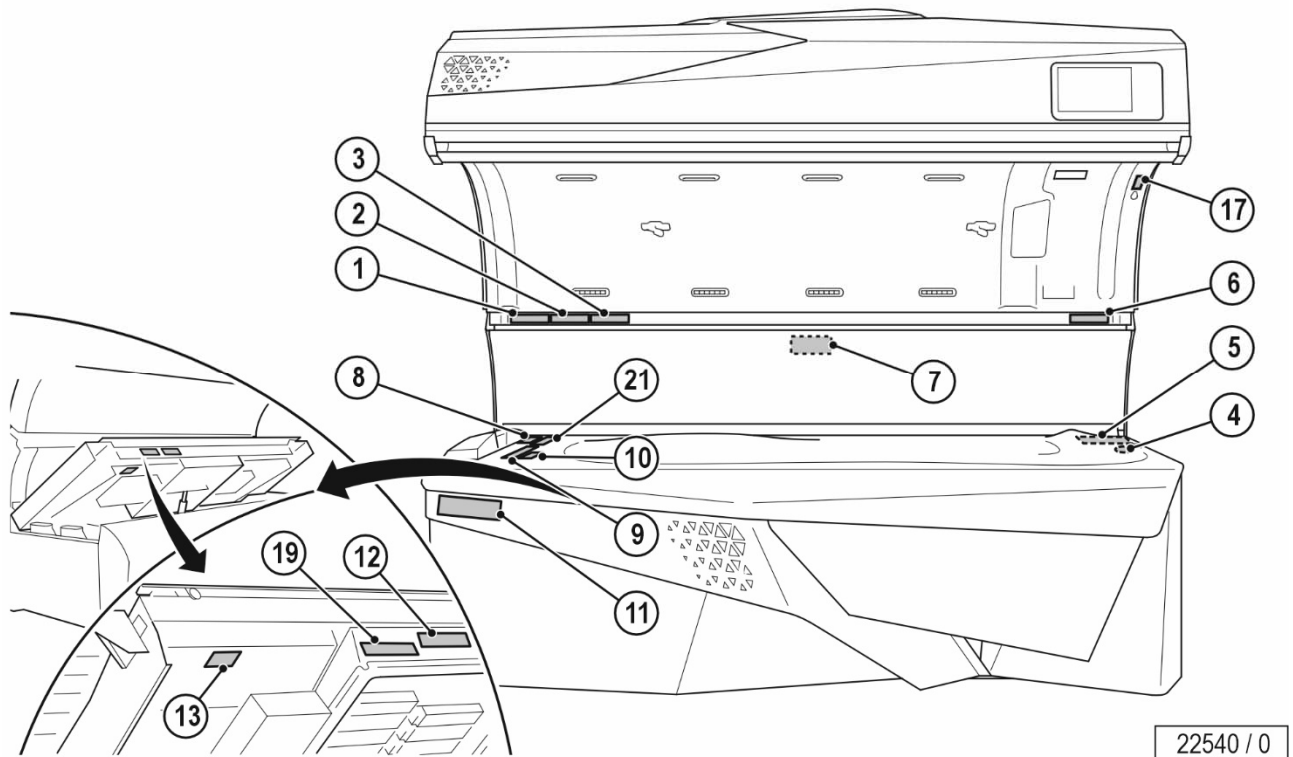




1: Name plate (example)

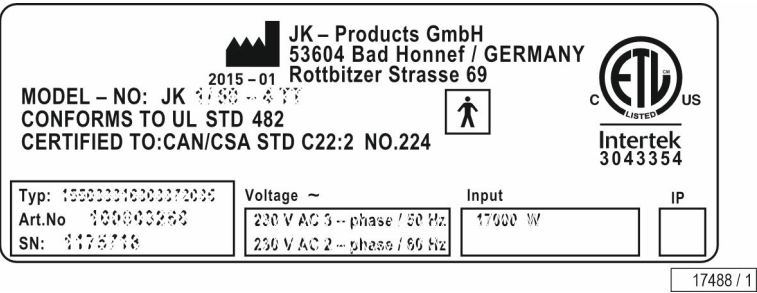

The name plate is attached to the interior side of the canopy. It contains important information for identifying the device (e. g. the serial number = Serial-No.) and the conformity mark.

2: UDI plate (example)

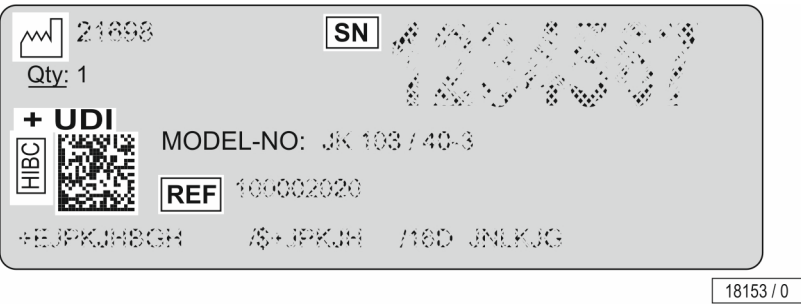

3: Standards



4: Sticker 'Follow Operating Instructions' (1014232-..)



5: Warning sticker UV radiation (801140-..)

WARNING - ULTRAVIOLET RADIATION - FOLLOW INSTRUCTIONS - FAILURE TO USE PROTECTIVE EYEWEAR MAY RESULT IN SEVERE BURNS OR OTHER EYE INJURY - IF DISCOMFORT DEVELOPS, DISCONTINUE USE AND CONSULTA PHYSICIAN.

(I) As with natural sunlight, overexposure can cause eye injury and sunburn;

(II) Repeated exposure may cause premature aging of the skin and skin cancer;

(III) Medications or cosmetics applied to the skin, may increase sensitivity to ultraviolet light;

(IV) A person who does not tan in the sun most likely will not tan from the use of this device;

(V) A person having a history of skin problems should consult a physician before use;

(VI) Overexposure should be avoided; and

(VII) The elderly, or fair skinned people who always burn easily and either never tan or tan minimally should not use this equipment.

(VIII) The appliance is not allowed to be used by more than one person at the same time.

ATTENTION - RAYONNEMENTS ULTRAVIOLETS - VEUILLEZ SUIVRE LES INSTRUCTIONS SUIVANTES - SANS DISPOSITIF DE PROTECTION DES YEUX, CE PRODUIT PEUT CAUSER DES BRULURES OU LESIONS OCULAIRES GRAVES - EN CAS DE PROBLEME ARRETER L'UTILISATION ET CONSULTER UN MEDECIN.

(I) Comme avec les rayons solaires naturels, une exposition trop longue peut causer coup de soleil ou brûlure;

(II) Une exposition répétée peut causer un vieillissement prématuré de la peau ou un cancer de la peau;

(III) L'utilisation de certains médicaments ou produits appliqués sur la peau peut accroître la sensibilité aux ultra-violets;

(IV) Les personnes ne bronzant pas au soleil ne le feront probablement pas sur cet appareil;

(V) Toute personne ayant des problèmes de peau doit consulter un médecin avant toute utilisation;

(VI) Eviter toute surexposition;

(VII) Il est conseillé aux personnes âgées ou aux personnes à peau claire ne bronzant pas ou étant très sensibles au soleil de ne pas utiliser cet appareil;

(VIII) L'appareil ne doit être utilisé que par une seule personne à la fois.

801140-01-

12076 / 2



6: Sticker (1014367-..)

FOR SALES, SERVICE, LAMPS & LOTIONS
CALL:

800.643.0086

XXXXXXXXXX

17197 / 2

7: 'Remove lattice' sticker (842971-..)



Gitter entfernen!
Nur bei Montage des Abluftstutzens!

Remove lattice!
Only when assembling the silencer!

Enlever la grille!
Uniquement en cas de montage du support d'échappement!



842971-

11978 / 0

The sticker is mounted on the rear panel.



8: Exposure label 1034102-..

DANGER OF ULTRAVIOLET RADIATION. Follow all instructions. Avoid over-exposure as with natural sunlight. Over-exposure may cause eye and skin injuries, as well as allergic reactions. Repeated exposure may lead to premature aging of skin and skin cancer. MAXIMUM TANNING TIME: 10 MINUTES	Recommended Exposure Schedule					
	Skin Type	Week 1 1st - 3rd Sessions	Week 2 4th - 6th Sessions	Week 3 7th - 10th Sessions	Week 4 11th - 15th Sessions	Weekly Subsequent Sessions
	I - Sensitive	NOT ADVISED	NOT ADVISED	NOT ADVISED	NOT ADVISED	NOT ADVISED
	II - Fair	2 Min.	4 Min.	6 Min.	8 Min.	10 Min.
	III - Average	2 Min.	4 Min.	6 Min.	8 Min.	10 Min.
	IV - Brown	2 Min.	6 Min.	8 Min.	10 Min.	10 Min.
	V - Dark Brown	2 Min.	6 Min.	8 Min.	10 Min.	10 Min.

WEAR PROTECTIVE EYEWEAR! FAILURE TO DO SO MAY RESULT IN SEVERE BURNS OR LONG TERM INJURY TO THE EYES. Certain medications or cosmetics may increase your sensitivity to ultraviolet radiation. Consult a physician before using sunlamps if you are using medications, have a history of skin problems or believe yourself to be especially sensitive to sunlight. If you do not tan in the sun, you are unlikely to tan from the use of this product.	This unit utilizes UV lamps. Replace only with GENESIS PLT PURE and HLT HYBRID LIGHT Technology 200W or other recognized equivalent lamps that are compliance with FDA's policy on lamp compatibility. To obtain the recommended exposure distance, lie in the middle of the acrylic glass panel and lower the canopy to the closed position. Warning: The use of any other position may result in overexposure!
--	---

Tanning can begin on a regular basis. A tan normally appears after several exposures and is maximized after four (4) weeks of exposure in accordance with the recommended exposure schedule for your skin type. In order to maintain your tan 10 minute sessions are recommended from the fifth week onward. Do not tan more than once in a 24-hour period.	Use protective eyewear (Super Sunnies® or model 2255 or FLEXIVISION) whenever the unit is in operation. Read and follow the instruction booklet before using this product. To avoid electrical shock during maintenance, disconnect the unit from the power source. This product conforms with the performance standards for sunlamp products under 21 CFR 1040.20 , FDA. Part No: 1034102-00
--	---

22546 / 0

The sticker is mounted on the lamp cover foot end.


9: Lamp cover base sticker (801139-..)

CAUTION - RISK OF PERSONAL INJURY UV LIGHT SOURCE - KEEP PROTECTIVE BARRIER IN PLACE Keep protective barrier in place or replace removable parts after servicing. Ne pas enlever l'écran protecteur ou remettre en place les pièces amovibles après l'entretien.	ATTENTION - RISQUE DE BLESSURE SOURCE DE RAYONS UV - NE PAS ENLEVER L'ECRAN 801139-00a
---	--

17192 / 0

The sticker is mounted on the lamp cover foot end.

10: Sticker partition (1002317-..)

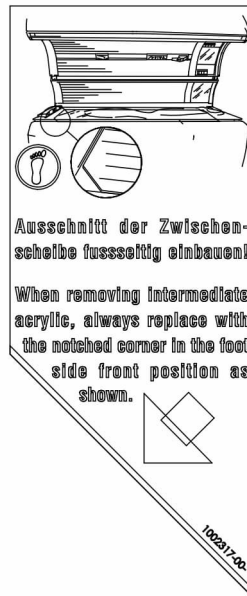

17480 / 0

11: Age warning label (1508746-..)

ATTENTION: THIS SUNLAMP PRODUCT
SHOULD NOT BE USED ON PERSONS
UNDER THE AGE OF 18 YEARS.

17303 / 0

The sticker is mounted on the front panel.

12: OEM parts sticker (1029426-..)

ATTENTION !

Utiliser uniquement des pièces de rechange certifiées OEM. L'utilisation d'autres pièces conduit à l'annulation de toutes les garanties et responsabilités du fabricant.

ATTENTION! Only use OEM certified replacement parts. The use of other parts voids all manufacturer's warranties and responsibilities.

1029426-00

20859 / 0

The sticker is mounted on the bottom of the bed base.




13: AQUA MIST sticker (801211-..)




The sticker is mounted under the tray.

14: Air conditioning sticker (1002243-..)

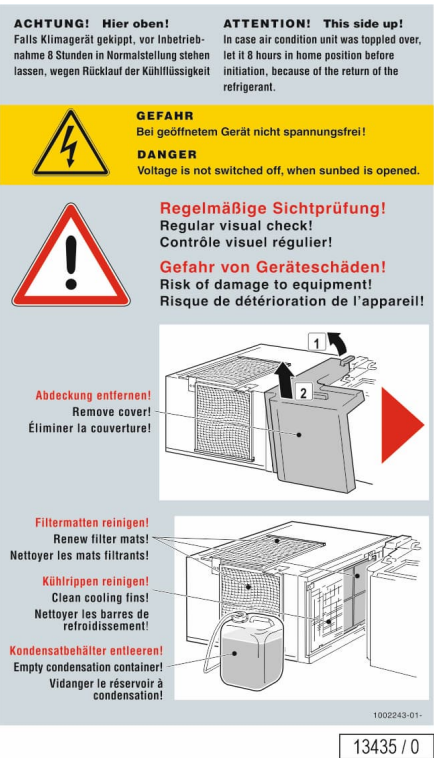


The sticker is mounted on the Air conditioning.

15: Air conditioning sticker R32 (1032302-..)

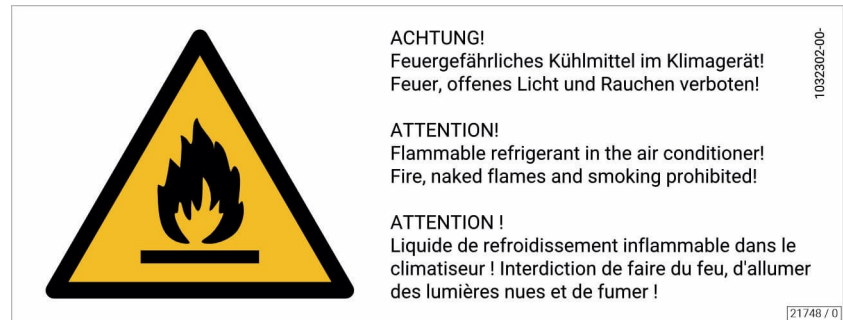

The sticker is mounted on the Air conditioning.

16: Control box warning sticker (1033325-..)

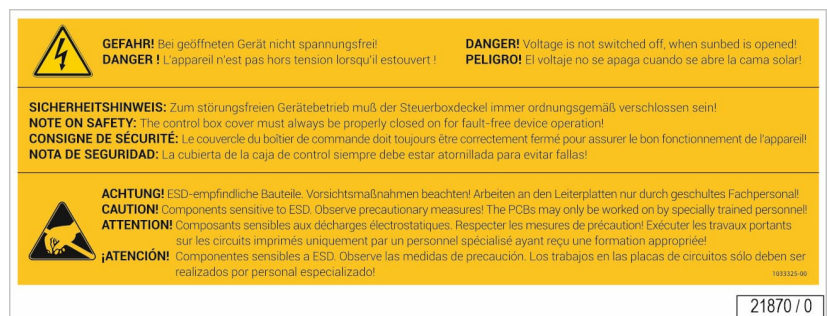

The sticker is located on the 'Part support control'.

17: Emergency off sticker (1032984-..)



The sticker is mounted at the head end on the inside of the canopy.

This sticker also includes the language form 1032985-.. (see Technical Documentation folder).

18: Not applicable for this device.


19: Sticker 'ESD label for sensitive components' (1029427-..)



The sticker is mounted on several places in the device.



20: USA mains connection sticker (1033954-..)

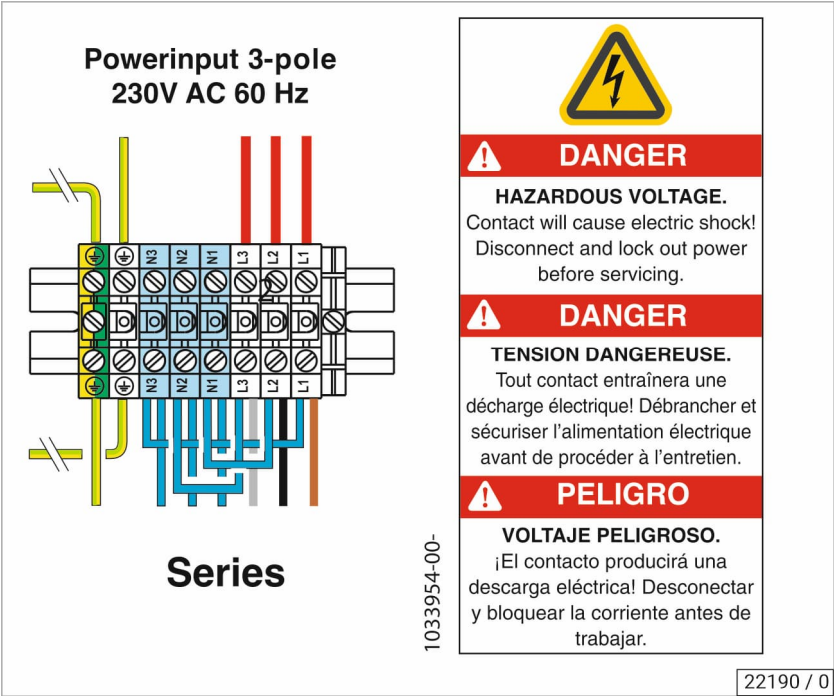


The sticker is mounted on the left side panel.



NOTE:
The device is only suitable for 3-pole operation!

21: Sticker Blue LED risk group 2 CND (1029422-..)

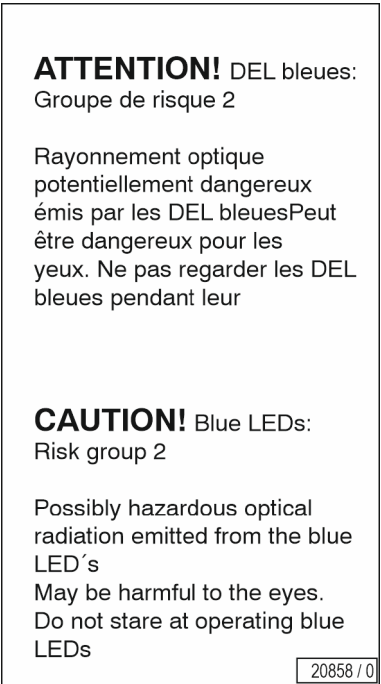

The sticker is located on the lamp cover at the bottom end of the unit.

3.10 Technical data

3.10.1 Power rating, electrical specifications and noise level



Model-No.: JK 205 / 52-4 HLT AC	
Power consumption rating:	13,600 W
Rated frequency:	60 Hz
Rated voltage:	230 V 3 phase
Rated overcurrent protection device:	50 amp 3-pole*
Power supply:	4 x THHN AWG 8 ²⁾
Classification:	Type BF applied part lying surface (PMMA)
Protection against shock:	Class I
Rated maximum output power Bluetooth module:	normal mode: 5.26 dBm (e.i.r.p.) EDR mode: 3.01 dBm (e.i.r.p.)
Noise level 1m away from device (without exhaust air):	66.9 dB(A)
Noise level inside the device:	< 70 dB(A)
Load on the acrylic panel:	max. 330 lb / 150 kg
Weight:	approx. 1,345 lb / 610 kg
Max. humidity:	< 70%
Ambient temperature:	59-89 °F (15-32 °C)
Max. operating altitude (above sea level):	< 6,500 ft (2,000 m)

* Due to high inrush current caused by the electrical components used, such as ballasts, power supplies, etc., the units must be protected by slow-blow fuses.

When using circuit breakers, make sure that they have tripping characteristic D or similar.

²⁾ Wire size is dependent on local electrical code. Please check with your local electrician or inspector to ensure proper size is used.



NOTE:

Adaptation of the unit is required for operating altitudes greater than 6,500 ft / 2,000 m above sea level in order to guarantee trouble-free operation.

Essential performance



NOTE:


The essential performance of the device is the UV exposure dose within specified limits, whereas the upper limit must not be exceeded. No-radiation or zero radiation does not result or contribute to an injury of the user.

Lower limit	exposure dose 0,75 MED ^{*)1}
Upper limit	exposure dose 4 MED ^{*)}

^{1 *)} in compliance with 21 CFR 1040.20 and FDA's timer policy



3.10.2 Dimensions

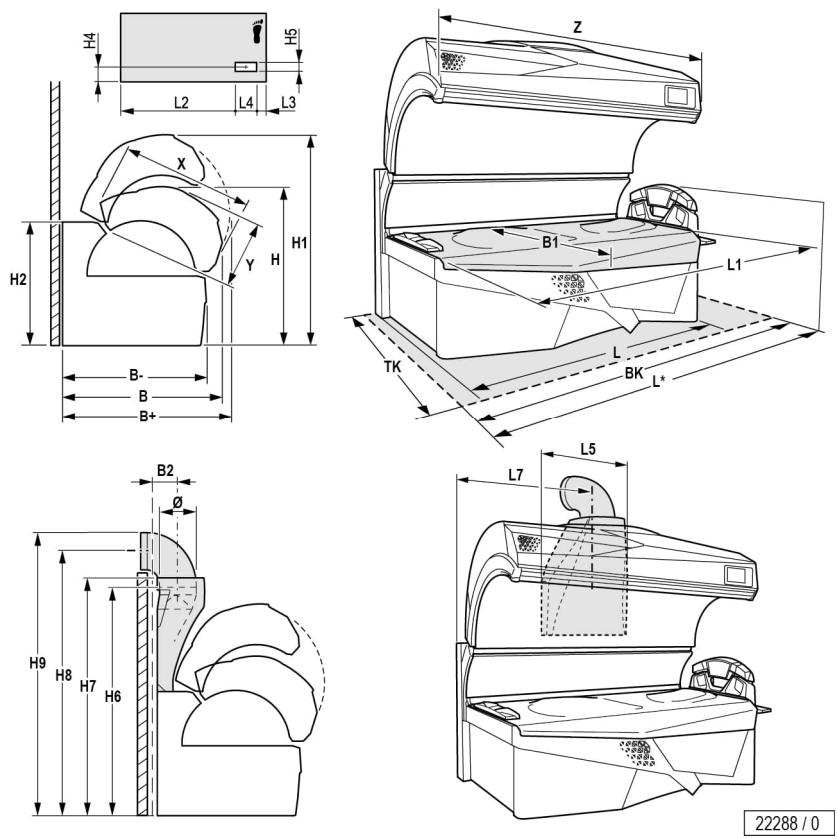


B + =	61,22 in	1,555 mm	H5 =	3,94 in	100 mm
B =	60,83 in	1,545 mm	H6 =	73,74 in	1873 mm
B - =	58,86 in	1,495 mm	H7 =	78,94 in	2,005 mm
B1 =	34,45 in	875 mm	H8 =	87,36 in	2,219 mm
B2 =	8,86 in	225 mm	H9 =	92,99 in	2,362 mm
L =	88,46 in	2,247 mm	X =	44,57 in	1,132 mm
L* =	94,92 in	2,411 mm	Y =	30,91 in	785 mm
L1 =	86,61 in	2,200 mm	Z =	88,11 in	2,238 mm
L2 =	69,57 in	1,767 mm	D =	11,81 in	300 mm
L3 =	9,25 in	235 mm	BK =	98,43 in	2,500 mm
L4 =	9,65 in	245 mm	TK =	90,55 in	2,300 mm
L5 =	25,39 in	645 mm			
L7 =	44,09 in	1,120 mm			
H =	60,63 in	1,540 mm			
H1 =	80,91 in	2,055 mm	Note:		
H2 =	43,62 in	1,108 mm	L =	shoulder tan without sound system / audio system	
H4 =	17,52 in	445 mm	L* =	shoulder tan with sound system / audio system	

3.10.3 Lamp configuration

NOTICE

The use of other lamps voids the operating license!

Model-No.: JK 205 / 52-4 HLT AC

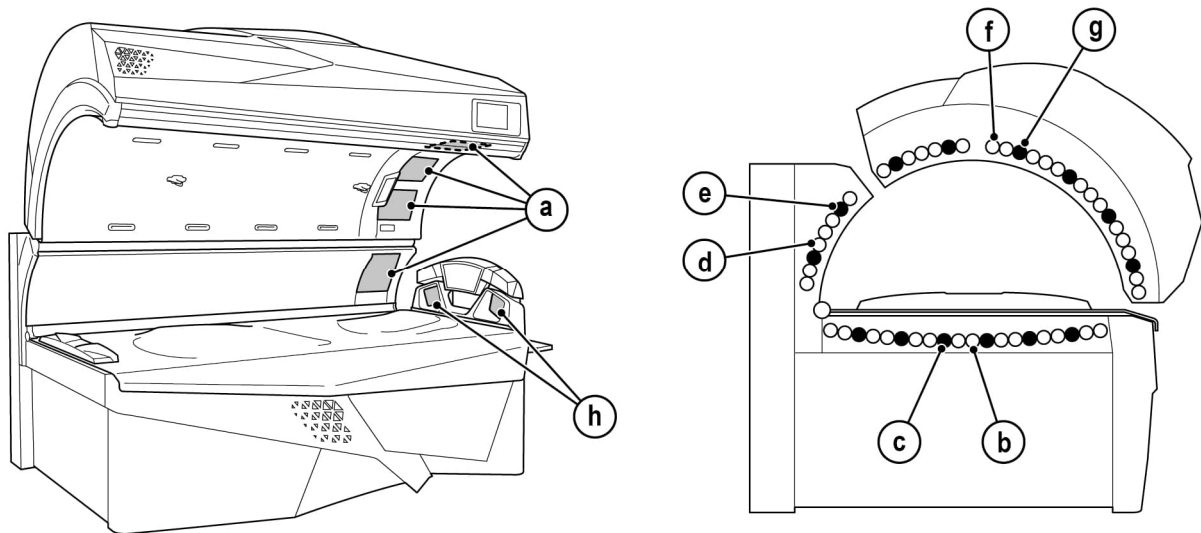

22543 / 0

Lamp set


	Number	Description	Length	Power	Control	Order-no.
a)	4	UV-LED Board SPECTRA Fusion Edge	Not a wear part			1034133-..
b)	14	Low-pressure lamps GENESIS PLT PURE LIGHT Technology 200W	1,80 m	200 W	80-200 W	1518365-..
c)	6	Low-pressure lamps GENESIS HLT HYBRID LIGHT Technology 200W	1,80 m	200 W	80-200 W	1518366-..
d)	6	UV low-pressure lamps GENESIS PLT PURE LIGHT Technology 200W	1,80 m	200 W	80-200 W	1518365-..
e)	2	Low-pressure lamps GENESIS HLT HYBRID LIGHT Technology 200W	1,80 m	200 W	80-200 W	1518366-..
f)	18	UV low-pressure lamps GENESIS PLT PURE LIGHT Technology 200W	1,80 m	200 W	80-200 W	1518365-..
g)	6	Low-pressure lamps GENESIS HLT HYBRID LIGHT Technology 200W	1,80 m	200 W	80-200 W	1518366-..
h)	2	UV LED Board shoulder tan	Not a wear part			1513795-..

3.10.4 Accent lighting

Not applicable for this device.



3.10.5 Spare parts

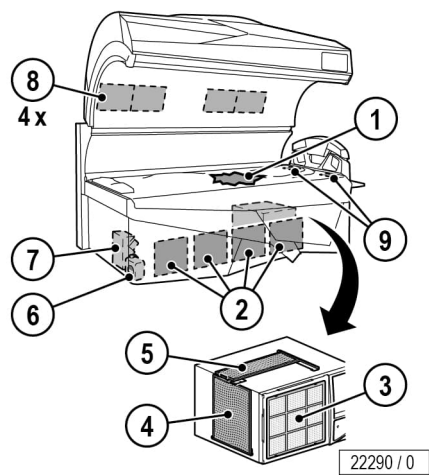

Model-No.: JK 205 / 52-4 HLT AC:

Number		Description	Order-no.
1	1	Partition	1518103-..
2	4	Filter	52104-..
3	1	Filter	—
4	1	Filter	51937-..
5	1	Filter	55567-..
6	1	AQUA SYSTEM, 1.59 gal (6 l)	800617-..
7	1	AROMA, 3.38 fl oz (100 ml) RELAX	701357-..
8	2	Filter	843150-..
	1	Protective goggles	1027211-..
	1	Allen-key	83828-..
	1	UV-lamp PLT set chip cards	1511265-..
	1	Lamp HLT set chips cards	1511266-..

For more spare parts, contact Customer Service (see page 2).

4 Why you use it



4.1 Intended use

This sunlamp product is intended exclusively for aesthetic tanning of the human skin, for one person at a time, at the age of 18 or above.

4.2 Skin condition

You may benefit from the use of this device

- if you tan in natural sunlight (skin types III, IV and V),
- if you have no acute sunburn or skin disease,
- if you take no medication or use cosmetics that may increase sensitivity to ultraviolet light.

Skin type I (Sensitive):

Invariably gets sunburn, accepts little natural sunlight and does not tan.



Skin type II (Fair):

Gets sunburn easily and severely, tans minimally or lightly and peels.



Skin type III (Average):

Often referred to as "Average" complexion, gets moderate sunburns and tans about average.



Skin type IV (Brown):

Seldom gets sunburns, tans easily and above average with each exposure.

Skin type V (Dark Brown):

This individual's skin rarely gets sunburns, tans easily and substantially.

5 Who cannot use it



5.1 Prohibited usage

5.1.1 Tanning system



WARNING!



Danger through ultraviolet radiation!

Danger of skin and eye injuries or skin diseases!

– Please observe the following instructions.

The following people must not use the device:

- People under 18 years of age
 - People with skin lesions or open wounds
 - People with acute sunburn
 - People who repeatedly suffered from serious sunburn during childhood
 - People with naturally red hair and pale skin
 - People with atypically discolored patches of skin
 - People who have or have had skin cancer
 - People who suffer from an increased risk of skin cancer (e.g. cases of skin cancer in the family)
 - People among whose closest relatives a melanoma has occurred
 - People who are being medically treated for photosensitivity
 - People taking photosensitivity causing medicine
 - People with freckles and people who tend to develop freckles
 - People with more than 16 moles on their body (2 mm diameter or larger)
 - People with atypical moles (atypical moles are, for example, asymmetrical moles with a diameter greater than 5 mm, with varying pigmentation and irregular edges)
- Seek medical advice if in doubt!

5.1.2 Vibra Shape (vibration plate)

Not applicable for this device.

6 What you must do to avoid serious harm



6.1 General

DANGER – HIGH VOLTAGE!



You can be killed or injured by an electric shock!
Assembly and electrical connection must comply with national and local regulations.


- The device may only be assembled, installed, upgraded or repaired by authorized, trained and qualified staff.

WARNING



Risk of electric shock!

- To avoid risk of electric shock, this equipment must only be connected to a mains supply with protective earth grounding.

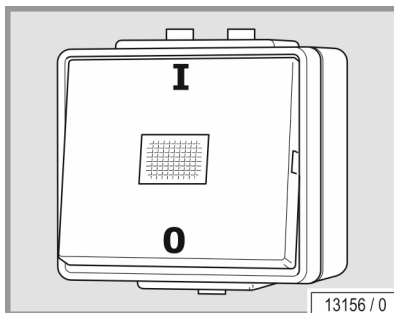

The electrical installation must have a freely accessible, all-pole disconnecting device (Master switch with clearly labelled On/Off settings, e.g. 'O' and 'I' or additional indicator light) fitted externally on the site.

DANGER – HIGH VOLTAGE!



You can be killed or injured by an electric shock or injured by overexposure!

Skin damage and sunburn possible

Danger of overheating by obstruction of the air routing.

- No modification of this equipment is allowed.



6.2 Tanning system

WARNING!



Unprotected tanning may result in eye injury and eye diseases!

The unprotected eye can become inflamed on the surface, and in certain cases the retina can be damaged by excessive radiation. Cataracts can form after repeated exposure to radiation.

- Inform users to use the included protective goggles that block UV.

WARNING!



Danger of ultraviolet radiation.

Ultraviolet radiation - follow instructions.

Failure to use protective eyewear may result in severe burns or other eye injury - if discomfort develops, discontinue use and consult a physician.

- As with natural sunlight, overexposure can cause eye injury and sunburn;
- Repeated exposure may cause premature aging of the skin and skin cancer;
- Medications or cosmetics applied to the skin, may increase sensitivity to ultraviolet light;
- A person who does not tan in the sun most likely will not tan from the use of this device;
- A person having a history of skin problems should consult a physician before use;
- Overexposure should be avoided;
- The elderly, or fair skinned people who always burn easily and either never tan or tan minimally should not use this equipment.
- The appliance is not allowed to be used by more than one person at the same time.
- This sunlamp product should not be used on persons under the age of 18 years.

WARNING!



Danger of long-term consequences!

Exposure to ultraviolet radiation may increase the likelihood of developing skin cancer and cause serious eye injury.

- Overexposure should be avoided.
- This sunlamp product should not be used on persons under the age of 18 years.

 WARNING!**WARNING!**

This device emits electromagnetic fields!

EM-Emission inside device:

– 5 Hz – 2 kHz	max. 2.1 μ T (1.5 kV/m)
2 kHz – 400 kHz	max. 3.3 μ T (1.3 kV/m)
9 kHz – 30 MHz	max. 35 dB μ V/m (56 μ V/m)
30 MHz – 1 GHz	max. 95 dB μ V/m (56 μ V/m)
1 GHz – 6 GHz	max. 90 dB μ V/m (32 μ V/m)



If you have an active implant or body worn medical device (e.g. insulin body pump, blood glucose sensor) consult your health care provider before use of this device.

- Seek medical advice if in doubt!

6.3 Sensor

Not applicable for this device.



7 What you must do to avoid other harm

7.1 General

WARNING!



Infections can be transferred through skin contact. All items/equipment components, with which the user can come into contact during tanning, must be disinfected after every tanning session:

- Protective goggles
- Acrylic panels
- Handles and INTERIOR DISPLAY
- Adjustable air nozzles
- Use only EPA registered quaternary ammonium germicidal based detergent solution (follow product label for use-dilution), such as Lucasol One Step, to clean and disinfect the tanning system and its components.

7.2 Tanning system

WARNING!



Danger of long-term consequences!

- Overexposure should be avoided.
- The elderly, or fair skinned people who always burn easily and either never tan or tan minimally should not use this equipment.
- This sunlamp product should not be used on persons under the age of 18 years.
- While there is no immediate clinical evidence of UV exposure and its effects upon expectant mothers, it is strongly advised that expectant mothers be discouraged from using the tanning unit.

7.3 Sensor

Not applicable for this device.

7.4 Vibra Shape (vibration plate)

Not applicable for this device.

7.5 Foreseeable misuse



The following uses of the device are explicitly prohibited:

- Only one person at a time may use the device.
- People with body weight of more than 330 lb (150 kg) may not use the device.
- Exceeding the specified tanning times may result in burns and long-term skin damage.
- When the device is in use no other people may remain in the room. This includes both children and adults.

7.6 Obligations of the studio operator

- As the studio operator you are responsible for informing users on possible risks of tanning.
- All danger and safety labels attached to the device must be observed! Do not remove them!
- No safety equipment (e.g. panel switch) may be removed, deactivated, or otherwise bypassed as it can impair the safe operation of the device!
- The device may only be used when in completely operational condition!
- It is the studio operator's responsibility to ensure the tanning system is handled properly.

7.7 Staff training

As the operator you are obligated to train your personnel and instruct them in the established legal and accident prevention regulations. Ensure that your staff have understood and observe these instructions. This includes:

- information regarding intended use and foreseeable misuse
- safety instructions
- operating instructions
- cleaning/disinfection and maintenance instructions
- Please make the instructions and additional information from the manufacturer available to the staff at their workplace.
- Regularly check your staff's safety consciousness and awareness of the risks, taking into account your operating instructions.
- Please ensure that the cleaning/disinfection intervals are complied with, in particular cleaning and disinfection after every use.
- Please ensure that your staff provide your customers with appropriate advice, in particular regarding tanning times, possible risks and the operation of the device.

8 Risks of using this device



WARNING!



Danger through ultraviolet radiation!
Danger of skin and eye injuries or skin diseases!
– Please observe the following instructions.

- This sunlamp product must not be used on individuals who have had skin cancer or have a family history of skin cancer.
- Persons repeatedly exposed to ultraviolet sunlamp products must be evaluated for skin cancer regularly.
- This sunlamp product must not be used by people among whose closest relatives a melanoma has occurred.

Contraindications! The following people must not use this system:

- People under 18 years of age
- People with skin lesions or open wounds
- People with acute sunburn
- People who repeatedly suffered from serious sunburn during childhood
- People with naturally red hair and pale skin
- People with atypically discolored patches of skin
- People who have or have had skin cancer
- People who are being medically treated for photosensitivity
- People taking photosensitivity causing medicine
- People with freckles and people who tend to develop freckles
- People with more than 16 moles on their body (2 mm diameter or larger)
- People with atypical moles (atypical moles are, for example, asymmetrical moles with a diameter greater than 5 mm, with varying pigmentation and irregular edges)

9 Benefits of using this device

Traditional UV light with the addition of (beauty) red light results in a natural looking tan. Optimal tanning results are achieved due to the synergistic combination of light spectrums.



10 How to decide to use this device



This device is intended only for commercial use and not for private use.

Some people are not permitted to use the device, see chapter 5.

The device may not be used by people with reduced physical, sensory or mental capabilities or who have insufficient experience and/or knowledge without supervision. A person responsible for their safety must ensure, either by supervision or instruction, that the device is used correctly and safely. If there is any doubt, use of the device by such categories of persons is to be forbidden!

11 What to do before the treatment



Please check for any conditions that may prohibit the use of this device – see chapters 5, 6, 8, 10.

Make-up in the tanning device

Please do not wear make-up. Clean skin absorbs UV light better.

A wide variety of materials is found in cosmetics. Whether these are emulsifiers, greases, or fragrances - in conjunction with UV radiation, these can cause skin allergy reactions.

Remove all make-up. This is essential. Make-up clogs the pores in the face. The UV light from a tanning device re-opens these clogged pores so that not only does the light penetrate the skin, but also the allergenic components of the make-up.

A further negative consequence of make-up is that the appearance of the skin deteriorates irreversibly over a period of time. However good make-up looks - in conjunction with UV light, it causes more harm than good. Therefore remove all make-up before a session in your tanning device - it will be much better applied afterwards.

- Remove all jewelry (including piercings) prior to the application.
- Remove cosmetics before using the device and do not use sun screen products.

Are medications and the tanning device compatible?

It is known that some medications increase the skin's sensitivity to UV light. This probability is particularly high with antibiotics, sulphonamides, psychiatric drugs, tranquilizers, anti-diabetes treatments and diuretics. Sun creams which contain psorale or kumarin also increase skin sensitivity. If you are in any doubt, first ask your doctor.

Contact lenses in the tanning device?

Like any other tanning device user, contact lens wearers should also wear special protective goggles which protect the eyes against UV radiation.

Even when using contact lenses with UV protection, the protective goggles are mandatory.

Showering after leaving the tanning device?

The browning is in the skin, not on it. Therefore you cannot wash it off. Treat your skin to a moisturizing cream after showering.



12 How to use this device

12.1 How to set this device up

After commissioning and cleaning/disinfection, the device is ready for operation.

12.2 How to make sure the device works

Before using the device, check for damage to acrylic panels.

12.3 How to use it to treat your condition

- No other persons are permitted inside the cabin while the device is in use.
- UV light can cause irreversible skin or eye damage. The unprotected eye can become inflamed on the surface, and in certain cases the retina can be damaged by excessive radiation. Cataracts can form after numerous repeated tanning sessions. Use the UV-impermeable protective goggles provided (order no. 1027211-..). Contact lenses and sun glasses are no substitutes for protective glasses.
- Always comply with the recommended application times.



12.4 How to choose correct treatment regimen

12.4.1 Skin types

Skin type I (Sensitive):

Invariably gets sunburn, accepts little natural sunlight and does not tan.



Skin type II (Fair):

Gets sunburn easily and severely, tans minimally or lightly and peels.



Skin type III (Average):

Often referred to as "Average" complexion, gets moderate sunburns and tans about average.



Skin type IV (Brown):

Seldom gets sunburns, tans easily and above average with each exposure.

Skin type V (Dark Brown):

This individual's skin rarely gets sunburns, tans easily and substantially.

12.4.2 Tanning times



NOTE:

The tanning times given in the table must not be exceeded!


DANGER OF ULTRAVIOLET RADIATION.		Recommended Exposure Schedule					
Follow all instructions. Avoid over-exposure as with natural sunlight. Over-exposure may cause eye and skin injuries, as well as allergic reactions. Repeated exposure may lead to premature aging of skin and skin cancer.		Skin Type	Week 1 1st - 3rd Sessions	Week 2 4th - 6th Sessions	Week 3 7th - 10th Sessions	Week 4 11th - 15th Sessions	Weekly Subsequent Sessions
		I - Sensitive	NOT ADVISED	NOT ADVISED	NOT ADVISED	NOT ADVISED	NOT ADVISED
		II - Fair	2 Min.	4 Min.	6 Min.	8 Min.	10 Min.
		III - Average	2 Min.	4 Min.	6 Min.	8 Min.	10 Min.
		IV - Brown	2 Min.	6 Min.	8 Min.	10 Min.	10 Min.
		V - Dark Brown	2 Min.	6 Min.	8 Min.	10 Min.	10 Min.
		MAXIMUM TANNING TIME: 10 MINUTES					

WEAR PROTECTIVE EYEWEAR! FAILURE TO DO SO MAY RESULT IN SEVERE BURNS OR LONG TERM INJURY TO THE EYES. Certain medications or cosmetics may increase your sensitivity to ultraviolet radiation. Consult a physician before using sunlamps if you are using medications, have a history of skin problems or believe yourself to be especially sensitive to sunlight. If you do not tan in the sun, you are unlikely to tan from the use of this product.		This unit utilizes UV lamps. Replace only with GENESIS PLT PURE and HLT HYBRID LIGHT Technology 200W or other recognized equivalent lamps that are compliance with FDA's policy on lamp compatibility. To obtain the recommended exposure distance, lie in the middle of the acrylic glass panel and lower the canopy to the closed position. Warning: The use of any other position may result in overexposure!
--	--	---

Tanning can begin on a regular basis. A tan normally appears after several exposures and is maximized after four (4) weeks of exposure in accordance with the recommended exposure schedule for your skin type. In order to maintain your tan 10 minute sessions are recommended from the fifth week onward. Do not tan more than once in a 24-hour period.	Use protective eyewear (Super Sunnies® or model 2255 or FLEXIVISION) whenever the unit is in operation. Read and follow the instruction booklet before using this product. To avoid electrical shock during maintenance, disconnect the unit from the power source. This product conforms with the performance standards for sunlamp products under 21 CFR 1040.20, FDA. Part No: 1034102-00
--	--

The sticker is mounted on the lamp cover foot end.

12.5 How to operate the device

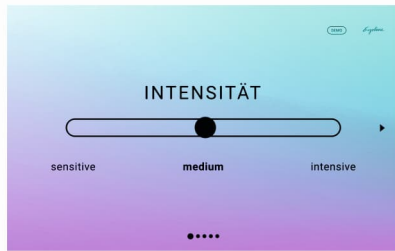

SELECTABLE TANNING PROGRAMS

Before the session begins, the desired application type must be selected. There are 3 possible selections: See chapter 3.5

NCF CONNECT


After tanning: Individual settings can be stored on an NFC medium (e.g.: NFC tag).

Before tanning:

Individual settings can be transferred to the unit.



During the tanning session, functions can be activated or deactivated on the **INTERIOR DISPLAY**.

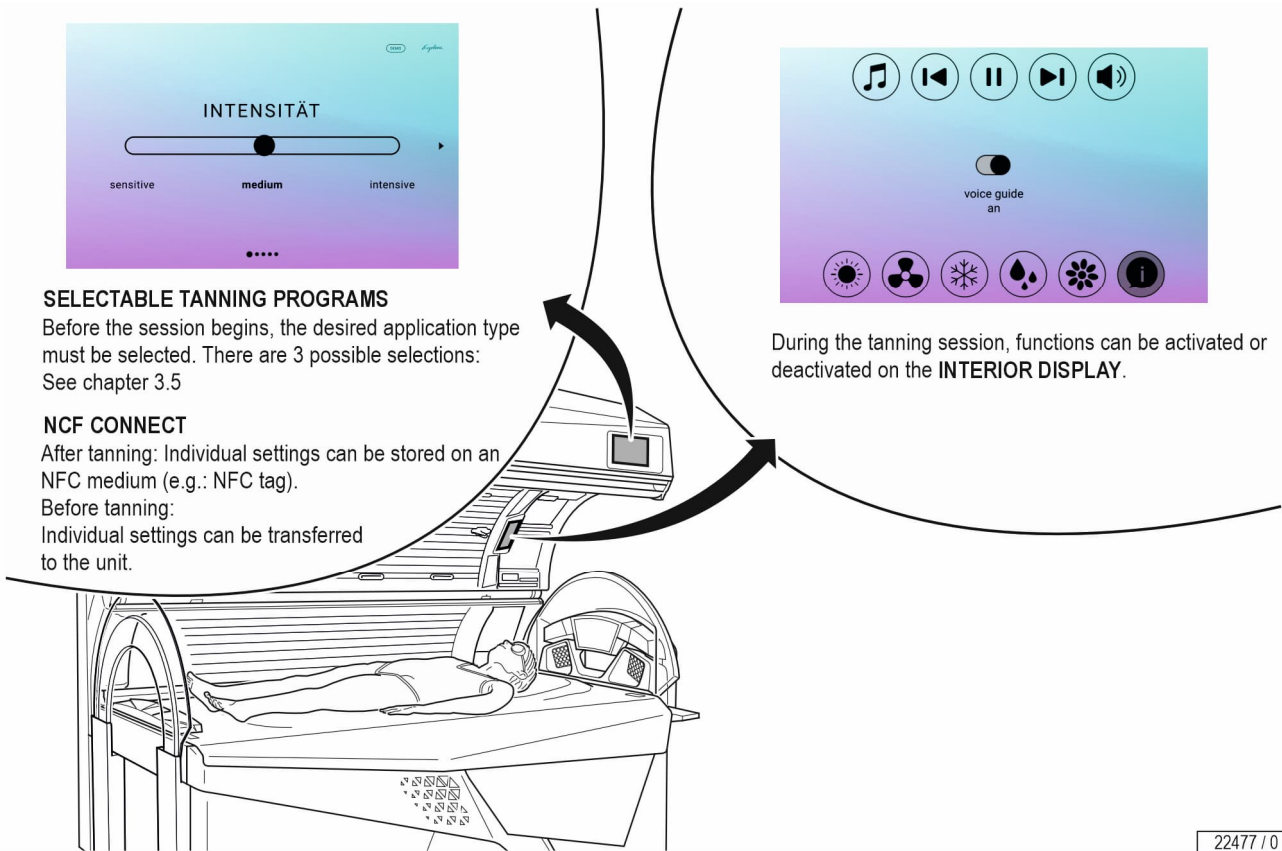

22477 / 0

12.5.1 Professional Setup Manager



NOTE!

If video option is activated:

In order to interrupt or end the video, briefly touch the PROFESSIONAL SETUP MANAGER.

More information on the Video Option can be found in the PROFESSIONAL SETUP MANAGER (order no. 1028366-..).


Navigation

Before starting the device, the comfort settings can be selected in advance in PROFESSIONAL SETUP MANAGER (order no. 1028366-..).

The user can select the application type before tanning starts. Further information on the application types: see chapter 12.7 Selection of the application on page 60.

The user profile can be used to select and save a number of other individual functions before the device is started.

All functions can be reached via the comfort settings (Item 1).

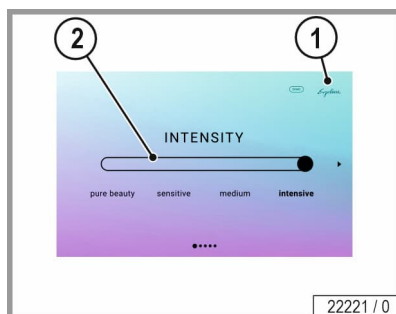

NOTE!


Press the Ergoline logo (Item 2) to open 'PROFESSIONAL SETUP MANAGER'.



12.5.2 User settings overview


Not applicable for this device.

12.6 Functions

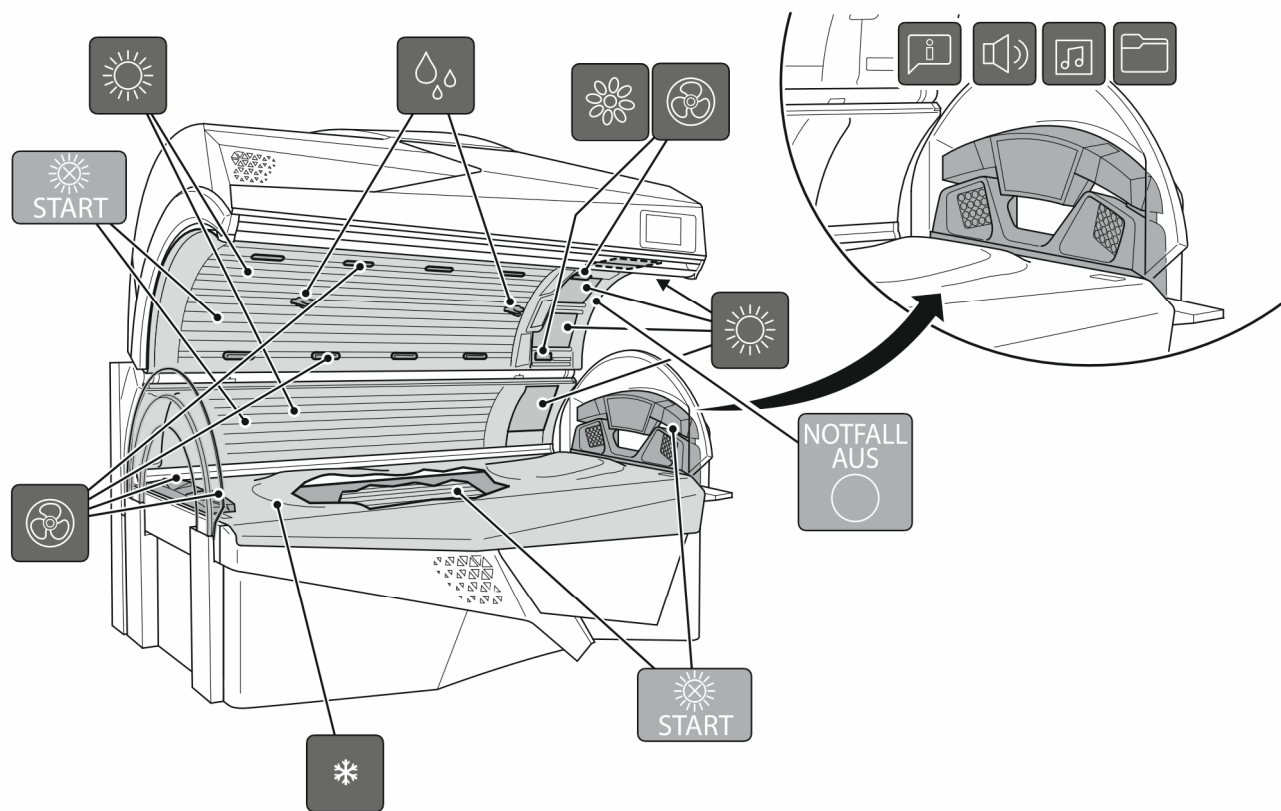

22257 / 0

INTERIOR DISPLAY

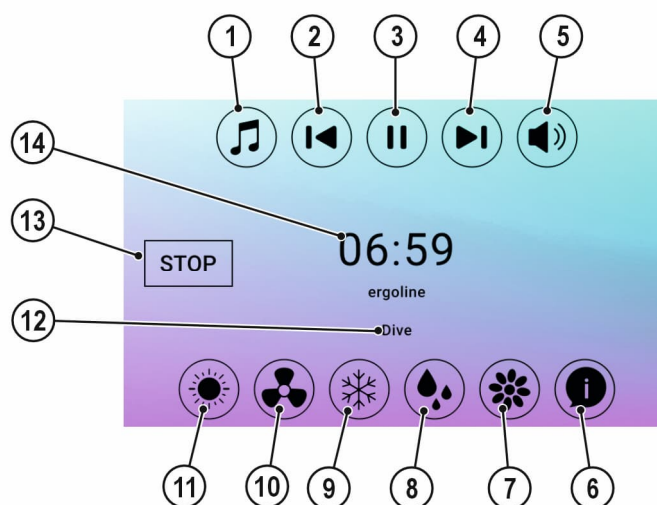


22219 / 0

1. Audio source pictogram
2. Audio back pictogram
3. Audio pause/play pictogram
4. Audio next pictogram
5. Volume pictogram
6. VOICE GUIDE pictogram
7. AROMA SYSTEM pictogram
8. AQUA SYSTEM pictogram
9. Air conditioning pictogram
10. Fan pictogram
11. Intensity selection pictogram
12. Display - Track title
13. START/STOP pictogram
14. Display - Tanning time



EXTERNAL DISPLAY (touch)

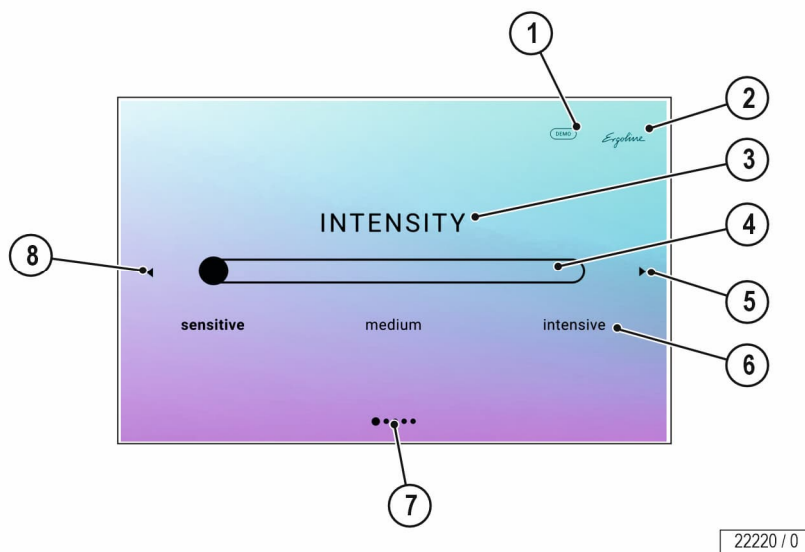

1. Demo mode
2. Professional Setup Manager (PROFESSIONAL settings)
3. Description of the selected function
4. Slider
5. Next settings
6. Possible settings
7. Settings page (page 1 of 3)
8. Last settings



NOTE!


When the video option is activated:
To interrupt or end the video, touch the display briefly.

More information on the Video Option can be found in the Professional Setup Manager (order no. 1028366-..).



NOTE!

To activate demo mode, briefly double tap on 'DEMO' (pos. 1).
In demo mode, you can test the audio, fan and VOICE GUIDE function.
You have 30 seconds in which to select the function.

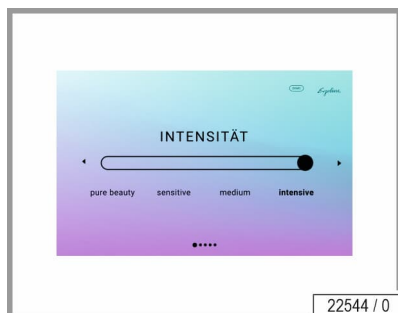

12.6.1 Navigation

You can already configure the most important settings using the Professional Setup Manager (order no. 1028366-..) before starting the unit.

The user can select the application type before the tanning session. For further information on the application types: see chapter 12.7 on page 60.

You can use the user profile to configure and save individual settings for a number of other functions before starting the unit.



NOTE:

To access the 'Professional Setup Manager' tap briefly on the Ergoline logo (pos. 2).



NFC¹-Point

Data exchange via contactless near field communication.

The user settings can be saved to a special customer card so that they do not have to be set again during the next application. The stored data can be transferred to other units with similar setting options.

- Hold the customer card close to the NFC point (max. distance 3 cm).

NFC status

The data transfer is indicated by colors.



The NFC point flashes pulsating:
Ready/Standby
Data can be transferred to a data carrier.



The middle of the NFC point is green:
Settings have been successfully transferred from the data carrier.



The middle of the NFC point is blue:
Settings have been successfully transferred to the data carrier.



- The middle of the NFC point is orange:
- Transmission error
 - Hold the card in front of the point again and wait a little longer.
 - The data carrier is empty.
 - The settings can be saved to the data carrier after the session.

Information about the setting options can be found in the separate user manual 'Professional Setup Manager' (order number: 1028366-..) in the technical documentation.


¹ Communication system: NFC (Near Field Communication); max. operating range: approx. 50 mm, frequency range: 13.56 Mhz



12.6.2 Description



PROFESSIONAL SETUP MANAGER PLUS – User profile






You can already configure the most important settings using the PROFESSIONAL SETUP MANAGER PLUS order no. 1028366-..).

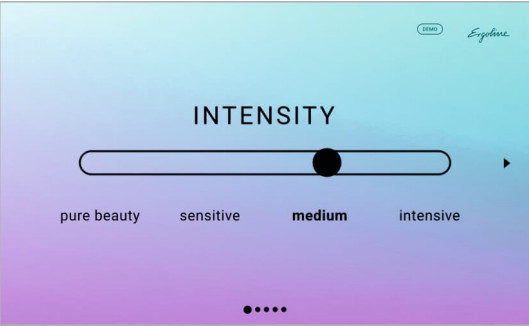

Pictogram selection / key sequence	Description/ Display	Information
	Briefly press the Ergoline logo: Professional Setup Manager opens	For the operator only.


EXTERNAL DISPLAY in the Standby

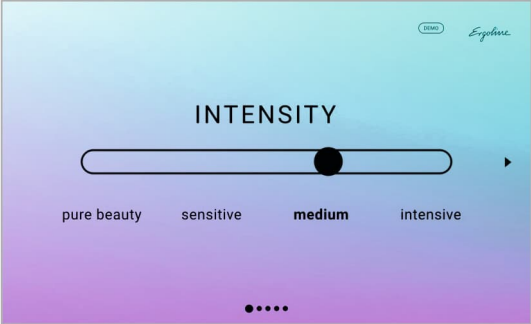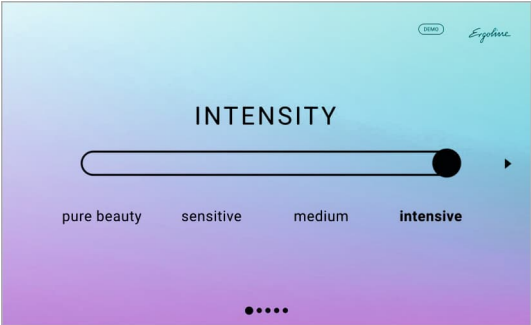	Select 'Intensities' Move the slider or press directly on the program you want. Select 'medium'	Activate by touching.
	Select 'intensive'	Activate by touching.

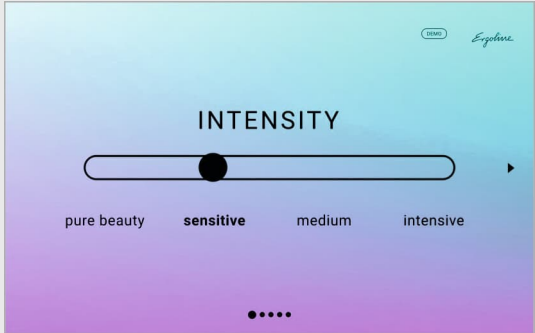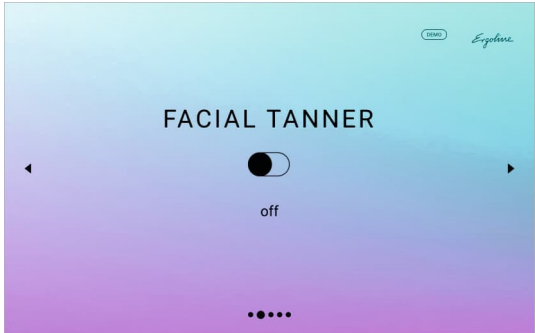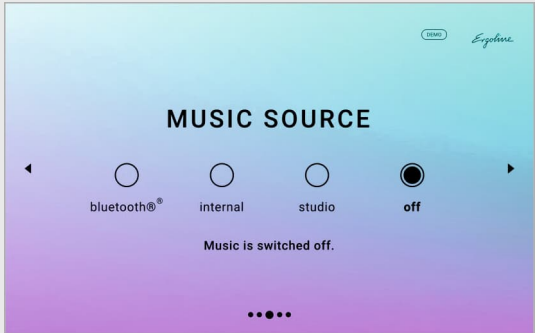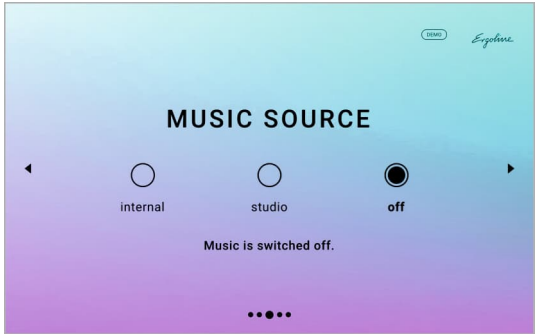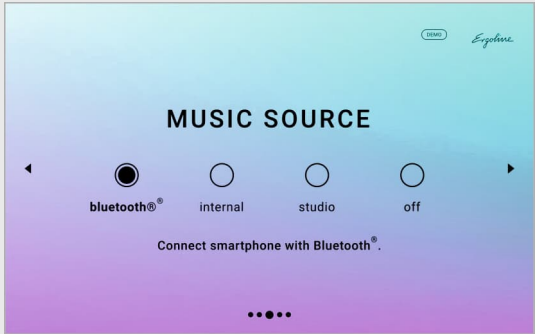Pictogram selection / key sequence	Description/ Display	Information
	Select 'sensitive'	Activate by touching.
	Facial tanner activated	The function can be turned on or off by moving the slider.
	bluetooth® = smartphone connection intern = internal music studio = studio channels off = music off	Activate by touching.
	Display without studio channels	Activate by touching.
	Connection to the user's smartphone.	Activate by touching.



Pictogram selection / key sequence	Description/ Display	Information
	VOICE GUIDE activated AROMA deactivated	Move the slider to switch the function on or off.
	AQUA FRESH body deactivated AQUA FRESH facial deactivated	Move the slider to switch the function on or off.

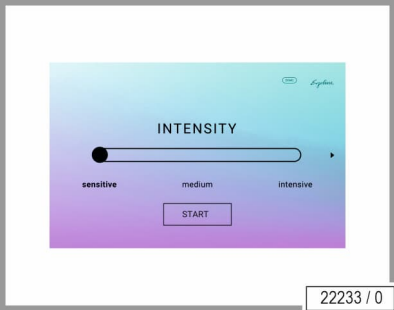





INTERIOR DISPLAY in standby






NOTICE:
If no application type is selected before the session, the user may select the desired tanning program in the INTERIOR DISPLAY.



Further information on the application types:
see chapter 12.7 on page 60.

Navigation

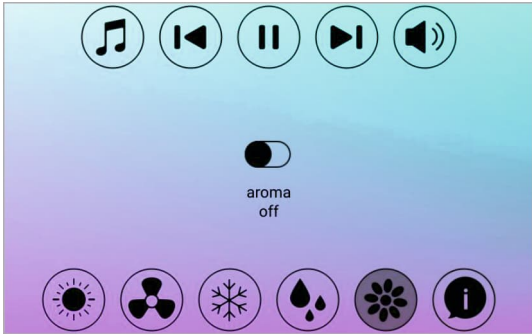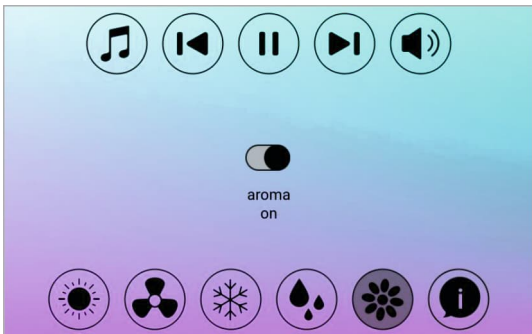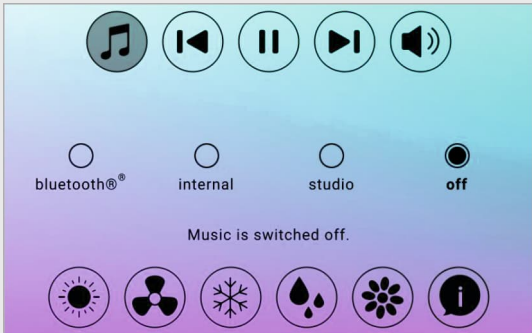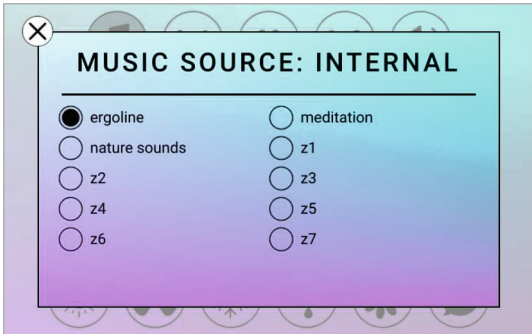
Pictogram selection / key sequence	Description/ Display	Information
INTERIOR DISPLAY during tanning		
	AROMA  	AROMA on / off
	Audio source selection 	Bluetooth® Internal music selection Studio channel selection Audio sources 'off'
		Audio sources 'internal'

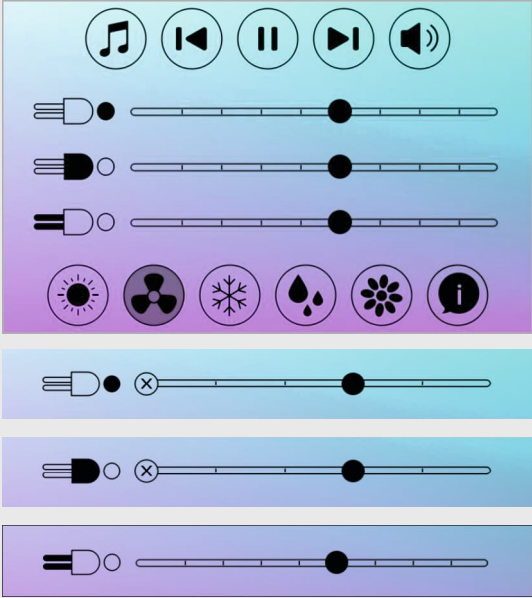
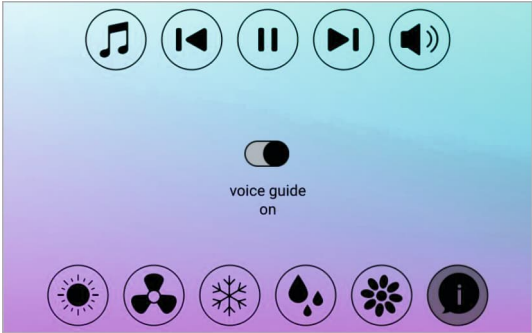
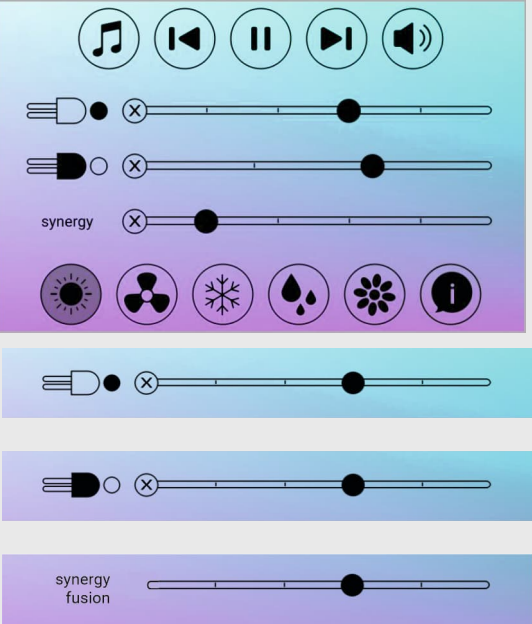



Pictogram selection / key sequence	Description/ Display	Information
	Fans (face, body and foot fans) 	The fans can be set separately for the face, body and feet. If the user does not change anything, the fan settings are automatically adapted to the temperature. Adjust face fan: Levels 0–9 Adjust body fan: Levels 0–9 Adjust feet fan: Levels 0–9
	VOICE GUIDE VOICE GUIDE on / off 	The VOICE GUIDE guides the user through the entire operating process. This function can be switched on and off at any time.
	Intensity 	Regulate UV intensity in the facial area, levels 0-3 Regulate UV intensity in the body area, levels 0-3 Regulate FUSION Light, levels 0-5 FUSION Light uses the synergy of red and blue light.

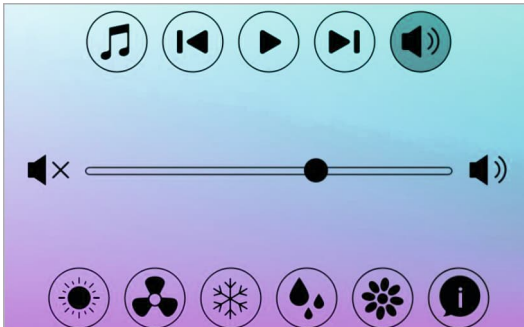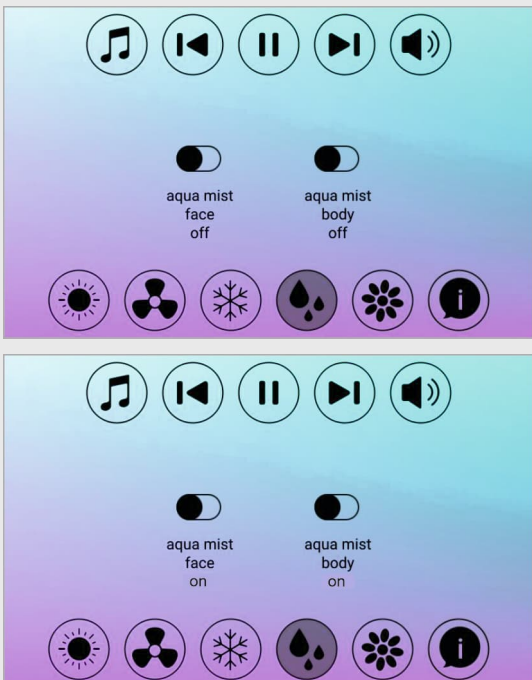Pictogram selection / key sequence	Description/ Display	Information
	Volume 	Levels 0 - 14
	AQUA system 	AQUA FRESH for body and face on/off

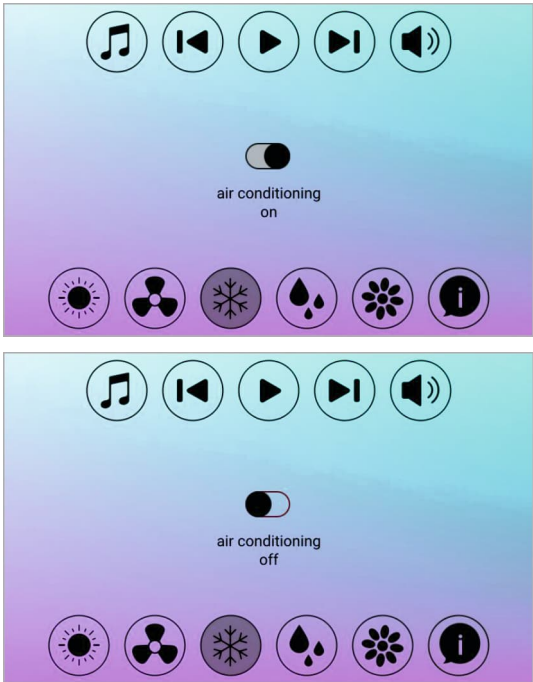

Pictogram selection / key sequence	Description/ Display	Information
	Air conditioning 	Air conditioning on/off
	EMERGENCY OFF 	When the EMERGENCY OFF button is pressed, the entire unit apart from the INTERIOR DISPLAY switches off. In this state, a display appears to show that the EMERGENCY OFF button has been operated. The edges of the EMERGENCY OFF button also flash red at the same time. The displays appear in an alternating pattern The tanning time will keep running. The VOICE GUIDE provides voice assistance. After being blocked for 2 seconds, the EMERGENCY OFF can be reversed again. The unit restarts in tanning mode.

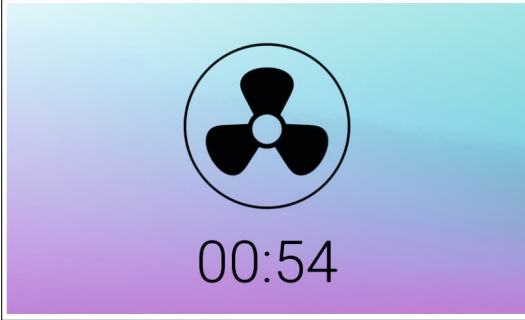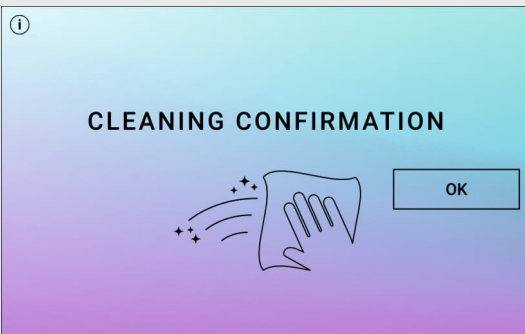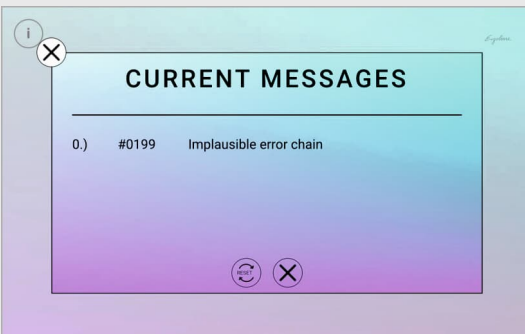Pictogram selection / key sequence	Description/ Display	Information
EXTERNAL DISPLAY and INTERIOR DISPLAY after the tanning session		
	AFTER THE TANNING SESSION: Fan run-on	
	Press 'OK' to return to the start page.	When the cleaning mode is activated in Professional Setup Manager and the run-on time of the device fan has finished, cleaning must be confirmed after every tanning session by pressing the START/STOP button.
	Error message	
	Current error message	

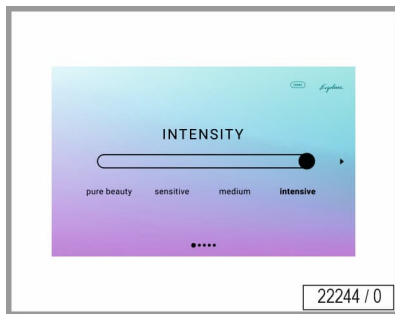

12.7 Selection of the application

Before the session begins, the desired application type must be selected.

- PURE BEAUTY: UV-free program
 - SENSITIVE: Low UV intensity
 - MEDIUM: Medium UV intensity
 - INTENSIVE: Maximum UV intensity
- Move the slider for the required application type or press directly on the program in question or on the position in the slider.



NOTE:

If no application type is selected before the tanning session, the user can also select their preferred tanning program in the INTERIOR DISPLAY. If no option is selected, the unit starts with the application type 'INTENSIVE'.



NOTE:

The application types can be activated or deactivated in PROFESSIONAL SETUP MANAGER.

12.8 Operating display of the sensor

Not applicable for this device.

12.9 Sun Select setting with the outer interface

Not applicable for this device.

12.10 Measurement (automatic mode)

Not applicable for this device.

12.11 Connections



WARNING!



WARNING!

Danger of hearing damage!

Using earphones or headphones at high volume can result in permanent hearing damage.

- Do not set the volume too high.

12.11.1 Couple with Bluetooth® devices

The user can connect their own private smartphone with Bluetooth® to the device.

Pairing between the solarium and the private smartphone of the user is only possible via Bluetooth®¹ Connect. When using Bluetooth® Connect, the user can transfer their favorite music into the solarium wirelessly (e.g.) from their smartphone. The INTERIOR DISPLAY is used to operate the system during the tanning session.



NOTE:

The Bluetooth® function is permanently activated.



NOTE:

Start music with the audio player via Bluetooth®.

Once successfully paired, an announcement is made via the Voice Guide, e.g.:


'Your smartphone is connected to the solarium'.

Display in the INTERIOR DISPLAY when successfully connected.


After tanning, an announcement is made via the Voice Guide, e.g.:
'Bluetooth® connection terminated'.

¹ Communication system: Bluetooth® standard version 3.0, version 2.1 and EDR; max. operating range: approx. 10 m; frequency range: 2,4 GHz range (2,4000 GHz – 2,4835 GHz); compatible Bluetooth profiles: A2DP, AVRCP; equipment supported at the same time (pairing): one device

Activate Bluetooth® Connect in EXTERNAL DISPLAY

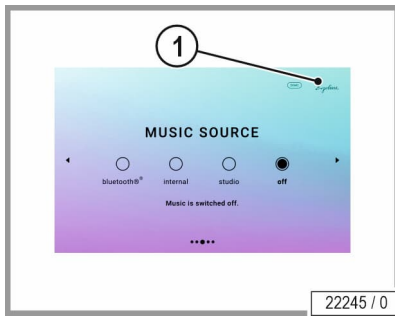


- Press the Ergoline logo (pos. 1) briefly to access PROFESSIONAL SETUP MANAGER PLUS.

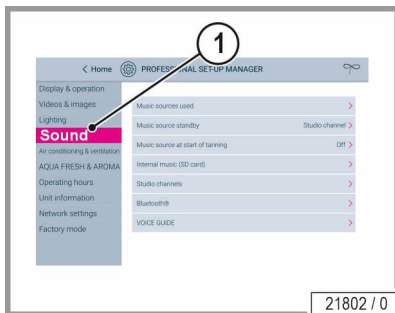

- Press 'Sound' (1) in the user profile.




- Select 'Bluetooth®' (1)

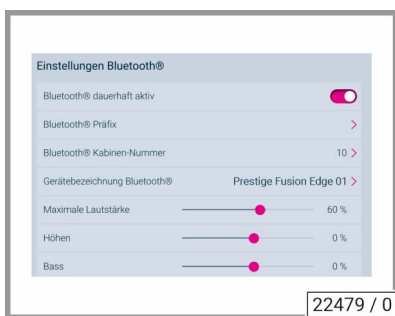


- Move the slider to activate permanently the function  or deactivate it .

Successful Bluetooth® connection in the INTERIOR DISPLAY

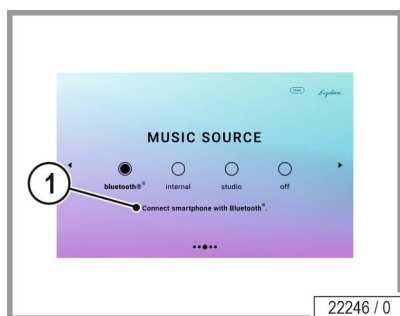

- Status display (1) when the units have been successfully paired.

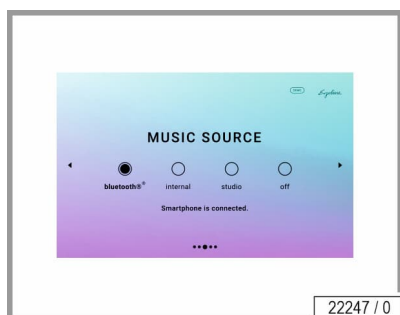

Audio sources: Bluetooth® selection in the INTERIOR DISPLAY.



12.11.2 Smartphone

CAUTION!



The heat might damage your smartphone!

- Do not place the unit directly in the radiation area.



NOTE:

The personal use of an music files during tanning is not a public broadcast in copyright terms, so that there is no obligation for registration or payment by the studio owner to the corresponding copyright owning company. Copy right laws apply to the owner of the music files.

The same regulations apply for the official use of music files as for other music sources: As studio owner you are only allowed to use original audio obtained from legal sources. Proof of the legitimacy of any audio used should be available for viewing upon demand of any regulatory body. Please refer to <http://www.riaa.com> for more information.


The user can connect their own private smartphone with Bluetooth® to the device.

Smartphone connection: see the documentation from the manufacturer of the smartphone.

12.11.3 Smartphone Wireless Charging (Option)

Smart Phone wireless charging (Qi) (Option)

Charge your smart phone wirelessly with this new technology feature. With smartphone wireless charging, you can power your smartphone without plugging in a cable. Simply place your compatible smartphone on the charging station and the charging process will start automatically.

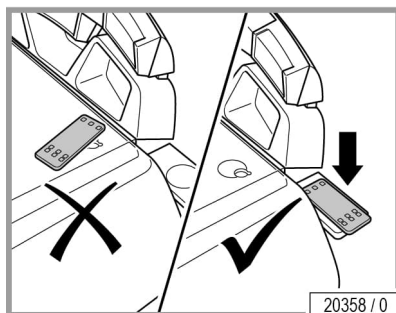

- Place your Qi-compatible smartphone in the middle of the wireless charging station with the display facing upward. If necessary, adjust the smartphone slightly until the charging function is activated in the smartphone.



NOTE:

Do not place magnetic strips or chip cards (ID cards, credit cards, etc.) or metallic objects on the charging station. Some mobile phone cases can interfere with the charging performance.

12.12 How to use



NOTE:

Before use the device must always be cleaned and disinfected! See chapter 12.15 How to clean/disinfect.




12.12.1 How to start

The device is started automatically with an internal or external timer.



NOTE:

See separate document 'Timer Control Module' #1030705-.. in the Technical Documentation folder.

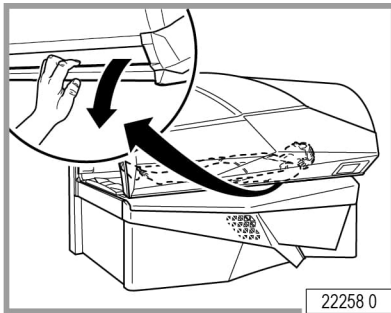

Preparation time

Before the lamps turn on, you have a few minutes to prepare yourself. During the preparation time you can switch on the lamps at any time by pressing the START/STOP button.

- Remove your clothes and all jewelry.
- Remove make-up and other cosmetics.
- Remove glasses. Contact lenses can be worn under the protective goggles.
- Put on the protective goggles.
- Lie down on the bed surface.
- Close the canopy.
- Press the START/STOP button.

12.12.2 Application tips

Tanning device

When describing the operation, the tanning device is often shown with the canopy open. During tanning the canopy must always be closed.

Proper operation is not possible with the canopy open.

- Lie down and place your head on the headrest or as indicated by the ergonomic base panel to maintain the proper distance between skin and lamps.

12.12.3 How to stop

The tanning session ends automatically after the preset time has run down. The internal body cooling fan continues to run for approx. three (3) minutes to sufficiently cool the device.

- To interrupt a tanning session, press and hold button START/STOP anytime during a session.
- Press START/STOP again to restart the lamps.



12.13 What to do after the treatment

12.13.1 Cleaning and disinfection

WARNING!



Infections can be transferred through skin contact. All items/equipment components, with which the user can come into contact during tanning, must be disinfected after every tanning session:

- Protective goggles
- Acrylic panels
- Handles and INTERIOR DISPLAY
- Adjustable air nozzles
- Use only EPA registered quaternary ammonium germicidal based detergent solution (follow product label for use-dilution), such as Lucasol One Step, to clean and disinfect the tanning system and its components.



NOTE:

For thorough cleaning and disinfection, the product must be allowed to remain in contact with the surface being cleaned and disinfected for a specified amount of time.

This specified amount of time depends on the cleaner/disinfectant which is used. Follow the directions for use of the cleaner/disinfectant.

After this specified application time remove remaining cleaner/disinfectant from the surfaces of the device. Use a single-pass paper towel.

Once the remaining cleaner/disinfectant has been removed, perform a visual inspection for signs of any remaining cleaning solution, or areas still soiled. If either are remaining, repeat the cleaning process until a visual inspection can be successfully completed without the need for additional cleaning.

If any of the components listed above cannot be successfully cleaned and disinfected, they must be replaced.

12.14 Safety instructions for cleaning/disinfection and maintenance




DANGER – HIGH VOLTAGE!




You can be killed or injured by an electric shock! During maintenance and service work there is a risk of touching live parts and receiving a fatal electric shock.

- The device must not be in use.
- Disconnect device from power supply before opening.
- Do not reach behind covers and do not open the device with the device switched on.
- Refit any safety devices (e.g. switches) after the work has been completed.

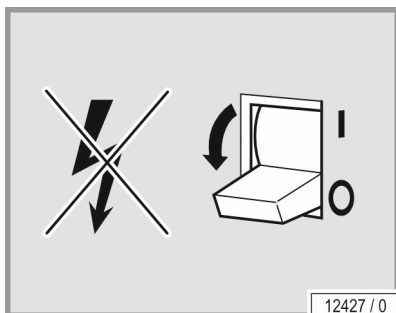

12427 / 0

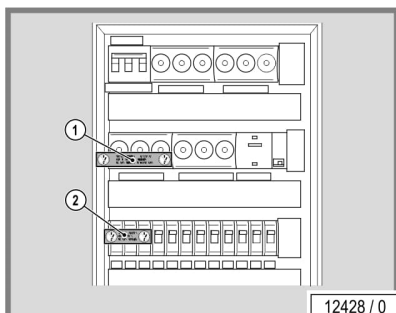

12428 / 0

If work is to be performed on the devices, they must be deenergized. That means that all live cables must be switched off.

Switching off the device alone is insufficient, as certain points may remain energized. Therefore, switch off fuses before performing any work and – if possible – remove them.

Accidental reactivation can result in serious accidents. Immediately after deenergizing, secure all switches or fuses used for deenergizing against being switched on again.

- Lock the fuse box with a padlock.

In case of circuit breakers which cannot be unscrewed, a strip of adhesive tape may be applied over the actuation lever (1 + 2) with the wording 'Do not switch, danger!'.

A prohibition sign with the text:

'Work in progress!'

'Place:'

'Sign may only be removed by:'

must always be securely mounted immediately.

It is imperative that you, the owner and/or operator, check all components for any signs of wear which may occur through normal use.

- Observe the cleaning/disinfection and maintenance schedule specified in the tables in chapter 12.15.2 and 12.16.2.
- Only replace low pressure lamps with the original type or compatible lamps.

Should you require any assistance or need additional information, please call Global Service USA at 800 445 0624, Monday through Friday 8:00 a.m. - 5:00 p.m. CT.



NOTE:

The service of the device may only be carried out by a (Level 2) JK Factory Certified Technician.



 WARNING!



Injuries and damage due to improper maintenance!
If incompatible UV lamps are installed, the share of harmful UV radiation may increase. Sunburn and other skin damage may result.

Improper maintenance can cause the device to be damaged or to become unusable.

- Always comply with the specified maintenance intervals, see chapter 12.16.2 Maintenance plan.
- Follow the cleaning/disinfection instructions.

Danger of burns from hot device parts!

If the Model-No.: JK 205 / 52-4 HLT AC was operated before being switched off and opened - housing parts may be hot.

- Before replacing spare parts, wait until metal parts of the device have cooled down sufficiently.

Danger of squeezing!

When opening and closing the panels and acrylics, you can squeeze your fingers.

Maintenance and care play a major role in deciding the devices performance and appearance over its useful life. Diligent compliance at the specified intervals is absolutely necessary to ensure the proper operation of your device.

The current operating hours of the parts requiring maintenance can be displayed in the Presetting mode – see separate document 'Professional Setup Manager' #1028366-.. in the Technical Documentation folder.

Please note that the device must be inspected regularly by a JK authorized representative every 12 months (from date of installation) to maintain its proper condition!

Acrylic panel

NOTICE

Cosmetics may cause cracks to form on the surface!

Over the long-term cosmetics or sunscreens cause damage (e.g. crack formation on the surface).

- Ensure that cosmetics and sunscreens are removed before tanning.

The acrylic panels for the tanning devices are produced of acrylic glass developed especially for this application. The acrylics used feature a particularly high UV permeability and resistance, as well as an easy-care, hygienic surface that is gentle on the skin.

The acrylic panels are formed to device-specific shapes in a technically complex production process. Despite state-of-the-art production know-how, the presence of minor spots, air bubbles or streaks in the acrylic panels is unavoidable. In addition, hairline cracks can occur on the acrylic panel during operation.

These occurrences are material-related and are unavoidable in processing. However, they have no significant effect on use and are therefore not accepted as defects.

Over the course of time the acrylic panel will become discolored as a result of usage and must be replaced by customer-service personnel on a regular basis.

The partition works as a UV filter and must be replaced by customer-service personnel on a regular basis.



12.15 How to clean/disinfect

WARNING!



Infections can be transferred through skin contact.

All items/equipment components, with which the user can come into contact during tanning, must be disinfected after every tanning session:

- Protective goggles
- Acrylic panels
- Handles and INTERIOR DISPLAY
- Adjustable air nozzles
- Use only EPA registered quaternary ammonium germicidal based detergent solution (follow product label for use-dilution), such as Lucasol One Step, to clean and disinfect the tanning system and its components.



NOTE:

For thorough cleaning and disinfection, the product must be allowed to remain in contact with the surface being cleaned and disinfected for a specified amount of time.

This specified amount of time depends on the cleaner/disinfectant which is used. Follow the directions for use of the cleaner/disinfectant.

After this specified application time remove remaining cleaner/disinfectant from the surfaces of the device. Use a single-pass paper towel.

Once the remaining cleaner/disinfectant has been removed, perform a visual inspection for signs of any remaining cleaning solution, or areas still soiled. If either are remaining, repeat the cleaning process until a visual inspection can be successfully completed without the need for additional cleaning.

If any of the components listed above cannot be successfully cleaned and disinfected, they must be replaced.

12.15.1 Cleaning and disinfection of surfaces

Acrylic panel

NOTICE!

Do not rub with a dry cloth – danger of scratching!

- Other cleaning agents, especially disinfectants or solvents (e.g. Lysoform, ethyl alcohol or other liquids containing alcohol) must never be used for cleaning.
Failure to observe this voids all warranty claims.

Acrylic panels (2) & (8) & (9) referenced in section 12.15.2 'Cleaning/disinfection plan'

These panels are not in direct contact with the user, however they can become soiled if the user inadvertently touches them. If these panels are left soiled for an extended period of time, the heat and light from the tanning lamps may cause the soiled areas to become permanently stained. Therefore we recommend frequently inspecting and cleaning these panels when necessary, to ensure the serviceable life of the acrylic.

- Remove fingerprints and other soiling carefully.

Plastic surfaces

For cleaning the remaining painted and unpainted plastic surfaces, it is best to simply use warm water and commercially available soft chamois leather. Never use aggressive cleaning agents containing alcohol or essential oils. These may lead, in the long run, to damages not covered by the warranty.

During cleaning a slight discoloration of the leather cloth by the rubber seals should be expected for production-related reasons.

Prevent damage to the acrylic glass and plastic surfaces.

- Remove rings, watches, bracelets etc. before starting cleaning work.





SPECTRA LED boards

CAUTION!



SPECTRA LED boards are very sensitive optical components.


Risk of scratches!

Failure to observe this information will invalidate any warranty claims.



- Do not clean using mechanical equipment and do not clean with moisture!
- Do not spray the components!
- Do not buff or rub the components!
- Do not vacuum the components!
- If the components are dusty, use a clean, dry microfiber cloth.
- Only use the microfiber cloth for SPECTRA LED boards!
- Once used, clean the microfiber cloth according to the washing instructions for the cloth.
- Do not insert the microfiber cloth directly into the reflector clusters. Risk of scratches!
- Wipe the surface of the reflectors gently without applying any pressure!
- If the SPECTRA LED boards need to be cleaned mechanically (buffed), always contact Customer Service before cleaning – see page 2.

12.15.2 Cleaning/disinfection plan

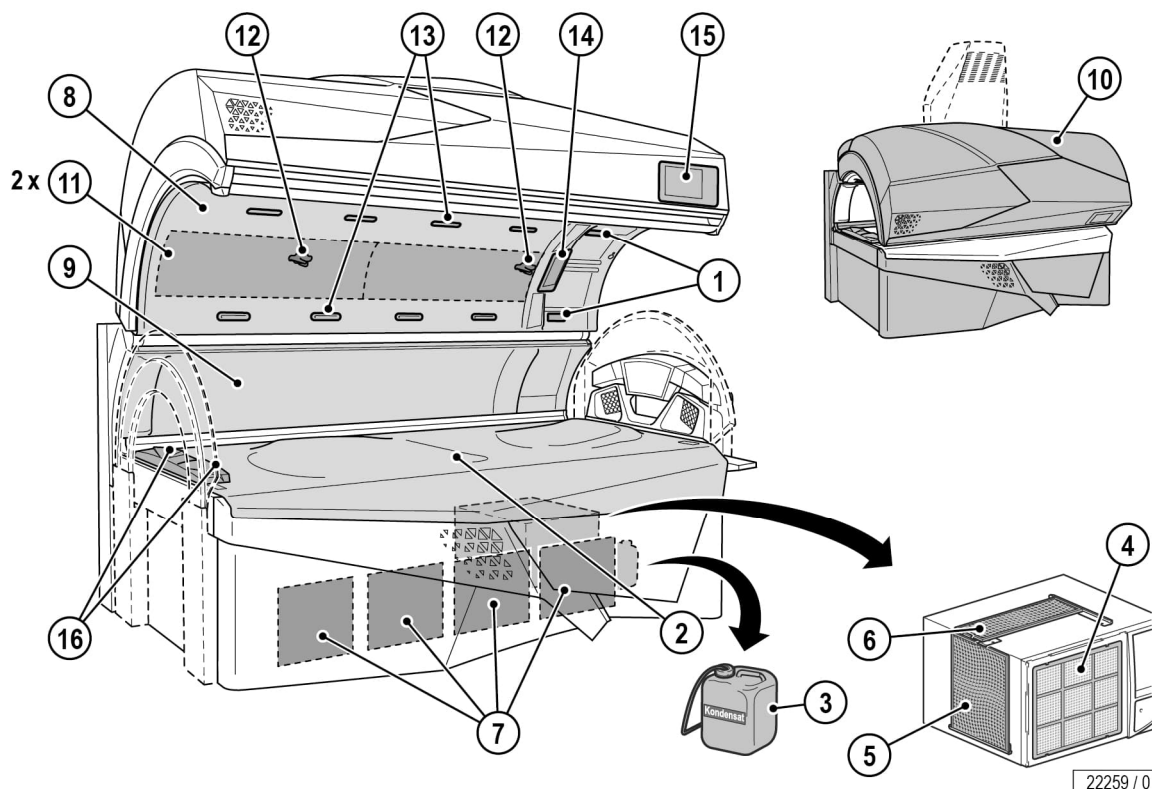

22259 / 0

Component		Interval			Activity	See page
		After each tanning session	When necessary	50 h		
1	Adjustable air nozzles/ AROMA	X			Clean and disinfect	70
2	Acrylic glass panel	X			Clean and disinfect	72
3	Condensation tank		X		Empty	91
4	Filter mat		X		Clean	91
5, 6	Filter			X	Remove and clean filter	91
7	Filter			X	Remove and clean filter	87
8, 9, 10	Surfaces		X		Clean	72
11	Filter mats		X	X	Clean	90
12	nozzles AQUA / AROMA SYSTEM		X		Clean	70
13	Body cooling air nozzles		X		Clean	70
14	INTERIOR DISPLAY	X			Clean and disinfect	70
15	EXTERIOR DISPLAY	X			Clean and disinfect	70
16	Body cooling air nozzles, feet end		X		Clean	70
Protective goggles		X			Clean and disinfect	70



NOTE:

If desired, you may set the unit to require that cleaning/disinfection be confirmed after each tanning session by pressing the START/STOP button (when the cool-down time for the main fan has finished).

Information about the setting options can be found in the separate document 'Professional Setup Manager' 1028366-.. which is provided in the Technical Documentation folder.

12.16 How to maintain

12.16.1 Technical modifications

The device has been constructed in accordance with current safety regulations. The illustrations and specifications on these instructions are subject to technical modifications which are required in order to improve the device.

Unauthorized modifications and changes to the device and its control unit are prohibited.

Use only OEM spare parts.

12.16.2 Maintenance plan



NOTE:

The service of the device may only be carried out by a (Level 2) JK Factory Certified Technician.

NOTICE


Only use OEM spare parts of the same type! The use of other parts will void the manufacturer's warranty!

Any liability is excluded in case of damage or injury proven to be the result of the use of non-genuine spare parts.

The following maintenance activities shall be performed by the studio operator or a (Level 1) JK Factory Certified Technician.

The following items are considered consumables and should be replaced as noted. Replacement of these components helps ensure continued performance of the device.

Maintenance performed by the studio operator or a JK Factory Certified Technician

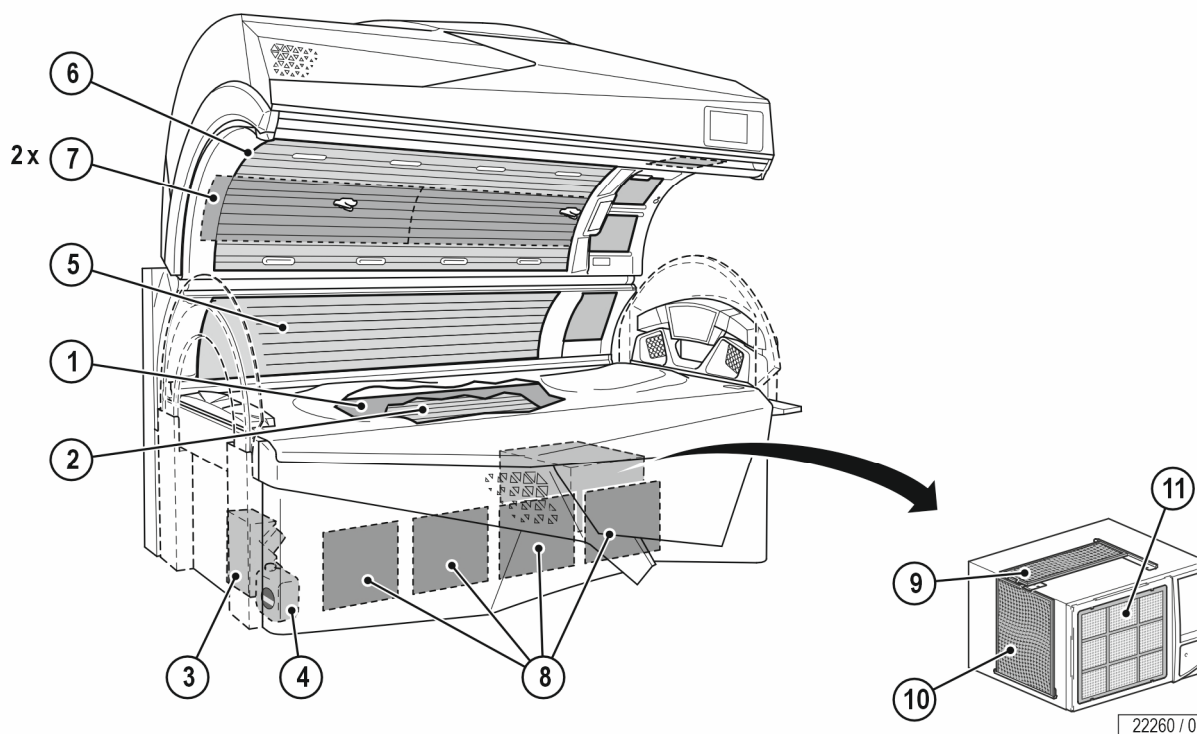

Component		Interval				Activity	See page
		When necessary	300 operating hours	1000 operating hours	3000 operating hours / 2 years		
1	Partition				X	Replace	78
2	Low-pressure lamps, base			X		Replace	85
3	AQUA SYSTEM	X				Replace	95
4	AROMA tank		X			Replace	95
5	Low-pressure lamps, side section			X		Replace	85
6	Low-pressure lamps, canopy			X		Replace	86
7	Filter mat			X		Replace	90
8	Filter				X	Replace	87
9	Filter				X	Replace	91
10	Filter				X	Replace	91
11	Filter mat				X	Replace	91



Maintenance performed by authorized, trained and qualified staff



WARNING!



WARNING!

Danger to persons from maintenance work that has not been carried out!

If maintenance work is not carried out, it can lead to material damage or personal injuries!

- Maintenance work may only be carried out by personnel who have been authorized, trained and qualified by JK Products & Services, Inc.!
- The operator is responsible for compliance with the maintenance intervals!

The maintenance work must be carried out in accordance with checklist 1019858-.. by a JK Factory Certified Technician at the manufacturer or by personnel who have been authorized, trained and qualified by the manufacturer.

The correctly carried out maintenance work must be entered and confirmed in checklist 1019858-...

The maintenance work must be carried out at the following intervals:

- Every 1500 operating hours
- Annually or every 2000 operating hours, whichever is sooner.
- After 5000 operating hours
- After 10 years or 20,000 operating hours, whichever is sooner.


Once the age of the device reaches ten (10) years from the date of manufacture, its condition must be assessed by a (level 4) JK Factory Certified Technician before use of the device can be continued.

Failure to have this device assessment performed may result in personal injury or property damage.


Any liability is excluded if use of the device continues ten (10) years after the date of manufacture, without the "condition assessment" having been performed.

12.16.3 Cleaning and maintenance work preparation

Service kit

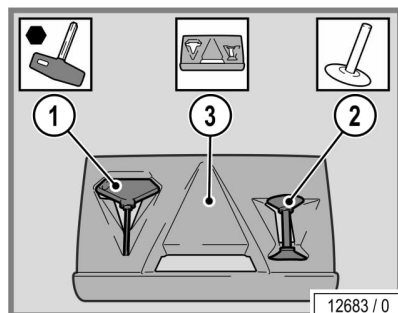


1. Allen key
2. Suction cup for acrylic panel and canopy panel
3. Scratch prevention for the entry area (support cushion for the canopy)

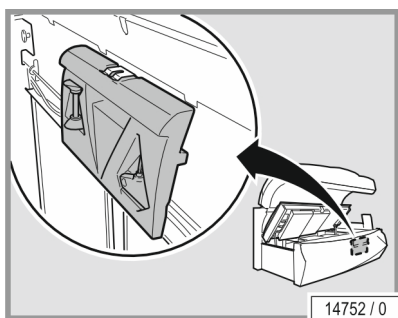


The service kit is fitted on the inside of the front panel.


- Opening the bed base: see page 80.

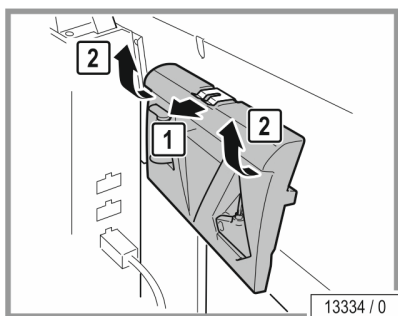


- Remove service kit from support.

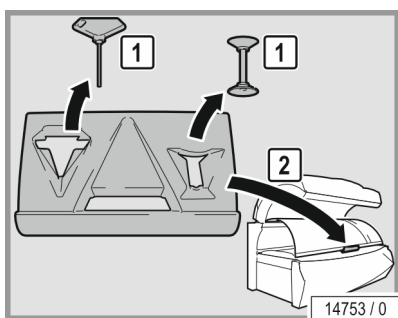

- Remove the Allen-key and suction cup.

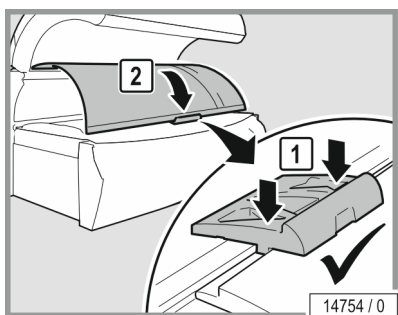


- Use the cushion as scratch prevention when opening the canopy panel.

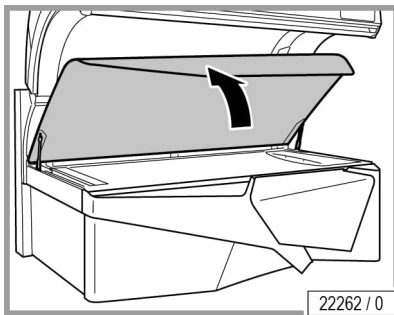


Lift up the acrylic panel and remove the partition


- Lift the acrylic glass panel up..
The acrylic glass panel will automatically be held in place.

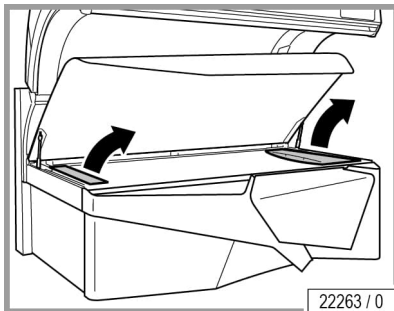

- Remove the lamp covers at the head and foot ends.

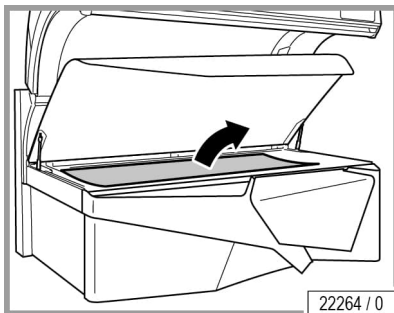


- Raise the partition with the suction cup.
- Remove the partition.

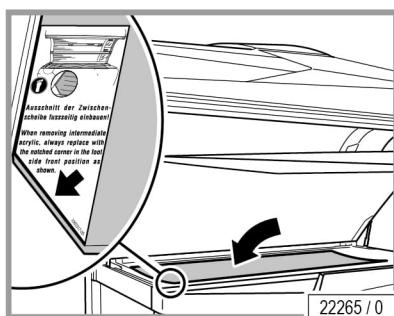


The assembly is the same process in reverse order.

When assembling the device please note:

- You must ensure that the recesses are at the foot end when you fit the partition.

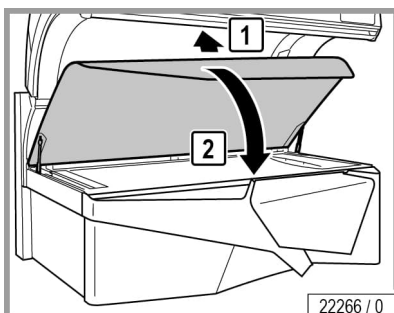


- Lift the acrylic up slightly and then close it.

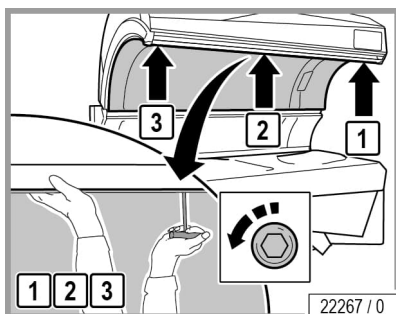


Removing the canopy panel

- Turn the locks through 90°: first the outer locks, then the lock in the middle.
- Support the canopy panel with one hand so that it does not fall down.

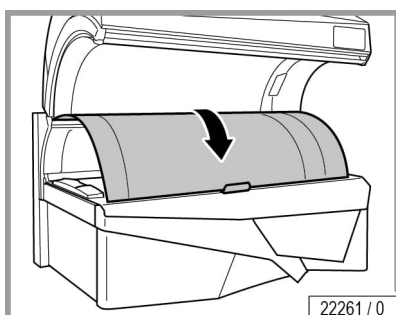

- Carefully lay the panel aside on the scratch protection (service kit).

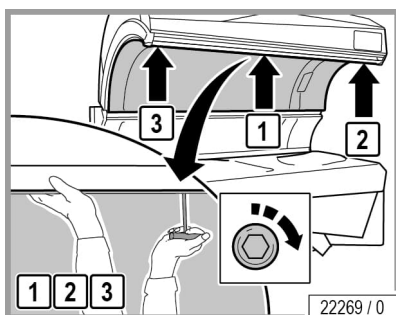


The assembly is the same process in reverse order.


When assembling the device please note:

- Support the canopy panel with one hand so that it does not fall down.
- Re-lock the locks: first the lock in the middle, then the outer locks.


Removing the side section panel

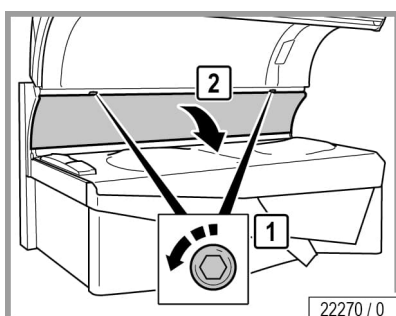

- Turn the locks through 90°.

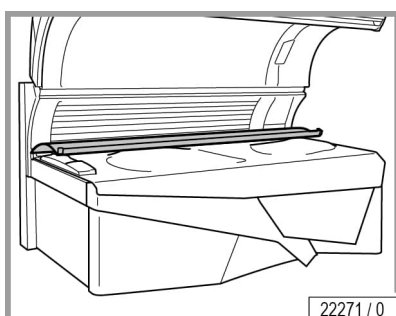

- Open the panel and lay it down carefully.

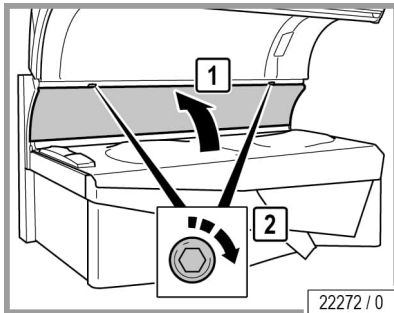


When assembling the device please note:


- Re-lock the locks 90°.

Opening the bed base


- Insert the tank hook into the opening and hook it into the locking bar.

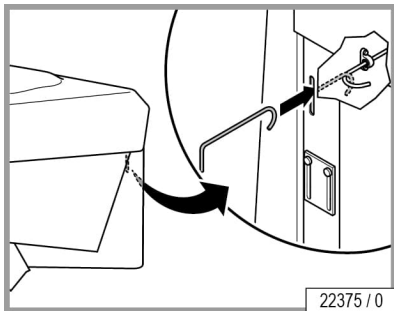


- Pull the tank hook forwards.
- Press the tub down slightly.

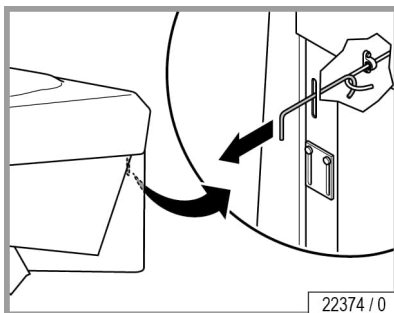


The bed base opens automatically.

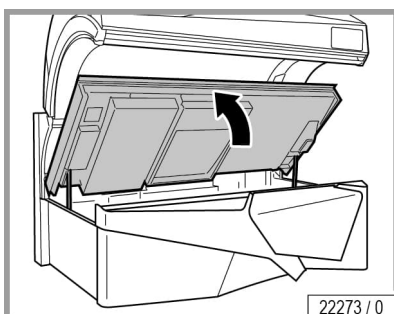

- Close the bed base. You should hear the bed base click into place.

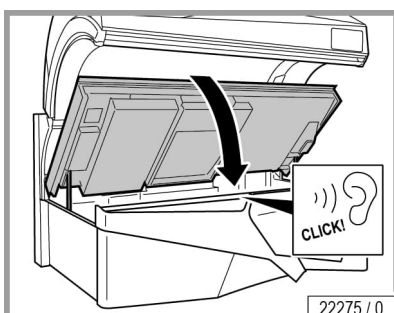

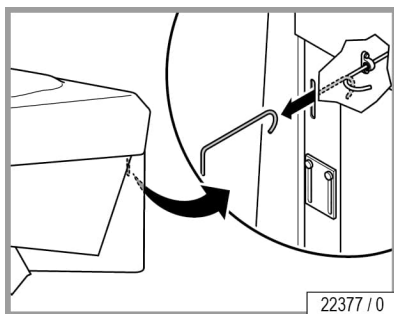

- Remove the tank hook from the opening.



12.16.4 Instructions for replacing the lamps

WARNING!



WARNING!

Danger of being burned by an over-powered lamp!
If a new lamp set is replaced without resetting the operating hours, the lamp set may be operated over-powered. This can lead to sunburn.

- The accompanying NFC Lamp Tag must always be used when changing the UV low pressure lamps!

The lamp's UV effect and therefore the tanning effect decrease over time. In electronically controlled low pressure lamps, this loss of effect can be compensated. The chip card is used to control the changing periods. You must adhere to the replacement intervals specified in the maintenance plan.



NOTICE:

Small quantities of mercury can escape if the lamp glass breaks! Please comply with the following instructions:

- Immediately disconnect the device from the mains power.
- Children must leave the room immediately.
- Ventilate the room for at least 15 minutes.
- Put on disposable gloves.
- With the window open: Collect the glass shards and escaped mercury in a sealable container.
- Bring the container to a collection site for waste lamps.



NFC: Lamp replacement



WARNING!



WARNING!

Danger of being burned by an over-powered lamp!
If a new lamp set is replaced without resetting the operating hours, the lamp set may be operated over-powered. This can lead to sunburn.

- The accompanying NFC Lamp Tag must always be used when changing the UV low pressure lamps!



NOTE:

Each new lamp set must be activated with the accompanying NFC lamp card.

Each NFC lamp card can only be used one time, then it is invalid.

The lamp set must be installed first, then the lamps have to be activated with the NFC lamp card. For this purpose, the operating hours must be reset.


Resetting the operating hours



NOTE:

To reset the operating hours of the lamps, you need access to the Professional Setup Manager.

- Go to Professional Setup Manager.
- Activation in the menu OPERATING HOURS.

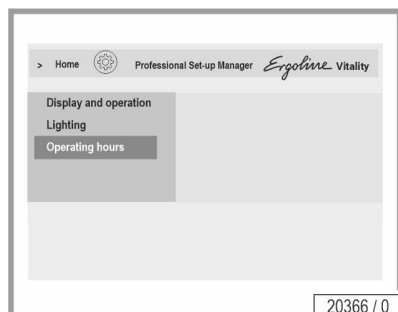

- Hold the NFC lamp card against the NFC point.



The middle point of the NFC point is green:
The operating hours of the lamps are reset to 0.



NOTE:

Both NFC lamp cards must be activated. Hold the NFC lamp card of lamp set type A and the NFC lamp card of lamp set type B against the NFC point one after another.

Low-pressure lamps


WARNING!



WARNING!


Danger of burns from hot lamps and device parts!
If the tanning device was operated before being switched off and opened, lamps and housing parts may be hot.

- Before replacing lamps or other spare parts, wait until lamps and metal parts of the device have cooled down sufficiently.

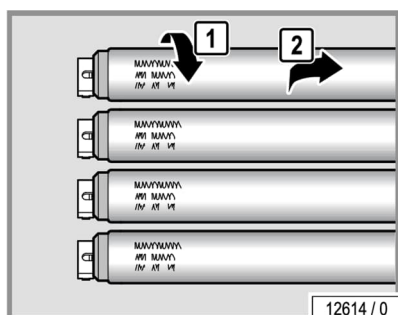

12614 / 0

- Replace faulty low-pressure lamps immediately.
- Always replace the entire set of lamps after the specified operating time.
- Turn 90° and carefully remove from the socket.

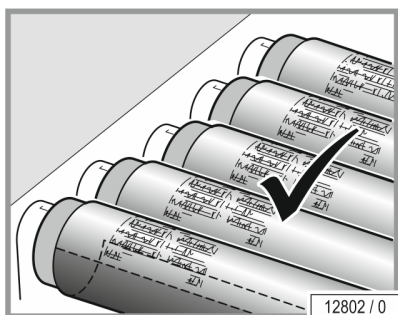

12802 / 0

- Low-pressure lamps possess a reflector which directs the light outwards.
- The lamps must be mounted in such a way that the rear side of the reflector is located on the inside of the unit.


CAUTION!



Risk of fire due to incorrect alignment of the lamps!


Incorrect alignment of the lamps leads to loose connections. This can cause overheating and sparking.

- Check that the socket is correctly aligned!

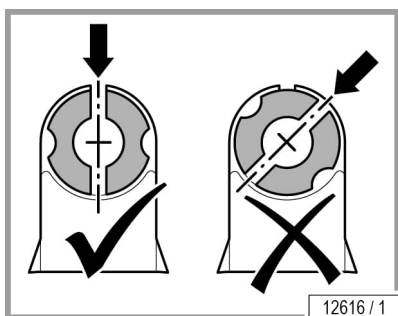


12616 / 1

- Before inserting the new lamp, the alignment of the inner part of the socket must be checked.

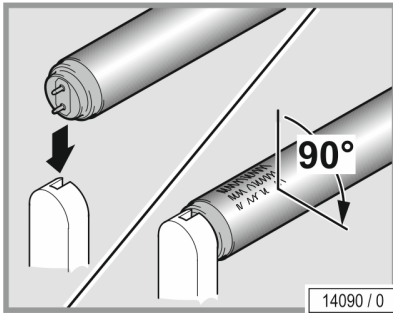

- Insert the contact pins of the lamps vertically into the socket from above.
- For correct contacting, the lamp must be rotated 90° around its own axis.
- The lettering must be oriented towards the outside (i.e. towards the tanning room or towards the user).

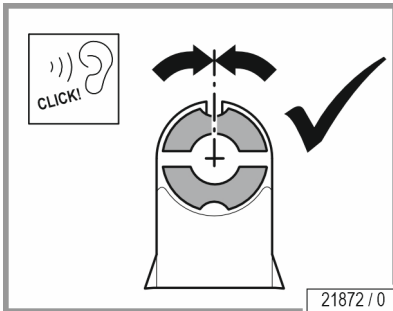

Makrolon tubes

Not applicable for this device.

Starter

Not applicable for this device.


High pressure lamps and filter panels

Not applicable for this device.

12.16.5 Cleaning and disinfection of the sensor

Not applicable for this device.


12.16.6 Cleaning or replacing lamps in the base

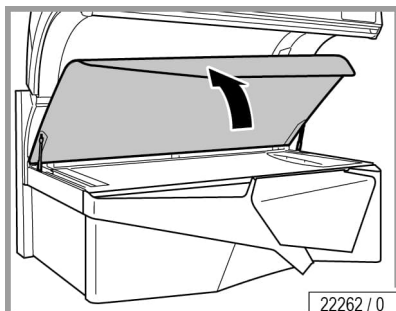

22262 / 0


- Lift up the acrylic panel and then remove the lamp covers and the partition: see page 78.

Replacing lamps: see page 83.

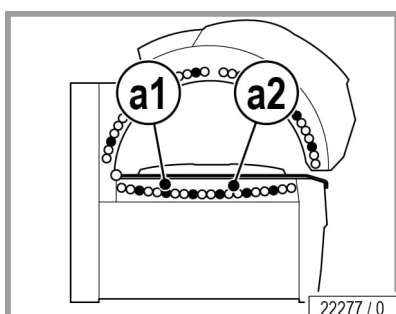

22277 / 0

- Please maintain the correct order of the GENESIS HLT HYBRID LIGHT Technology and GENESIS PLT PURE LIGHT Technology.
a1: GENESIS PLT PURE LIGHT Technology-Low-pressure lamps
a2: GENESIS HLT HYBRID LIGHT Technology

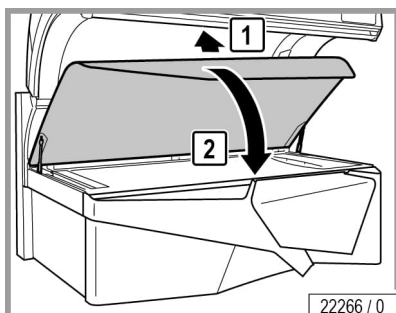


22266 / 0

The assembly is the same process in reverse order.

When assembling the device please note:


- You must ensure that the recesses are at the foot end when you fit the partition.
- Lift the acrylic up slightly and then close it.

12.16.7 Cleaning or replacing the lamps in the side section

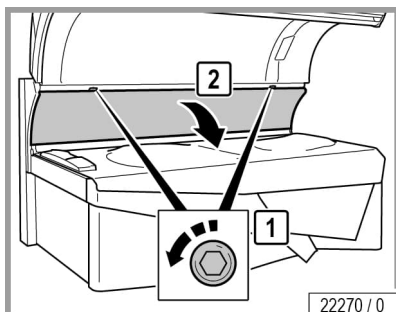


22270 / 0

- Removing the side section panel: see page 79.

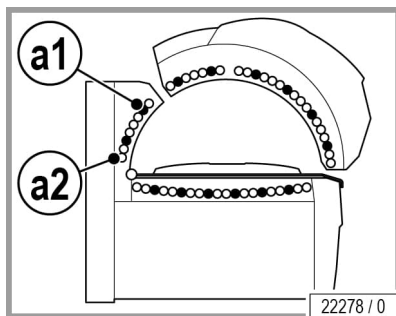


- Please maintain the correct order of the GENESIS HLT HYBRID LIGHT Technology and GENESIS PLT PURE LIGHT Technology.
a1: GENESIS PLT PURE LIGHT Technology-Low-pressure lamps
a2: GENESIS HLT HYBRID LIGHT Technology

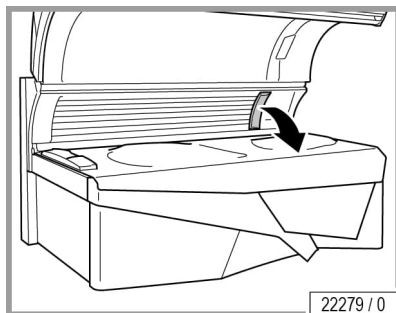

- Remove the lamp cover.

Replacing the lamps:

Low-pressure lamps: see page 83.

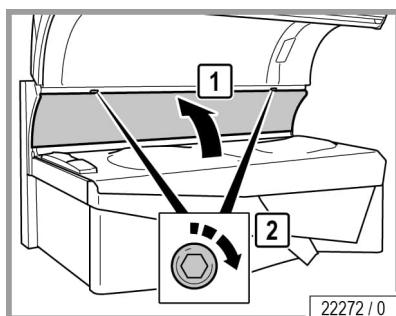


When assembling the device please note:


- Re-lock the locks 90°.

12.16.8 Cleaning or replacing lamps in the canopy


The following components listed in the maintenance plan are fitted in the canopy:

- Low pressure lamps 1.80 m

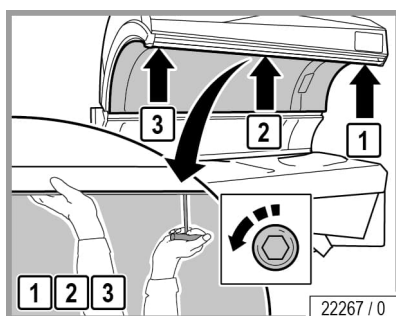


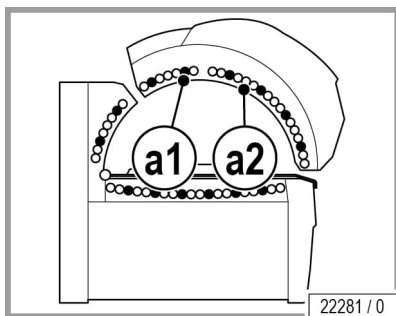

- Please maintain the correct order of the GENESIS HLT HYBRID LIGHT Technology and GENESIS PLT PURE LIGHT Technology.
a1: GENESIS PLT PURE LIGHT Technology-Low-pressure lamps
a2: GENESIS HLT HYBRID LIGHT Technology

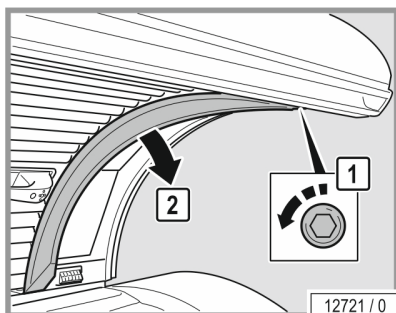

- Remove screw and place the lamp cover carefully on top of the canopy panel.

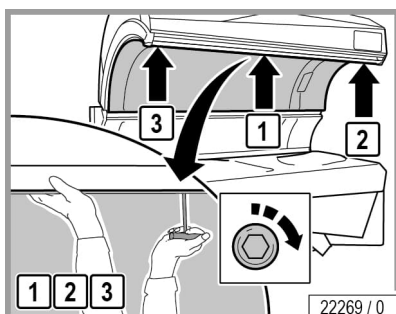



The assembly is the same process in reverse order.

When assembling the device please note:


- Support the canopy panel with one hand so that it does not fall down.
- Re-lock the locks: first the lock in the middle, then the outer locks.

12.16.9 Cleaning the filters in the base


- Opening the bed base: see page 80.

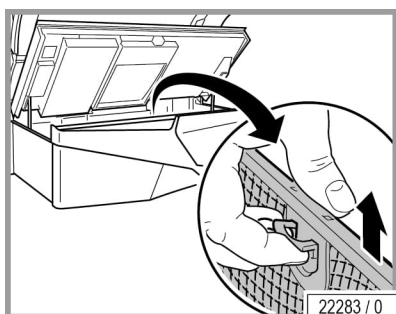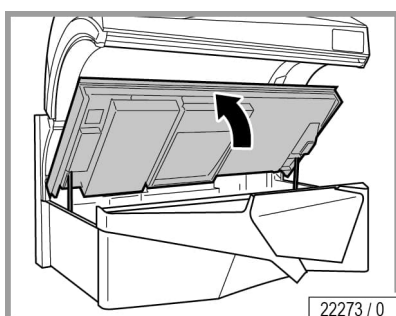

- Remove the filters.

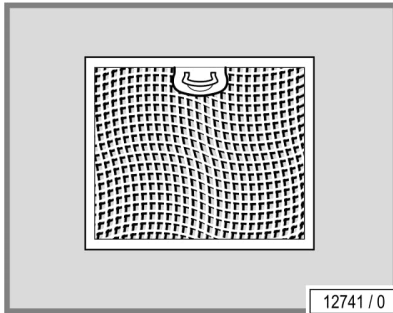

- Clean the filters wet or dry.
Dry cleaning: Vacuum cleaner (depending on the degree of soiling)
Wet cleaning: Use water and detergent or put in a dish-washer

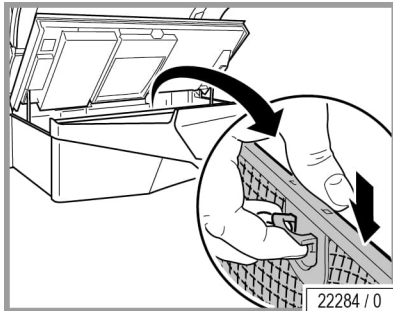

NOTICE

The device may be damaged by moisture!
The cleaned filters must be dry before they are replaced.

- Reinstall the cleaned and dried filters.
- Close the bed base. You should hear the bed base click into place.

12.16.10 Cleaning or replacing the interior lights

Not applicable for this device.


12.16.11 Cleaning or replacing the canopy accent lighting

Not applicable for this device.


12.16.12 Cleaning or replacing the front panel accent lighting

Not applicable for this device.


12.16.13 Cleaning the filters in the base

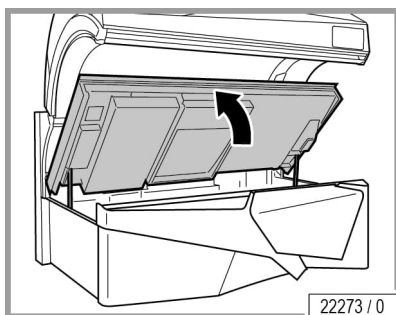


- Opening the bed base: see page 80.

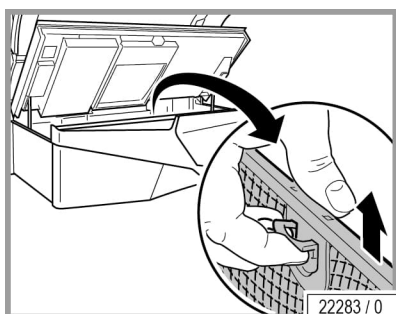

- Remove the filters.

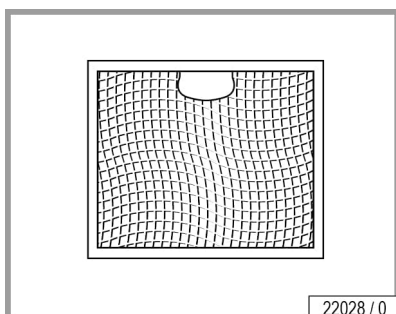


- Clean the filters wet or dry.
Dry cleaning: Vacuum cleaner (depending on the degree of soiling)
Wet cleaning: Use water and detergent or put in a dish-washer

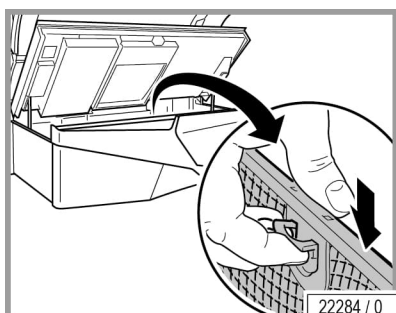

NOTICE


The device may be damaged by moisture!
The cleaned filters must be dry before they are replaced.

- Reinstall the cleaned and dried filters.
- Close the bed base. You should hear the bed base click into place.

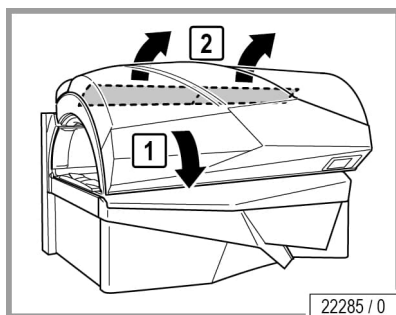

12.16.14 Cleaning the canopy filter mats

- Close the canopy.
- If necessary, cover the canopy in order to prevent the paint from being scratched.
- Remove the filter mats fitted at the back of the canopy.

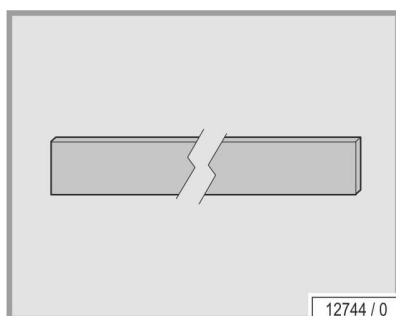


- Dry or moist clean the filter mats or replace with new ones.

Dry cleaning: Vacuum cleaner (depending on the degree of soiling)

Moist cleaning: Water and detergent

- Do not clean in the dish-washer!

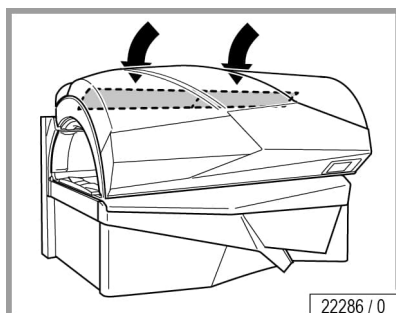

NOTICE

The device may be damaged by moisture!

The cleaned filters must be dry before they are replaced.

- Refit the cleaned and dried filter mats.

12.16.15 Cleaning the filter mats in shoulder tanner

Not applicable for this device.

12.16.16 Air conditioning: Emptying the condensation tank and cleaning the filter



CAUTION!



Inflammable refrigerant in the air conditioning system!

Leaking refrigerant can lead to fires or explosions.

- Avoid sources of ignition! Fire, naked flames and smoking are prohibited.
- No servicing work may be carried out on components in the cooling circuit, e.g. on the compressor, pressure switch or frequency inverter.
- Do not perform any soldering or welding work on the unit.



NOTE:

The filter surfaces must be free from contamination. The filters must be cleaned regularly in accordance with the specifications in the cleaning plan.




NOTE:

The air conditioner contains fluorinated greenhouse gases. Do not release gases into the atmosphere. Information regarding the refrigerant used:: Currently in use are refrigerant R32 (¹GWP: 675) used with a charge of 0.45 kg.




NOTE:

Details on the refrigerant used and the amount can be found on the type plate of the air conditioning system.

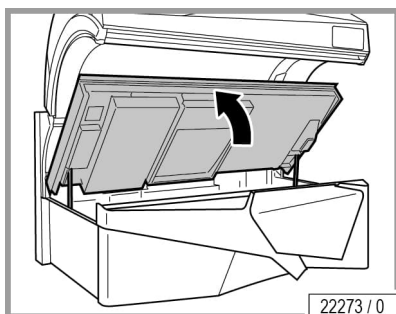


- Opening the bed base: see page 80.


¹ GWP = global warming potential

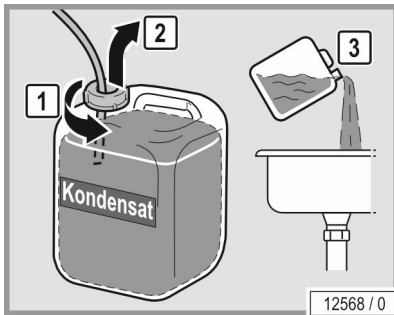


- Bring the condensation tank forwards.
- Disconnect the hose on the condensation tank.
- Empty the condensation tank.

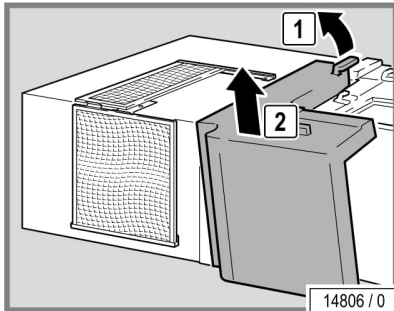


- Remove the cover.

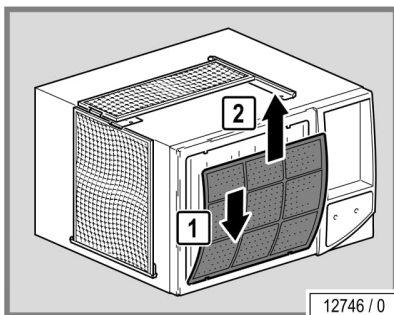


- Remove the filter from the holder.

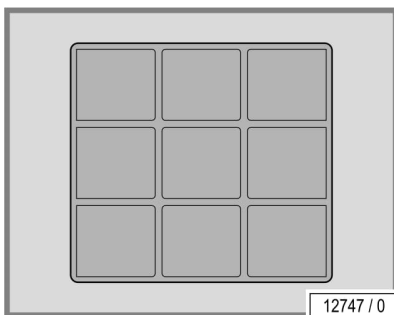


- Clean the filter moist or dry:
 Dry cleaning: Vacuum cleaner (depending on the degree of soiling)
 Moist cleaning: Water and detergent
- Do not clean in the dish-washer!

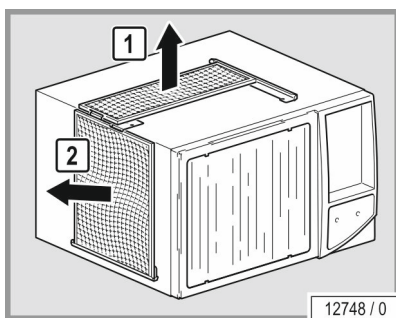


- Remove the filter from the holder.

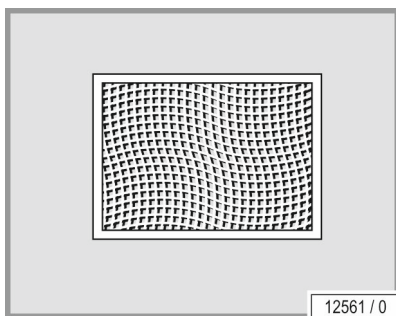

- Clean the filters wet or dry.
Dry cleaning: Vacuum cleaner (depending on the degree of soiling)
Wet cleaning: Use water and detergent or put in a dish-washer

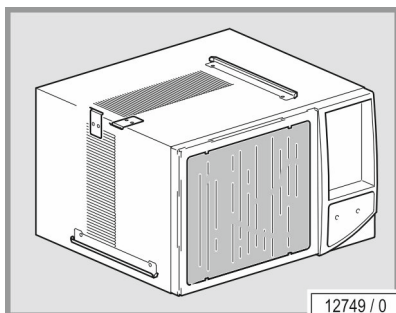



- Use a fin comb to clean the Air conditioning's dirty cooling fins.

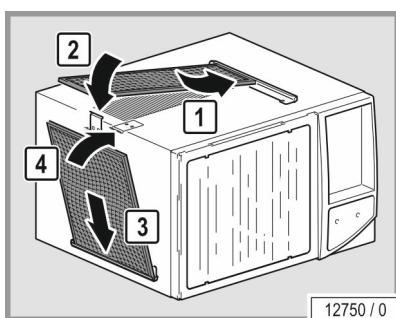


NOTICE

The device may be damaged by moisture!
The cleaned filters must be dry before they are replaced.

- Reinstall the cleaned and dried filters.
- Ensure that the filters are correctly positioned in the holder.

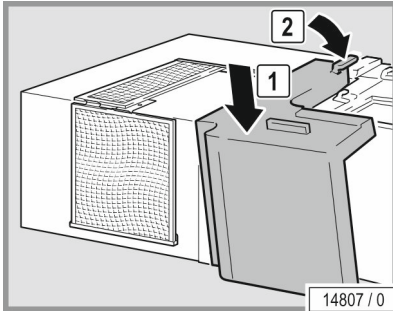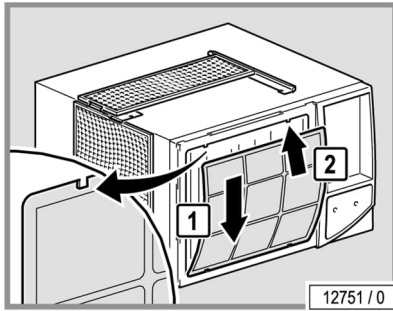

- Attach the cover.

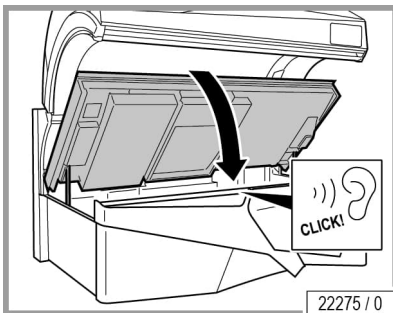

- Connect the condensation tank to the hose.
- Replace the condensation tank.
- Close the bed base. You should hear the bed base click into place.

12.16.17 AQUA / AROMA SYSTEM maintenance



The AQUA SYSTEM function sprays a fine mist of AQUA SOLAR WITH SKIN+ ADDITIVE into the interior of the device for body cooling (see 'AQUA SYSTEM PRODUCT INFORMATION', order no. 1011201-..).

WARNING!



Customer health hazard!

Water that has been contaminated with bacteria can cause skin rashes and other allergic reactions in device users.

- Therefore you must never fill the AQUA SYSTEM canister with tap water or other liquids.
- Only replace the AQUA SYSTEM canister with a genuine canister.
- Do not add any liquid that remains in the old canister to the new canister!
- Ensure that the maximum temperature specified is not exceeded during transport and storage.
- Note the expiration date on the canister.





This AQUA / AROMA SYSTEM also includes the 'RELAX' fragrance, which is distributed via the nozzles on the cable duct.


Other fragrances are also available. Contact JK-International GmbH, Division JK-Licht for further details (see page 2).

Changing the AROMA canister


- Opening the bed base: see page 80.

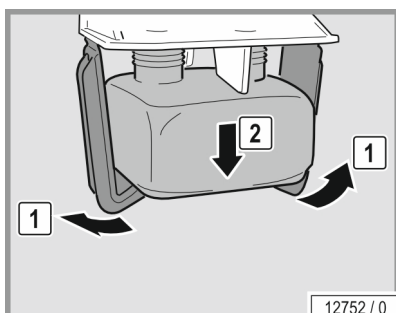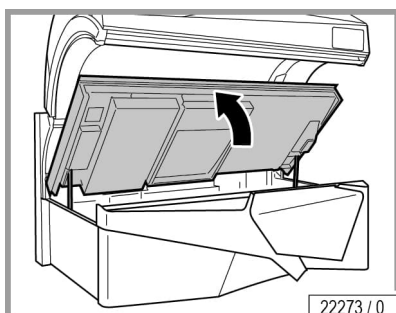

- Remove the AROMA canister.

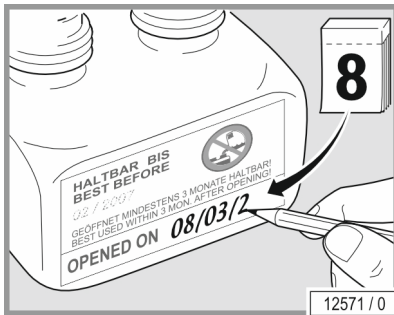



- Unscrew the lid on the new canister.
- Write the date on the canister.

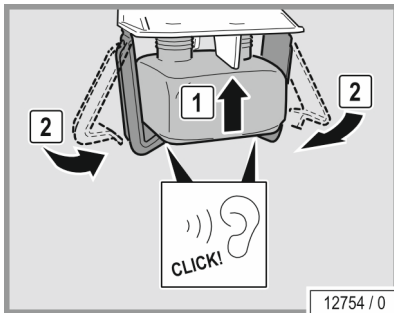


- Fit the new canister in the holder.
- Close the bed base. You should hear the bed base click into place.

Replacing the AQUA SYSTEM canister


- Opening the bed base: see page 80.

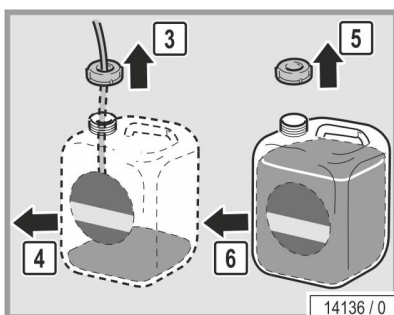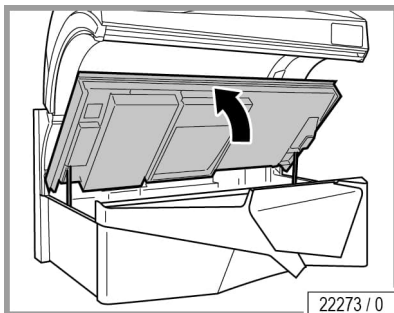

- Remove the canister.
- Unscrew the lid on the new canister.
- Remove the lid with the hose from the old canister.

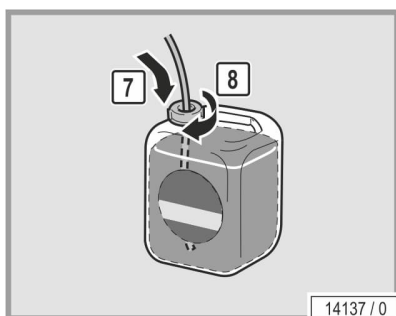

- Screw the lid with the hose onto the new canister.
- Push the hose well down so that it touches the bottom of the canister.
- Put the canister back in the device.
- Close the bed base. You should hear the bed base click into place.

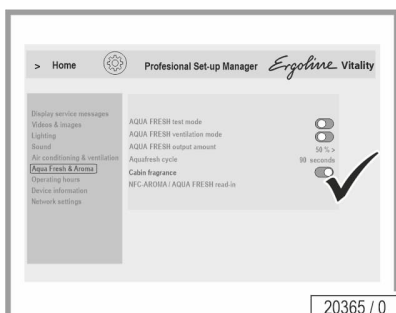


Venting



NOTE:

To ventilate, access to PROFESSIONAL SETUP MANAGER PLUS is required.

- Go to Professional Setup Manager.
- Activate the fill mode in the AQUA FRESH & AROMA menu.

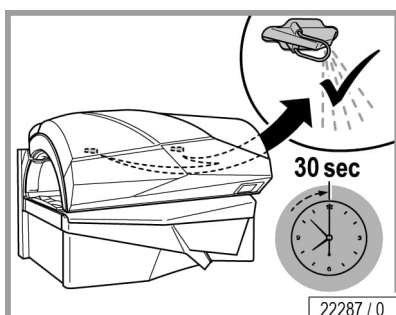


- Close the canopy.

The system will now be ventilated for 30 seconds. The AQUA SYSTEM liquid will be released from the nozzles during this period.

- Then test the AQUA SYSTEM in test mode. In test mode, the nozzles spray for 3 seconds. Repeat the ventilation process if it does not work.

12.16.18 Cleaning the air intake openings

Not applicable for this device.

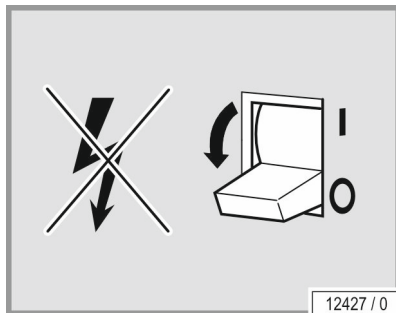

12.17 How to store the device

12.17.1 Decommissioning

The device must be disconnected from the power supply in order to temporarily or permanently decommission it.

You must abide by the legal disposal requirements when permanently decommissioning the device.

12.17.2 Storage

Store the devices in a dry location with a stable temperature. Once the device has cooled off, pack it in plastic wrapping to protect it against scratches.

CAUTION!



Inflammable refrigerant in the air conditioning system!

Leaking refrigerant can lead to fires or explosions.

- Avoid sources of ignition! Fire, naked flames and smoking are prohibited.
- Only ever store in rooms without permanent sources of ignition, e.g. naked flames, functioning gas appliances or electric heaters.

-
- Storage temperature: between 5 °F (-15 °C) and 140 °F (+60 °C)
 - Air pressure: between 794 hPa and 1060 hPa
 - Relative humidity: between 30 % and 70 %

12.17.3 Disposal

Environmental regulations – disposal of lamps and batteries



Lamps contain fluorescent materials and other waste containing mercury. Batteries contain heavy metal compounds.

Dispose of lamps and batteries according to the national waste disposal laws and in accordance with the municipal waste regulations.

Packaging

All packaging consists of 100 % recyclable materials.


Disposal of old devices

The device has been manufactured using recyclable materials.

The JK Products & Services will provide you with information on the content or potential hazards of the materials used.

Disposal of consumable supplies

Dispose of consumable supplies according to the national waste disposal laws and in accordance with the municipal waste regulations.

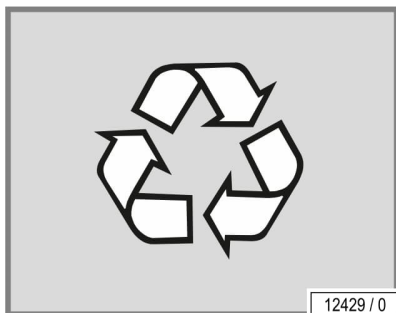

13 What to do when things go wrong



WARNING!



Follow instructions!

Failure to use protective eyewear may result in severe burns or other eye injury. If discomfort develops, discontinue use and consult a physician.

- A person who does not tan in the sun most likely will not tan from the use of this device. Persons with very sensitive skins (skin type I) must not use the unit, as with this skin type tanning is impossible without damaging the skin (e.g. sunburn).
- Individuals with acute sunburn, individuals who have had or have skin cancer, or individuals who are at increased risk of skin cancer, must not use the system.
- UV devices must not be used without taking medical advice if unexpected effects, such as itching, occur within 48 hours of the first session.
- The tanning device must never be used if the timer is defective!
- UV light from the sun or UV systems can cause injuries to the skin or eyes. This biological effect is dependent on the sensitivity of the individual's skin and on the type and amount of UV light.
- As with natural sunlight, overexposure can cause eye and skin injury, sunburn, and allergic reactions.
- Repeated exposure may cause premature aging of the skin and skin cancer.
- Medications (taken internally or otherwise) or cosmetics applied to the skin, may increase sensitivity to ultraviolet light.
- A person having a history of skin problems should consult a physician before use.

-
- Seek medical advice if in doubt!



NOTE:

Occasionally, persons using the tanning device will experience a slight reddening of the skin – usually in small patches. This redness is often accompanied by an itching sensation. This may be nothing more than a very limited heat 'rash' caused by heat from the lamps within the device. It should go away within approximately 24 hours and should not reappear. This rashing can be lessened or prevented by applying moisturizer lotion to the affected area after tanning.

- Follow instructions.
- Increasing tanning also requires an extension of the exposure time (= radiation time) or after a certain degree of tanning has been achieved, a further intensification is not possible. However, the radiation time may not be extended as desired within the scope of the permissible radiation doses! Therefore, only a certain degree of final tanning dependent on the skin type can be achieved without endangering your health.
- Inform users about proper tanning.





13.1 Troubleshooting

Software and device malfunctions are indicated by error codes, e.g. #0701.

These error codes are output to the display to simplify troubleshooting:

- If a fault occurs, the error code flashes on the display.
- If several errors occur, the error messages are displayed alternately.
- Error elimination is acknowledged by pressing the START/STOP button.
- If the error cannot be cleared, contact Customer Service (see page 2) or your local service provider

More detailed information regarding the error description and solutions is available in the document 'Error codes' #1028224-..., which you find in the Technical Documentation folder.

For authorized, trained and qualified staff:

For further technical description, please contact Customer Service (see page 2).



NOTE:

As a result of EMC phenomena (high-frequency irradiation and surge) the audio system may malfunction.

This can be rectified by switching off the power supply and switching it back on again (power on reset).

 WARNING!



WARNING!

Danger of skin injuries and skin diseases!

- The tanning device must never be used when the timer is defective!

14 Where you can find out more

If you have any questions, please contact Customer Service
(see page 2).



15 How we studied this device



The system is built to the state of the art and the applicable safety regulations.

We reserve the right to make technical changes which are necessary to improve the system or a system component even if they deviate from pictures and information in these instructions.

16 Appendix



16.1 Model-No.: JK 205 / 52-4 HLT AC: EMC information

16.1.1 Table 201: Guidelines and manufacturer's declaration – Electromagnetic emissions

The tanning system has been designed for use in the electromagnetic environment specified below. The device operator must ensure that it is used in such an environment.

Emission measurements	Conformity	Electromagnetic environment – Guidelines
HF emissions as per CISPR 11	Group 1	Model-No.: JK 205 / 52-4 HLT AC uses HF power mostly for internal functions and Bluetooth®. Therefore the HF emissions are very low and it is highly unlikely that it will cause any interference to adjacent electronic equipment.
HF emissions as per CISPR 11	Class B	Model-No.: JK 205 / 52-4 HLT AC has been designed for use in all devices, including those in residential areas, and it has been determined that it can be used for residential purposes as soon as it is connected up to a public mains supply that also supplies buildings.



16.1.2 Table 202: Guidelines and manufacturer's declaration – Electromagnetic interference

The tanning system has been designed for use in the electromagnetic environment specified below. The device operator must ensure that it is used in such an environment.

Interference immunity tests	IEC 60601 - Test level	Defined level	Electromagnetic environment – Guidelines
Discharging static electricity (ESD) IEC 61000-4-2	±8 kV contact discharge ±2 kV air discharge ±4 kV air discharge ±8 kV air discharge ±15 kV air discharge	±8 kV contact discharge ±2 kV air discharge ±4 kV air discharge ±8 kV air discharge ±15 kV air discharge	–
Fast transient electrical noise / bursts IEC 61000-4-4	±2 kV for mains supplies	±2 kV for mains supplies	–
Surges 61000-4-5	±1 kV series mode voltage ±2 kV common mode voltage	±1 kV series mode voltage ±2 kV common mode voltage	–
Magnetic field radiated by supply frequency (50/60 Hz) IEC 61000-4-8	30 A/m	30 A/m	–
Voltage drops, Short interruptions and supply voltage IEC 61000-4-11	<5% U_T (>95% drop in U_T) for 5 s Only this test is performed, because the device used 2 or 3 phases and has more than 16 A / phase.	<5% U_T (>95% drop in U_T) for 5 s	–

Note: U_T is the mains alternating voltage used for the test levels.

16.1.3 Table 204: Guidelines and manufacturer's declaration – Electromagnetic interference



The tanning system has been designed for use in the electromagnetic environment specified below. The device operator must ensure that it is used in such an environment.

Interference immunity tests	IEC 60601 - Test level	Defined level	Electromagnetic environment – Guidelines
Conducted HF noise IEC 61000-4-6	3 V rms 150 kHz to 80 MHz outside the ISM band, 6 V RMS in the ISM and amateur radio bands Modulation: 80% AM at 1kHz	3 V rms 150 kHz to 80 MHz outside the ISM band, 6 V RMS in the ISM and amateur radio bands Modulation: 80% AM at 1kHz	Portable and mobile radios are not to be used at shorter distances to the Model-No.: JK 205 / 52-4 HLT AC and its cables other than the recommended safe distance, which has been calculated according to the transmitting frequency are made. Recommended safe distance: $d = 1.2\sqrt{P}$ $d = 1.2\sqrt{P}$ 80 MHz to 800 MHz $d = 2.3\sqrt{P}$ 800 MHz to 2,7 GHz P is the transmitter's maximum output power (nominal rating) in Watts (W) according to the details provided by the manufacturer of the transmitter and the recommended safe distance is given in metres (m). The field strength of the stationary radio transmitter is for all frequencies ^b in accordance with tests that were carried out on-site ^a less than the determined level. Interference is possible in the immediate surrounding of equipment that carry the following symbols.
Radiated HF noise IEC 61000-4-3	10 V/m 80 MHz to 2,7GHz Modulation: 80% AM at 1kHz 27 V/m 385 MHz Modulation: Pulse Modulation: 18 Hz 28 V/m 450 MHz Modulation: FM + 5 Hz deviation: 1 kHz sine 9 V/m 710, 745, 780 MHz Modulation: Pulse Modulation: 217 Hz 28 V/m 810, 870, 930 MHz Modulation: Pulse Modulation: 18 Hz 28 V/m 1720, 1845 MHz Modulation: Pulse Modulation: 217 Hz 28 V/m 1970, 2450 MHz Modulation: Pulse Modulation: 217 Hz 9 V/m 5240, 5500, 5785 MHz Modulation: Pulse Modulation: 217 Hz	10 V/m 80 MHz to 2,7GHz Modulation: 80% AM at 1kHz 27 V/m 385 MHz Modulation: Pulse Modulation: 18 Hz 28 V/m 450 MHz Modulation: FM + 5 Hz deviation: 1 kHz sine 9 V/m 710, 745, 780 MHz Modulation: Pulse Modulation: 217 Hz 28 V/m 810, 870, 930 MHz Modulation: Pulse Modulation: 18 Hz 28 V/m 1720, 1845 MHz Modulation: Pulse Modulation: 217 Hz 28 V/m 1970, 2450 MHz Modulation: Pulse Modulation: 217 Hz 9 V/m 5240, 5500, 5785 MHz Modulation: Pulse Modulation: 217 Hz	

Comment 1: The higher value applies to 80 MHz und 800 MHz.

Comment 2: These guidelines might not apply to all situations. The propagation of electromagnetic waves is affected by absorption and reflexes caused by buildings, objects and people.

a The field strength of a stationary transmitter e.g. standard cell phone stations (mobile / cordless phones) and public mobile radio services, amateur stations, MW and UHF radio and TV transmitters) cannot be precisely determined for theoretical reasons. It is recommended that an onsite test should be carried out in order to determine the electromagnetic environment caused by stationary HF transmitters. If the field strength of the massage device determined at the installation site exceeds the defined HF level listed above then the device must be monitored with regard to its normal operation. If any abnormal characteristics are recorded then it will be necessary to introduce additional measures, such as reorientation or converting the device.

b The field strength must be less than 3 V/m over the frequency ranges from 150 kHz to 80 MHz.





16.1.4 Table 206: Recommended safe distances between portable and mobile HF communications equipment and Model-No.: JK 205 / 52-4 HLT AC

Model-No.: JK 205 / 52-4 HLT AC has been designed for use in an electromagnetic environment in which the radiated HF interference is controlled. The operator of the device can help to reduce electromagnetic interference by maintaining a safe distance between the portable and mobile HF communication devices (transmitters) and the device itself as recommended below with regard to the communication device's maximum output power.

Nominal transmitter power (W)	Safe distance with regard to the transmitting frequency (m)		
	150 kHz to 80 MHz $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2.7 GHz $d = 2.3\sqrt{P}$
0,01	0,12	0,12	0,23
10	3,8	3,8	7,3
1	1,2	1,2	2,3
0,1	0,38	0,38	0,73
100	12	12	23

The recommended safe distance (d) in metres (m) can be determined by using the equation that applies to the transmitters frequency in the case of transmitters where their nominal power is not listed above, whereby 'P' is the nominal transmitter power in Watts (W) according to the details supplied by the manufacturer of the transmitter.

Comment 1: The higher value applies to 80 MHz und 800 MHz.

Comment 2: The propagation of electromagnetic waves is affected by absorption and reflexes caused by buildings, objects and people.

EM-Emission inside device

5 Hz – 2 kHz	max. 2.1 µT (1.5 kV/m)
2 kHz – 400 kHz	max. 3.3 µT (1.3 kV/m)
9 kHz – 30 MHz	max. 35 dBµV/m (56 µV/m)
30 MHz – 1 GHz	max. 95 dBµV/m (56 µV/m)
1 GHz – 6 GHz	max. 90 dBµV/m (32 µV/m)

See also page 36.

Influence of electromagnetic disturbances

If the essential performance features (see 3.10.1) are influenced by electromagnetic interferences or do not exist at all, there is no risk for the user.

17 JK-Products, Inc. – Limited Warranty



JK-Products, Inc. warrants its products to be free from defects in materials and workmanship under intended normal use as described in the unit's Operation and Installation Instruction, for a period of three (3) years from date of sale.

This Limited Warranty applies only to the original purchaser of the equipment through JK-Products, Inc. or its authorized dealer or distributor, and is not transferable.

Global Service USA obligations under this warranty are limited to repair or replacement of any defective part without charge for that part to the original purchaser, with the following exceptions:

A Fluorescent lamps are warranted against defects for a period of thirty (30) days from date of sale.

B Only parts obtained through JK-Products, Inc., its authorized dealers or distributors may be used. Transportation costs for parts shipped to the consumer and the return of defective parts to Global Service USA are not included.

C Labor will be furnished without charge for ninety (90) days from date of purchase only. All labor and related charges must be authorized by Global Service USA prior to start of repairs, and must coincide with Global Service USA established rates and time allotment policy.

D Acrylic: Refer to Manufacturer's Acrylic Warranty Policy. It is imperative that the original customer completes and returns the enclosed warranty card within 10 days after purchase to insure valid registration and coverage for potential claims.

E Items considered to be wear items such as rubber foot mats, buttons, or other items which the user comes into contact with during normal operation of the device, are warranted for a period of 30 days from the date of purchase.

If the warranty card is not registered, proof of purchase from JK-Products, Inc. or its authorized dealer or distributor will be required prior to any consideration on warranty claims. This could result in service delays.

This warranty is extended to the individual or legal entity, whose name appears on the warranty registration card filed with Global Service USA, or whose name appears on the original sale document and may not be transferred to any other individual or legal entity.

This warranty does not apply to any failure of the product, or any parts of the product due to alterations, modifications, misuse, abuse, accident, improper maintenance, improper installation, acts of God or if the serial number on the product has been removed, altered or defaced. Adequate packaging must be used for returned goods to prevent freight damage.

There are no warranties which extend beyond the description on the face hereof. There is no express or implied warranty of fitness of merchantability.

The remedies provided in this limited warranty are the exclusive remedies provided to the purchaser by Global Service USA and are provided in substitution of all other remedies. Consequential and incidental damages are excluded.

No person, firm or corporation is authorized to obligate JK-Products, Inc. for any liability in connection with the sale or use of these goods.



17.1 Limited Acrylic Warranty

JK Products, Inc. warrants its acrylic sheets to be free from defects in material and workmanship, under intended normal use, for a period of one (1) year from date of sale of the tanning bed or 1,200 hours of operation whichever comes first. Due to the tanning lotions, cosmetics, disinfectant and improper cleaners used on tanning surfaces that cannot be controlled by JK Products, Inc., after the first thirty (30) days of warranty period acrylic will be subject to a prorated cost to the consumer.

JK Products, Inc. obligations do not include transportation charges on replacement acrylic.

JK Products, Inc. assumes no liability for the cost of removing defective sheets or installing replacement sheets, or for damage to persons or property.

To make a claim, contact an authorized dealer or distributor of JK-Products, Inc. or Global Service USA with the model number, the serial number, and the date of purchase of the bed in which the acrylic will be used.

There are no warranties which extend beyond the description on the face hereof. There is no express or implied warranty of fitness or merchantability.

The remedies provided in this limited warranty are the exclusive remedies provided to the purchaser by Global Service USA and are provided in substitution of all other remedies. Consequential and incidental damages are excluded.

JK Products & Services, Inc.
1823 Grant Avenue
Suite A
Jonesboro, Arkansas 72401
Phone: 800-445-0624
E-mail: support@jkamerica.com
<http://jkproducts.us/service>

17.2 Warranty Claims



17.2.1 Policy & Procedures

1. When to file a Warranty Claim:

In the event that your tanning system is not functioning properly under intended normal use as described in the unit's Operation and Instruction Manual, you may then have established cause to file a Warranty Claim.



NOTE:

Both the tanning system and legal registered owner must meet the criteria established under JK Products, Inc. Limited Warranty as described in this manual before any Warranty Claim will be considered.

2. Where to call to place a Warranty Claim:

JK-Products, Inc. is supported nationwide by an extensive dealer/distributor network through whom the majority of our units are sold. These dealers/distributors are required by contract to stock sufficient parts to meet the various warranty and nonwarranty needs of their customers.

Therefore, in order for you to properly file a Warranty Claim, you must locate the name and phone number of the dealer/distributor through whom you purchased your unit. Normally this information can be easily located either on your paid invoice or other proof of purchase documentation that you received when taking delivery of the unit.

Next, notify the dealer/distributor of the serial number, model number and date unit was purchased. This will initiate the Warranty Claim process.

Upon determination of the problem, your dealer/distributor can then supply you with the part(s) and proper instructions to return your unit to working order.

Each dealer/distributor has their own internal procedure for handling Warranty Claims and credits.



NOTE:

JK-Products, Inc., the manufacturer, does not involve itself in the direct handling of a Warranty Claim except where mitigating circumstances apply and where required by law.



NOTE:

If a part returned to Global Service USA proves to be operational and not defective, or if product code numbers on part do not correspond with individual unit date on file with Global Service USA, then a 30% restocking fee will be charged in addition to the retail purchase price of part.

Acknowledgment of the Agreement is not required for acceptance of the foregoing stipulations.

- 4.1 Intended use
- 5.1 Prohibited usage
- 6. What you must do to avoid serious harm

The proper use also includes compliance with the manufacturer's instructions, operating and maintenance conditions. This device may only be operated, maintained and repaired by persons familiar with these tasks and who are aware of the dangers involved.

Global Service USA furnishes labor without charge for a period of 90 days from date of purchase. All labor and related charges must be authorized by Global Service USA prior to start of repairs, and must coincide with Global Service USA established rates and time allotment policy.

17.2.3 Quality inspection and acceptance form

The form can be found in the separate document 'Quality inspection and acceptance form' (#1014113-..) which is provided in the Technical Documentation folder.

Quality Inspection and Acceptance Form.

Both parties must sign the form in order for it to be valid.
 Upon completion, email the signed form to JKPProducts & Services at
 Questions? (800) 643-0086 Q1F@JKAMERICA.COM

Tear here to remove page

Club/Salon Name: _____ Contact: _____

Street Address: _____

City: _____ State: _____ Zip: _____

Phone Number: _____ Install Date: _____


Service Provider: _____



HERE:

Make/Model: _____ Please indicate here if device is rebranded and labels applied. ☐

Serial Number: _____

Please indicate (by marking an X) on the applicable illustration any damage or improper fitting decor parts.

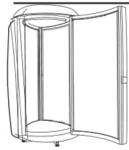

Select the box next to the appropriate subsystem indicating the system is installed and functioning properly. If the device is not equipped with a particular subsystem draw a line through it.

Lamps: ☐ Body Bench ☐ Body Canopy ☐ Facial (HP) ☐ Facial (Spaghetti)

☐ Shoulder Tanner ☐ Decor

Options: ☐ Skin Sensor ☐ Air Conditioning ☐ Aqua Fresh ☐ Aroma ☐ Audio System

Select the box next to the appropriate subsystem indicating the system has been setup and adjusted. If the device is not equipped with the subsystem draw a line through it.

☐ Lifting Mechanism ☐ Timer Network

Select the box next to the operating feature and maintenance functions that have been explained to the customer or salon representative.

☐ Basic Operation ☐ Accessing lamps ☐ Air Filter Location ☐ Feature Operation

☐ The Operating Instructions, Service Tool, and Eye Protection have been provided

☐ The device has been installed, electrically connected and fully operational.

☐ The device has been installed, but not electrically connected all systems appear to be operational.

Signing this form confirms the device was installed and tested both electrically and functionally by the Service Provider, any damage is indicated in the section to the right, and the selections above have been completed, explained, and understood by all.

Service Provider Representative

Print Name _____ Signature _____ Date _____

Salon/Club Representative _____

Print Name _____ Signature _____ Date _____

Acceptance testing:

Equipment used: _____ Serial Number: _____ Calibration Due: _____

High Voltage (Hypot) _____

Ground Bond _____

Ammeter _____

Voltmeter _____

High Voltage (Hypot) test: 1.25 kV AC / 2.5 kV DC ☐ Pass ☐ Fail

Ground Bond: Less than 0.1 Ohms ☐ Pass ☐ Fail

Amperage: Line 1 _____ Amperage: Line 2 _____ Amperage: Line 3 _____

Voltage: L1 to L2 _____ Voltage: L1 to L3 _____ Voltage: L2 to L3 _____

Comments: _____

Attach Name Plate from Manufacturer

HERE:

02/2018 1014113-03: Quality Inspection and Acceptance Report

17.3 Limited Lifetime Warranty



Global Service USA warrants specific individual components of the tanning system against defects in materials and workmanship for the life of the product. Coverage is limited to units purchased after November 1, 1994.

This warranty is restricted to the following components only:

- Steel Back Panels
- Structural Steel Frame Components
- Exterior Steel Body.



NOTE:

Components are warranted on an individual basis and not as they may affect the complete product.

Warranty coverage does not include cosmetic abnormalities such as scratches, nicks, dents, rust, oxidation of paint or other cosmetic changes that do not interfere with the designed function of the unit.

This warranty does not include failure of the product due to alteration, modifications, misuse, abuse, improper maintenance, improper installation or repair.

This warranty is not transferable and is only applicable to the original purchaser named on a completed and registered warranty record at JK-Products, Inc. headquarters.

JK Products, Inc. obligations do not include transportation charged on the shipping of new components to the customer or on the return of defective components of the manufacturer. All freight charges must be paid by the customer.

There are no warranties which extend beyond the description on the face hereof. There is no express or implied warranty of fitness or merchantability.

The remedies provided in this limited warranty are the exclusive remedies provided to the purchaser by Global Service USA and are provided in substitution of all other remedies. Consequential and incidental damages are excluded.



NOTE:

Any misuse, abuse, modification, alteration, improper maintenance, improper installation, etc. of this product or its intended use will subject said party to direct responsibility and liabilities for any and all consequences resulting from such action. Furthermore, such actions will void all warranties and may relieve Global Service USA of any liabilities relating to said product.

18 Index



A

Acrylic panel.....	78
Load	29
Air conditioning	
Filter	91
Air routing	17
Application	60
Application tips.....	65
AQUA / AROMA SYSTEM maintenance	95
AQUA SYSTEM canister	96
AROMA canister	95

B

Bluetooth®.....	61
-----------------	----

C

Cleaning	66, 70
Air conditioning	91
Filter	87, 89
Filter mats.....	90
Cleaning or replacing	
Side section	85
Cleaning or replacing lamps	
Base	85
Canopy.....	86
Cleaning/disinfection	
Cleaning intervals.....	73
Commissioning.....	20
Condensation tank	91
Customer Service	2

D

Decommissioning.....	98
Definitions.....	7
Device description	13
Dimensions	30
Disinfection.....	66, 70
Disposal	99

E

Electrical specifications.....	29
EMC information.....	105
Export	12

F

Filter

Cleaning87, 89, 90

Foreseeable misuse 39

Functions..... 48



G

Guidelines..... 12

I

Installation location 17

Intended use..... 33

L

Lamp configuration 31

Lamps

Control..... 31

Power rating..... 31

Lamps, Replacing..... 81

Low-pressure lamps 83

M

Maintenance intervals 74

Maintenance overview..... 74

N

NFC 82

Noise level..... 29

O

Obligations of the studio operator..... 39

Opening bed base 80

Operating altitude 17

Operating display of the sensor..... 60

Optical components (care) 72

Order numbers31, 32

P

Packaging..... 99

Plastic surfaces (care) 71

Power rating 29

Professional Setup Manager..... 47

Prohibited usage..... 34



R

Recycling.....	99
Removing canopy panel.....	79
Removing side section panel.....	79

S

Safety measures during maintenance work	67
Scope of delivery	12
Service kit.....	76
Setup location.....	17
Skin condition	33
Skin types.....	45
Spare parts.....	74
Order numbers.....	32
SPECTRA LED boards (care).....	72
Staff training	39
Starter.....	31
Storage.....	98

T

Tanning times.....	45
Technical data	29
Transport.....	16
Troubleshooting	102

V

Ventilation.....	17
------------------	----